DIGITAL A/V SURROUND RECEIVER

MX999/22S/37

FR994/00S/17

Service
Service
Service

Service Manual

For repair information please refer to Service Manual of FR975/00/01C/17 & MX980D/37
(service code number = 3104 215 50060)

DOLBY DIGITAL

FR994/00S & MX999/22S is equal to FR975/00 except the following:
FR994/17 & MX999/37 is equal to FR975/17C except the following:

Miscellaneous

MX999/22S		MX999/37	
9965 000 11841	FRONT SPK SILVER MX999FS	9965 000 11856	FRONT SPK BLACK MX999FS
9965 000 11842	CENTER SPK SILVER MX999CS	9965 000 11857	CENTER SPK BLACK MX999CS
9965 000 11843	REAR SPK SILVER MX999RS	9965 000 11858	REAR SPK BLACK MX999RS
9965 000 11844	KEYHOLE BRACKET, MOUNTING	9965 000 11855	KEYHOLE BRACKET, MOUNTING

3104 219 04460	REMOTE CONTROL
3104 217 06780	MDM 2000 V2 module

Electrical:

Led 6401,6421 are deleted
Led 6407,6408,6409,6410,6412,6413,6415,6416,6417,6418 red colour led
is changed into orange colour led code number : 4822 130 11589

Item 7415 changed into TMP87CS71F - MX970 code number : 3139 110 53181
Item 1301 changed into 1304 code number : 4822 265 11607
Item 2371 changed into 2317 4n7 code number : 5322 126 10223
Item 2372 changed into 2322 100p code number : 5322 122 32531
Item 2373 changed into 2328 4n7 code number : 5322 126 10223
Item 2374 changed into 2331 100p code number : 5322 122 32531
Item 2375 changed into 2335 4n7 code number : 5322 126 10223
Item 2376 changed into 2339 100p code number : 5322 122 32531

Mainstrafo 5001for FR994/00S changed into code number : 3104 218 31030
Mainstrafo 5001for FR994/17changed into code number : 3104 218 31040

Mains Outled 1053 are deleted in FR994/00S
Mains Outled 1054 are deleted in FR994/17

Copyright 2002 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by MD 0205 Service Audio Printed in the Netherlands Subject to modification 3104 215 50200

PHILIPS

Mechanical: the following items are changed into:

Item	Code number	Description
200	3104 217 53350	FRONT ASSY FR994/00S
200	3104 217 53370	FRONT ASSY FR994/17
201	3141 017 74420	CAP END LEFT FR994/00S
201	3141 014 24480	CAP END LEFT FR994/17
202	3141 017 74430	CAP END RIGHT FR994/00S
202	3141 014 24490	CAP END RIGHT FR994/17
203	3141 017 74440	BUTTONS SURR. FR994/00S
203	3141 017 74280	BUTTONS SURR. FR994/17
205	3141 017 74450	BUTTONS TUNER FR994/00S
205	3141 017 74290	BUTTONS TUNER FR994/17
206	3141 017 74460	BUTTONS MENU FR994/00S
206	3141 017 74300	BUTTONS MENU FR994/17
207	3141 017 74600	BUTTONS BASS FR994/00S
207	3141 017 74580	BUTTONS BASS FR994/17
208	3141 017 74480	BUTTONS EASY LINK FR994/00S
208	3141 017 74320	BUTTONS EASY LINK FR994/17
209	3141 017 75200	RING SURR. FR994/00S
209	3141 014 24660	RING SURR. FR994/17
210	3141 014 24200	LIGHT GUIDE VIRTUAL/HALL
211	3141 014 24210	LIGHT GUIDE SELECTOR
212	3141 014 24290	LENS IR FR994/00S
212	3141 014 24650	LENS IR FR994/17
213	3141 017 74490	RING KNOB VOLUME FR994/00S
213	3141 014 24630	RING KNOB VOLUME FR994/17
214	3141 017 74500	RING KNOB SOURCE SEL.FR994/00S
214	3141 014 24640	RING KNOB SOURCE SEL. FR994/17
215	3141 017 74350	WINDOW DISPLAY ASSY FR994/00S
215	3141 017 74900	WINDOW DISPLAY ASSY FR994/17
222	3141 017 74520	KNOB VOLUME FR994/00S
222	3141 017 74360	KNOB VOLUME FR994/17
223	3141 017 74530	KNOB SOURCE SEL. FR994/00S
223	3141 017 74370	KNOB SOURCE SEL. FR994/17
224	3141 017 74540	KNOB MENU NAV FR994/00S
224	3141 017 74380	KNOB MENU NAV FR994/17
228	3139 247 50570	LEG SILVER
230	3139 247 50560	LEG BLACK
282	4822 535 10638	POWER ROD
283	3141 017 74550	POWER CAP FR994/00S
283	3141 017 74390	POWER CAP FR994/17
287	3104 211 29730	COVER PLATE SILVER FR994/00S
287	4822 442 01817	COVER PLATE BLACK FR994/17

2-1

EXPLODED VIEW

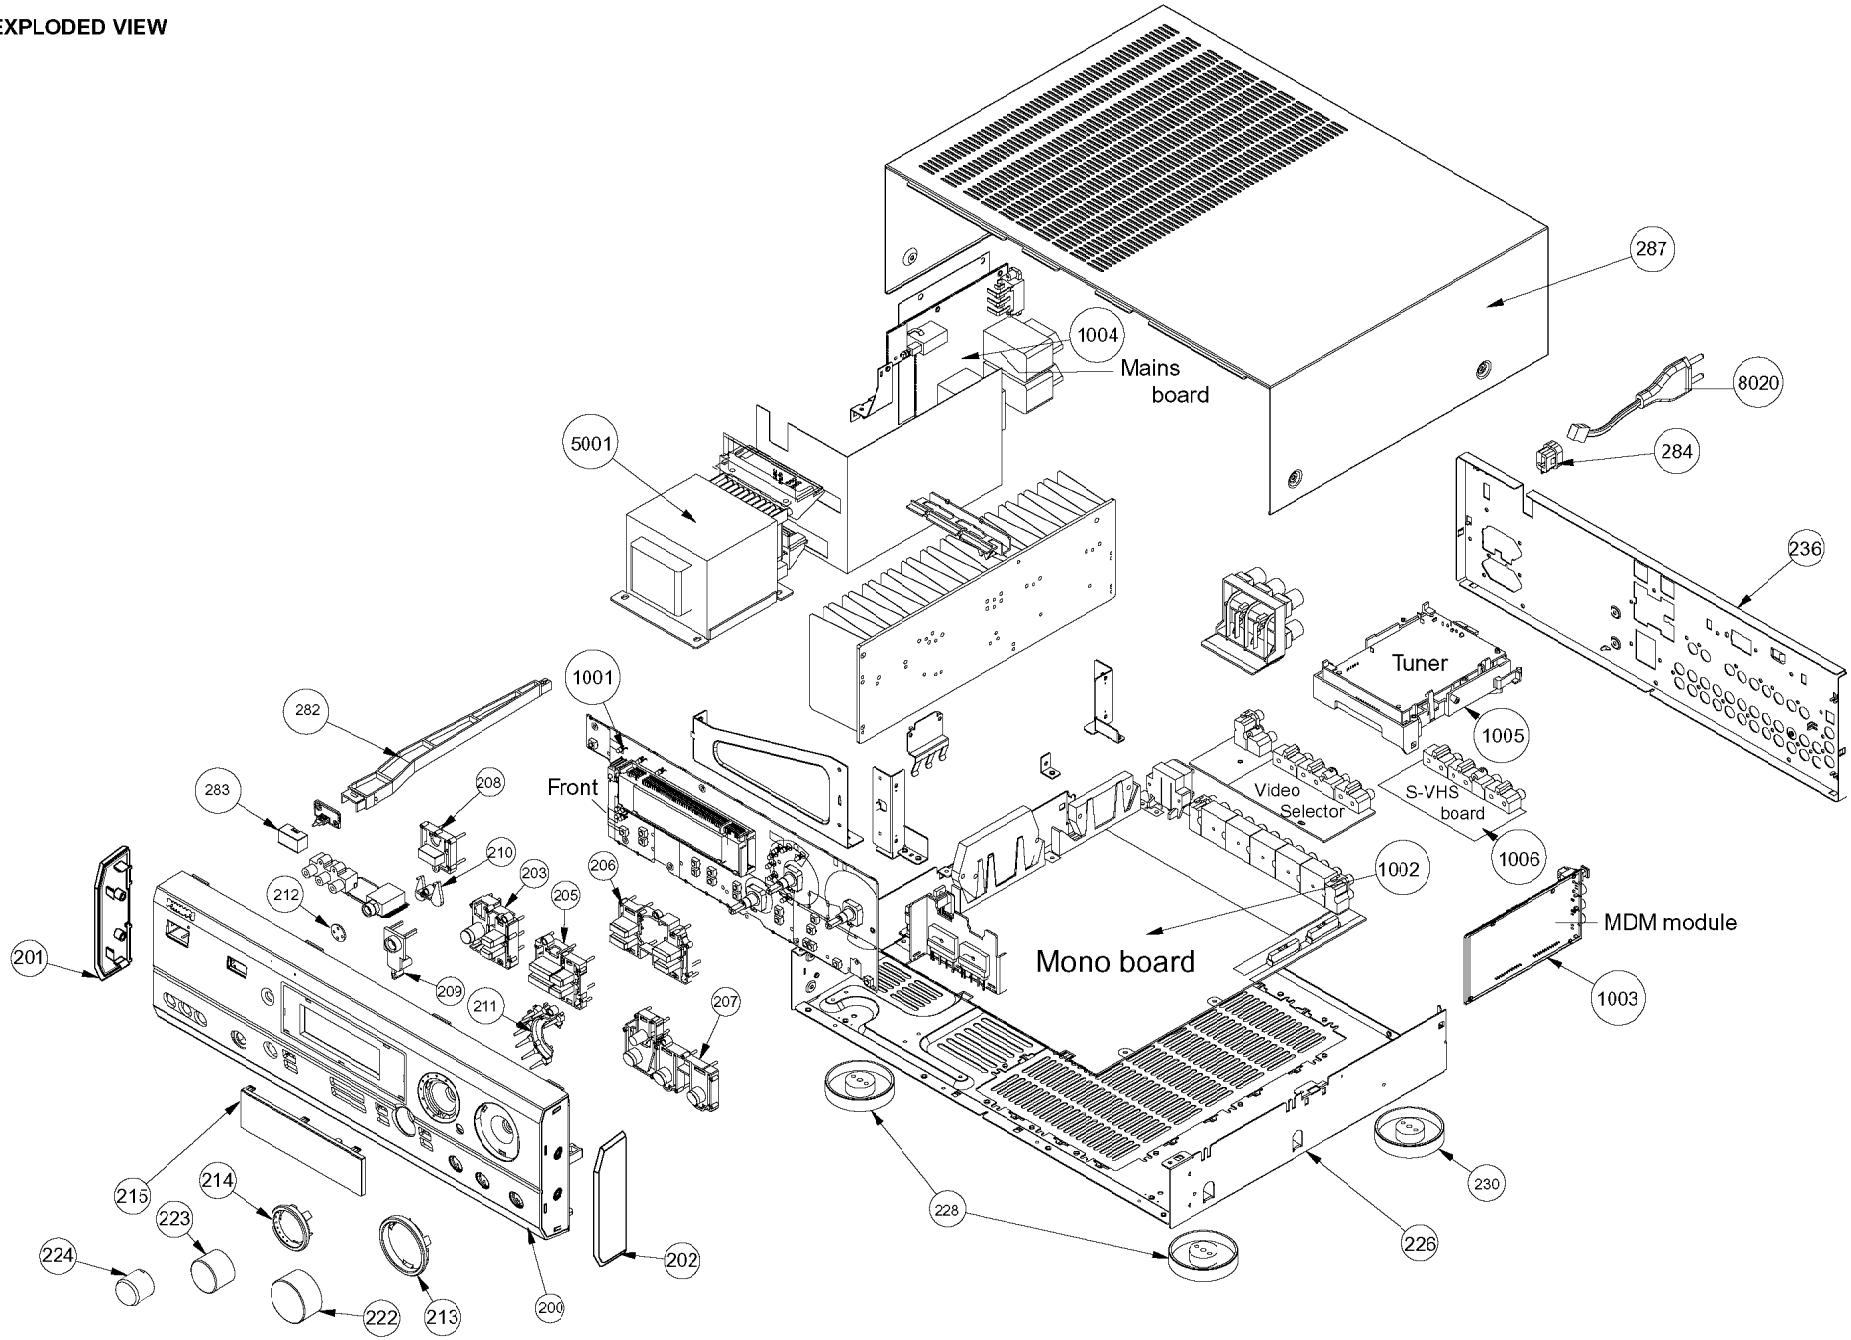

SCALE 0.250

DIGITALE A/V SURROUND RECEIVER FR975/00/01C/17

MX980D/37

Service
Service
Service

Service Manual

DOLBY DIGITAL

TABLE OF CONTENTS

	Page
Location Boards / System info	1-2
Technical Specification	1-3
Service Tool / Measurement setup / Safety	1-4
Warning / Handling Chip components	1-5
Abbreviations	1-6
Instruction for Use	2
Dismantling hints / Service positions	3-1
Dismantling hints MDM Module	3-2
Wiring diagram	3-3
Block diagram	4
Service Test program	5
Front Board	6
Tuner 95 diagram	7A
ECO 5 Tuner diagram	7B
Multi-Channel Decoding Module	8
Mains Board	9
Mono Board	10
Exploded view	11
S-VHS Board	12
Exploded view partslist	13
Partslist Mono Board	14

Safety regulations require that the set be restored to its original condition and that parts which are indentical with those specified be used.

Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by MD 0016 Service Audio Printed in the Netherlands Subject to modification 3104 215 50060

PCS 102 481

PHILIPS

LOCATION OF PRINTED CIRCUIT BOARDS

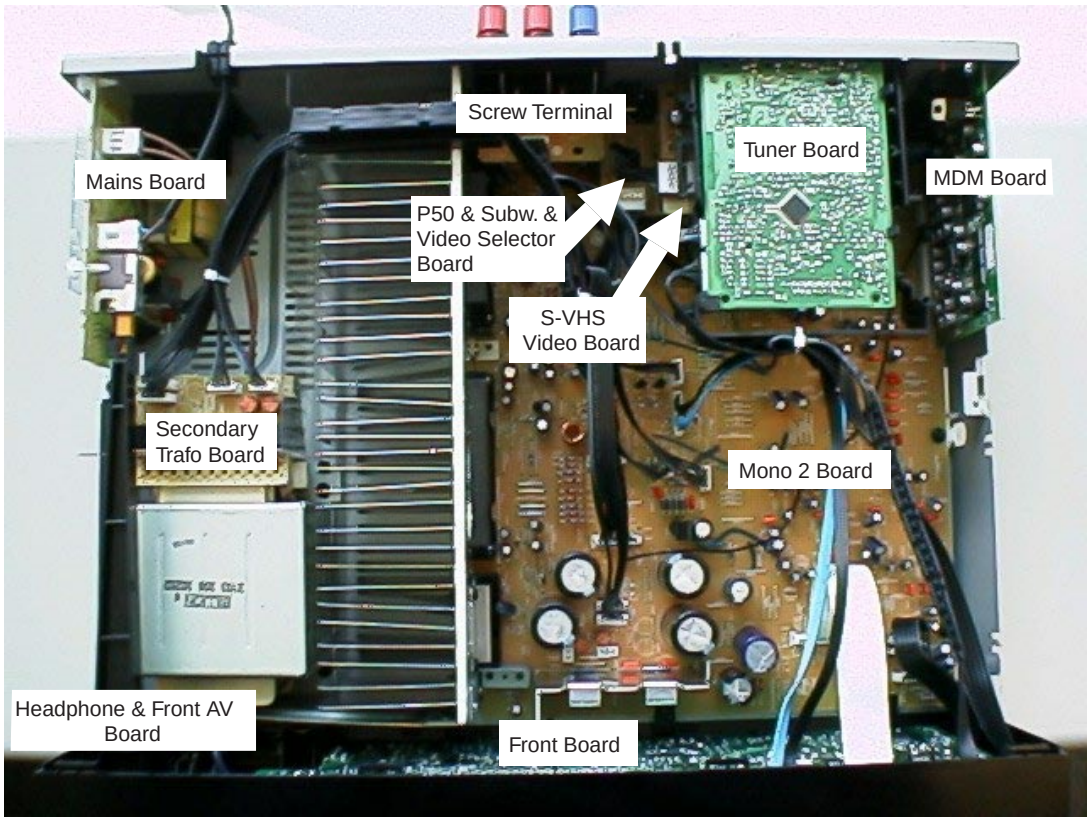

SYSTEM INFORMATION

Receiver	Front speaker	Center speaker	Surround speaker	Subwoofer
MX 980D/37 include :				
FR975/17	2 x Home Cinema Speaker 100W	Home Cinema Center Speaker 100W	2 x Home Cinema Speaker 100W	FB201V/17

VERSION VARIATIONS

Features & Board in used / Type & Versions	FR975		
	/00	/01C	/17
Front colour	Black	Champagne	Black
Tuner board - Tuner 95	x	-	-
Tuner board - ECO 5	-	x	x
RDS	x	-	-
Antenna input FM	Coaxial 75R	Coaxial 75R	Clickfit 300R
Mains cord type	IEC	IEC	UL polarized
Mains outlet type	IEC	IEC	UL polarized
Mains voltage	230V	110-127 / 220-240	120V
Voltage selector	-	x	-

SPECIFICATION FR975

General

Mains voltage	:230V for /00
	:110-127V / 220-240
	switchable only /01/01C
	: 120V for /17
Mains frequency	: 50Hz for /00
	: 50/60Hz for /01/01C
	: 60Hz for /17
Power concumption	: ≤ 2W at stby
	: ≤ 3W at stby 240V/01/01C
Dimension. wxhxd	: 435x138x350 mm
Remote control	: Multibrand/Universal

Amplifier

Output power	
Stereo mode (L+R)	: 2x100W DIN only /00/01 (1kHz,0,7%THD, 6Ω)
	: 2x80W FTC only /17 (40Hz-20kHz 0,7%THD, 6Ω)
Surround mode	
L+R	: 2x100W (1kHz,0,7%THD, 6Ω)
Center	: 100W (1kHz,0,7%THD, 6Ω)
Surround Left+Right	: 2x100W (1kHz,0,7%THD, 6Ω)
Distortion (5W)	
1kHz	: ≤ 0,05%
40Hz - 20kHz	: ≤ 0,2%
Headphone	: 6,3mm stereo jack with switch
Output level	: 3V EMF, 60Ω
Crosstalk between source —1kHz	: ≤ -65dB
(1W) 250Hz – 10kHz	: ≤ -60dB
Crosstalk between channels -1kHz	: ≤ -55dB
(1W) 250Hz – 10kHz	: ≤ -50dB
Frequency response	: ≤ 10Hz – ≥ 20kHz (-3dB) Limit
Power stage protection	: Shortcircuit
	: DC (Vout ≥ 10V) for ±1sec
Temperature	: Transformer (≥140º Celcius)
	: Heatsink (≥ 140º Celcius)

Audio Selector

Input sensitivity	
Phono	: 5mV impedance 47kΩ/220pf
CD	: 250mV impedance ≥ 47kΩ
CDR/TAPE	: 250mV impedance ≥ 47kΩ
VCR	: 250mV impedance ≥ 47kΩ
TV	: 250mV impedance ≥ 47kΩ
SAT	: 250mV impedance ≥ 47kΩ
6CH / DVD	: 250mV impedance ≥ 47kΩ
FRONT AV	: 250mV impedance ≥ 22kΩ
Output level	
CDR/TAPE	: 250mV impedance ≤ 1kΩ
VCR	: 250mV impedance ≤ 1kΩ
Output level (variable)	
Subwoofer pre-out	: 800mV impedance ≤ 1kΩ
Center pre-out	: 800mV impedance ≤ 1kΩ

Digital Selector

Input	: 2 x cinch
	: 2 x optical
Output	: 1 x cinch

Video Selector - CVBS

Input sensitivity	
DVD/VCR/TV/Front AV	: 1 Vpp impedance 75Ω
Output level	
Monitor/VCR	: 1 Vpp impedance 75Ω
Frequency response	: ≤ 50Hz → ≥ 6MHz

Video Selector - SVHS

Input sensitivity	
DVD/VCR/TV	: 1 Vpp impedance 75Ω
Output level	
Monitor/VCR	: 1 Vpp impedance 75Ω
Frequency response	: ≤ 50Hz → ≥ 6MHz

Tone controle

Loudness	
(volume ≤ -20dB Ref: 1kHz=0dB)	: 100Hz +6 dB
	: 10kHz +2,5 dB
Tone control (Ref: 1kHz=0dB)	
	: Bass 100Hz -9dB →+9dB
	: Treble 10kHz -9dB →+9dB

Multi Channel Decoder - MDM2000

MPEG5.1 / MPEG 7.1 (7.1 downmix to 5.1)
Dolby Digital (AC-3)
Digital Theater Systems (DTS)
Linear PCM (up to 96kHz, 24 bits resolution)
Automatic audio/data type detection (AC-3,dts,MPEG-2,PCM)
Dolby Pro Logic
MPEG-2 dual mono channel selection I/II
Virtual Dolby Surround (422/423)
Virtual MPEG Digital (522/523)
Virtual Dolby Digital (522/523)
Virtual DTS Surround (522/523)
Multi - Front / Multi - rear / Natural Surround
Digital Bass Management
Parallel Stereo Downmix
Four Stereo (224)
Volume Control
Noise Generator (test tone)
Surround mode selector
Delay Center and Surround Left , Surround Right

Tuner - (Tuner95 & ECO5)

RDS	: Only in /00
FM	
Tuning range	: 87.5 – 108MHz
Grid	: 50kHz
	: 100kHz only for /17
	: 50 & 100kHz for /01/01C*
IF frequency	: 10.7MHz ±25kHz
Aerial input	: 75 Ω coaxial
	: 300 Ω clickfit only for /17
Sensitivity at 26dB S/N	: ≤ 2µv
Selectivity at 300kHz	: ≥ 55dB
Image rejection	: ≥ 100dB [48dB]
Distortion at RF=1mV,dev.75kHz	: ≤ 0,8% [0,9%]
-3dB Limiting point	: ≤ 2µV
Crosstalk at RF=1mV,dev.40kHz	: ≥ 35dB [27dB]
	: ≥ 22dB only for /17
MW	
Tuning range	: 522 -1611kHz for /00
	: 531 -1602kHz for/01/01C*
	: 530 -1700kHz for/01/01C*
	: 530 -1700kHz for /17
Grid	: 9kHz for /00
	: 9 & 10kHz for /01/01C*
	: 10kHz for /17
IF frequency	: 450kHz ±1kHz
Aerial input	: Frame aerial
Sensitivity at 26dB S/N	: ≤ 1,5mV/m [3,5mV/m]
Selectivity at 9kHz	: ≥ 23dB [18dB]
IF rejection	: ≥ 50dB [64dB]
Image rejection	: ≥ 33dB [28dB]
Distortion at RF=50mV,m=80%	: ≤ 3%
LW only in /00	
Tuning range	: 153 - 279kHz
Grid	: 3kHz
IF frequency	: 450kHz ±1kHz
Aerial input	: Frame aerial
Sensitivity at 26dB S/N	: ≤ 2,8mV/m
Selectivity at 9kHz	: ≥ 26dB
	: ≥ 24dB only for /17
IF rejection	: ≥ 100dB
Image rejection	: ≥ 45dB
Distortion at RF=50mV,m=80%	: ≤ 3%dB

[…] Values indicated are for “ECO 5 Tuner” only
* Setting is software controlled

SERVICE TOOL

Audio Signals Test Disc 1 ..... 4822 397 30184

MEASUREMENT SETUP

Tuner FM

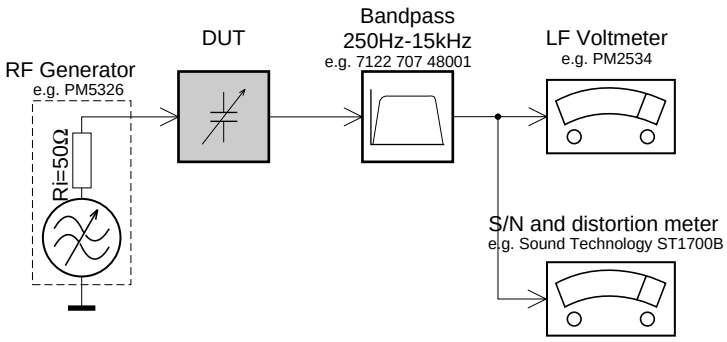

Use a bandpass filter to eliminate hum (50Hz, 100Hz) and disturbance from the pilottone (19kHz, 38kHz).

Tuner AM (MW,LW)

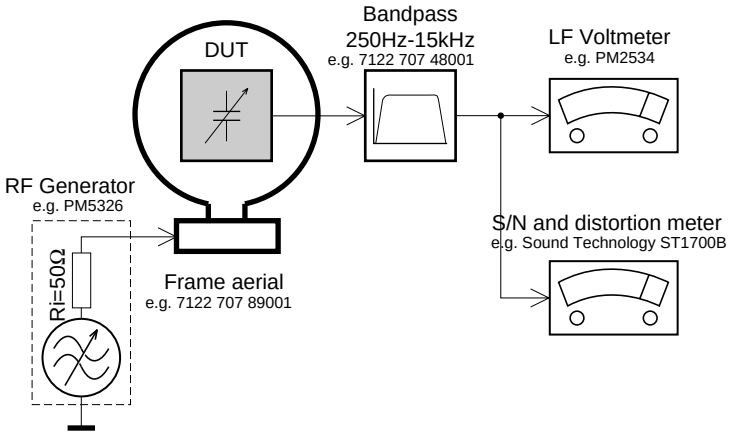

To avoid atmospheric interference all AM-measurements have to be carried out in a Faraday´s cage.
Use a bandpass filter (or at least a high pass filter with 250Hz) to eliminate hum (50Hz, 100Hz).

SAFETY

(GB)
Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.
Safety components are marked by the symbol ⚠

(F)
Les normes de sécurité exigent que l`appareil soit remis à l`état d`origine et que soient utilisées les pièces de rechange identiques à celles spécifiées.
Les composants de sécurité sont marqués ⚠

SAFETY

(D)
Bei jeder Reparatur sind die geltenden Sicherheitsvorschriften zu beachten. Der Originalzustand des Gerätes darf nicht verändert werden. Für Reparaturen sind Originalersatzteile zu verwenden.
Sicherheitsbauteile sind durch das Symbol ⚠ markiert.

(NL)
Veiligheidsbepalingen vereisen, dat het apparaat in zijn oorspronkeliijke toestand wordt teruggebracht en dat onderdelen, identiek aan de gespecificeerde, worden toegepast.
De Veiligheidsonderdelen zijn aangeduid met het symbool ⚠

(I)
Le norme di sicurezza estigono che l´apparecchio venga rimesso nelle condizioni originali e che siano utilizzati i pezzi di ricambiago identici a quelli specificati.
Componenty di sicurezza sono marcati con ⚠

WARNING

(GB) WARNING
All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically.
When repairing, make sure that you are connected with the same potential as the mass of the set via a wristband with resistance. Keep components and tools at this potential.

(F) ATTENTION
Tous les IC et beaucoup d´autres semi-conducteurs sont sensibles aux décharges statiques (ESD). Leur longévite pourrait être considérablement écourtée par le fait qu´aucune précaution nést prise à leur manipulation.
Lors de réparations, s´assurer de bien être relié au même potentiel que la masse de l´appareil et enfileer le bracelet serti d´une résistance de sécurité.
Veiller à ce que les composants ainsi que les outils que l´on utilise soient également à ce potentiel.

ESD

(D) WARNUNG
Alle ICs und viele andere Halbleiter sind empfindlich gegenüber elektrostatischen Entladungen (ESD).
Unsorgfältige Behandlung im Reparaturfall kann die Lebensdauer drastisch reduzieren.
Sorgen Sie dafür, daß sie im Reparaturfall über ein Puls-armband mit Widerstand mit dem Massepotential des Gerätes verbunden sind.
Halten Sie Bauteile und Hilfsmittel ebenfalls auf diesem Potential.

(NL) WAARSCHUWING
Alle IC´s en vele andere halfgeleiders zijn gevoelig voor electrostatische ontladingen (ESD).
Onzorgvuldig behandelen tijdens reparatie kan de levensduur drastisch doen vermindern. Zorg ervoor dat u tijdens reparatie via een polsband met weerstand verbonden bent met hetzelfde potentiaal als de massa van het apparaat.
Houd componenten en hulpmiddelen ook op ditzelfde potentiaal.

(I) AVVERTIMENTO
Tutti IC e parecchi semi-conduttori sono sensibili alle scariche statiche (ESD).
La loro longevità potrebbe essere fortemente ridatta in caso di non osservazione della più grande cauzione alla loro manipolazione. Durante le riparationi occorre quindi essere collegato allo stesso potenziale che quello della massa delápparecchio tramite un braccialetto a resistenza.
Assicurarsi che i componenti e anche gli utensili con quali si lavora siano anche a questo potenziale.

(GB) AVAILABLE ESD PROTECTION EQUIPMENT :

anti-static table mat	large 1200x650x1.25mm	4822 466 10953
	small 600x650x1.25mm	4822 466 10958
anti-static wristband		4822 395 10223
connection box (3 press stud connections, 1M)		4822 320 11307
extendible cable (2m, 2M , to connect wristband to connection box)		4822 320 11305
connecting cable (3m, 2M , to connect table mat to connection box)		4822 320 11306
earth cable (1M , to connect any product to mat or to connection box)		4822 320 11308
KIT ESD3 (combining all 6 prior products - small table mat)		4822 310 10671
wristband tester		4822 344 13999

HANDLING CHIP COMPONENTS

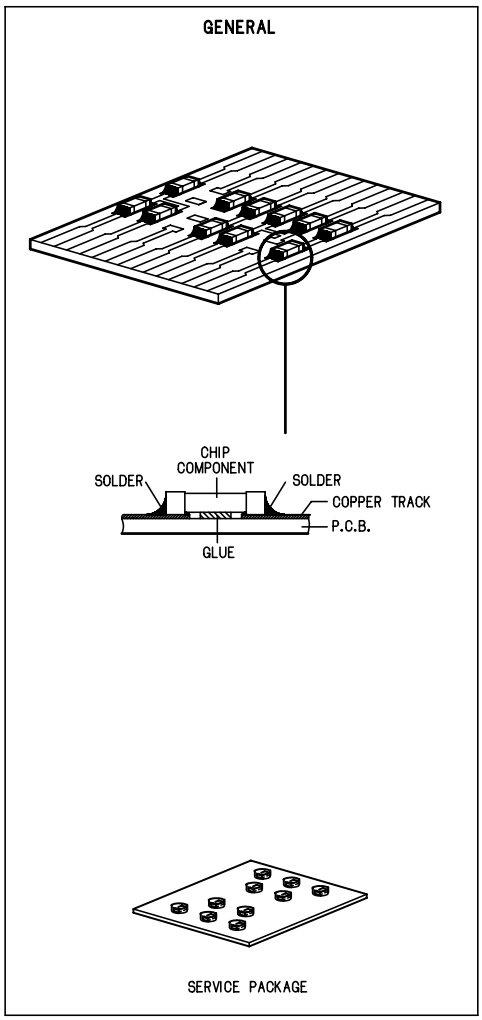

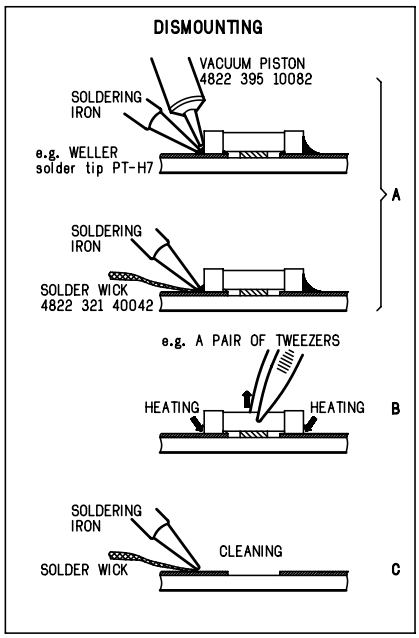

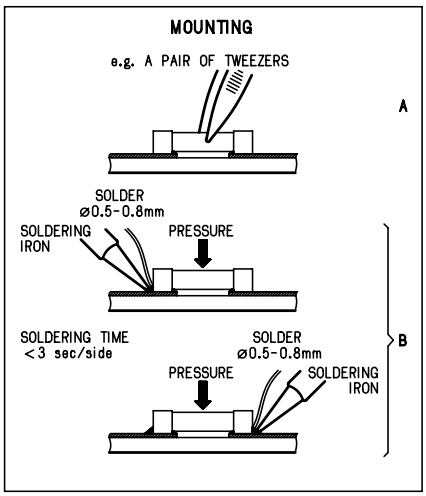

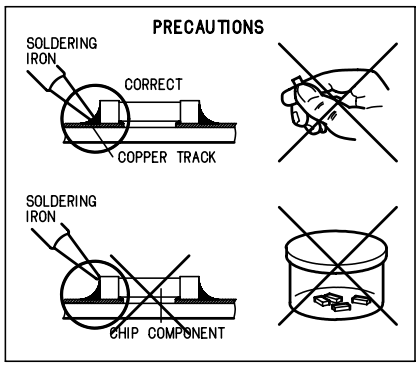

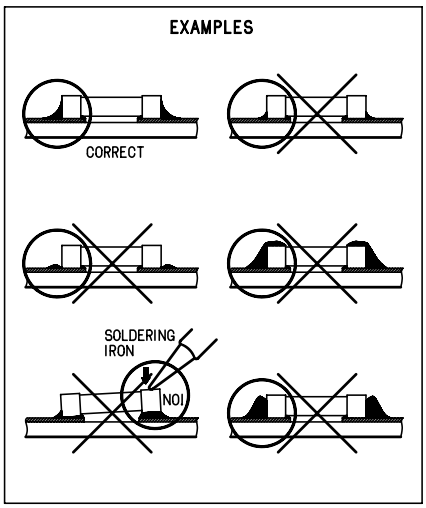

ABBREVIATIONS

A

ac 0VA	AC 0 Voltage
ac 10VB	AC 10 Voltage
ac 110VB	AC 110 Voltage
ac 120VB	AC 120 Voltage
ac gnd	AC ground
ac h1	AC high voltage 1
ac h2	AC high voltage 2
ac l1	AC low voltage 1
ac l2	AC low voltage 2
ac1	AC voltage 1
ac2	AC voltage 2
ac3	AC voltage 3
amp lr on	Amplifier Left - Right On
amp mute c s	Amplifier mute center surround
amp mute c s sub	Amplifier mute center surround subwoofer
amp mute lr	Amplifier mute Left - Right
amp pd	Amplifier power down
amp prot	Amplifier protection
amp s on	Amplifier surround On
amp stby	Amplifier Standby
av gnd	Audio ground
av l	Audio Left
av r	Audio Right
A/V	Audio/Video

F

f1	Filament 1
f2	Filament 2
fmute	Fast mute

G

gnd d	Ground digital
gnd s	Ground signal

H

hp gnd	Headphone ground
hp l	Headphone Left
hp on	Headphone On
hp r	Headphone Right
hst	Heatsink temperature

L

ls c	Loudspeaker Center
ls gnd	Loudspeaker ground
ls l	Loudspeaker Left
ls r	Loudspeaker Right

M

mdm	Multi channel Decoding Module
mdm c out	— Center out
mdm gnd	— ground
mdm l dmix	— Downmix Left
mdm l in	— Left in
mdm l out	— Left out
mdm r dmix	— Downmix Right
mdm r in	— Right in
mdm r out	— Right out
mdm req	— request
mdm rst	— reset
mdm scl	— I^2C clock
mdm sda	— I^2C data
mdm sl out	— surround Left out
mdm sr out	— surround Right out
mdm sub out	— subwoofer out
mfd	Mains failure detection

P

p gnd	P50 ground
p p50	Cinema link P50 code

S

s gnd	Surround ground
sofac scl	Sofac I^2C clock
sofac1 sda1	Sofac 1 I^2C data1
sofac2 sda2	Sofac 2 I^2C data2
ss ce	Source selector chipenable
ss clk	Source selector clock
ss data	Source selector data
surr pre-out	Surround pre-out

T

tu clk	Tuner clock
tu da	Tuner data
tu en	Tuner enable
tu gnd	Tuner ground
tu l	Tuner Left
tu r	Tuner Right
tu rds	Tuner RDS
tu stereo	Tuner stereo

V

v gnd	Video ground
v scl	Video I^2C clock
v sda	Video I^2C data
v sig	Video signal
v sub sur	Video subwoofer surround

INSTRUCTIONS FOR USE

CONTROLS

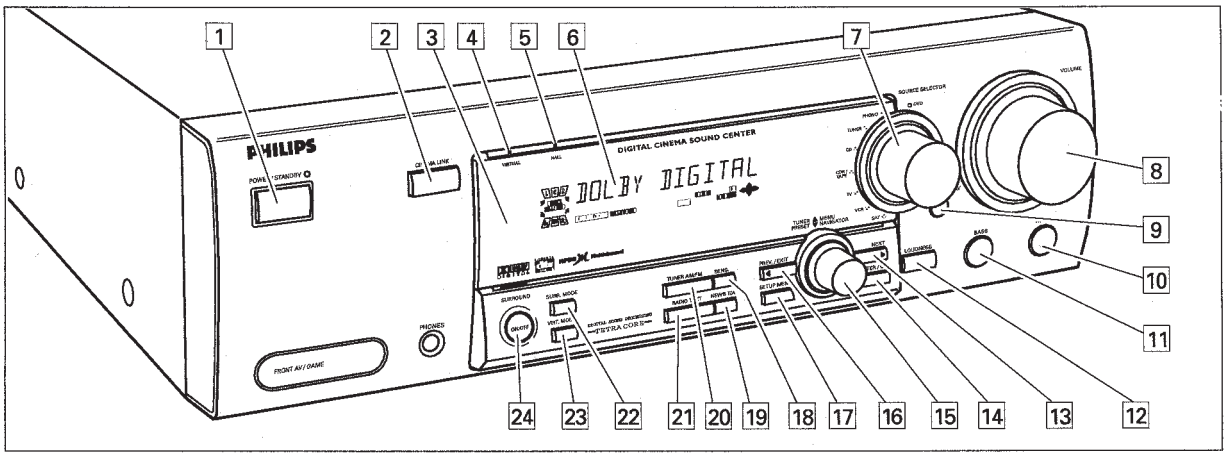

1 **POWER / STANDBY**.....Switches the receiver on and off.

2 **CINEMA LINK**.....Switches the system control bus between the receiver and the TV on and off.

3 .....Sensor for the infrared remote control.

4 **VIRTUAL**.....Control light for virtual surround.

5 **HALL**.....Control light for HALL.

6 .....Display

7 **SOURCE SELECTOR**.....Selects the different audio and video connectors.

8 **VOLUME**.....Increases and decreases the volume level.

9 **FRONT AV**.....Selects the FRONT AV / GAME input (FR 975 only).

10 **TREBLE**.....Adjusts the treble when used in combination with VOLUME.

11 **BASS**.....Adjusts the bass when used in combination with VOLUME.

12 **LOUDNESS**.....Switches LOUDNESS on and off.

13 **NEXT ▶**.....TUNER: searches radio stations. MENU: switches to the next menu level.

14 **ENTER / OK**.....Confirms selected menu values.

15 **TUNER PRESET ▲▼ MENU NAVIGATOR**
TUNER: switches to the next and previous stored radio station. MENU: moves upwards and downwards.

16 **◀ PREV. / EXIT**.....TUNER: searches radio stations. MENU: switches to the previous menu level.

17 **SETUP MENU**.....Switches the menu on and off.

18 **SENS.**.....Switches between low and high tuner sensitivity.

19 **NEWS/TA**.....Switches the RDS news and RDS traffic announcement on and off.

20 **TUNER AM/FM**.....Switches the wavebands of the tuner.

21 **RADIO TEXT**.....Scrolls through the different RDS information.

22 **SURR. MODE**.....Switches through the different speaker configurations.

23 **VIRT. MODE**.....Scrolls through the different virtual surround sound modes.

24 **SURROUND ON/OFF**.....Switches between the last selected surround mode and stereo.

INSTRUCTIONS FOR USE

REMOTE CONTROL

Remote control usage

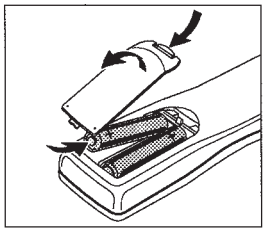

Open the battery compartment of the remote control and insert 2 alkaline batteries, type **AA** (R06, UM-3).

Remove batteries if they are flat or the remote control is not going to be used for a long time.

Batteries contain chemical substances, so they should be disposed of properly.

The buttons on the remote control work the same way as the corresponding ones on the receiver.

Important!

You have to press a source button for longer than 1 second to switch the sound source on the receiver. Pressing a source button for less than 1 second will only switch the remote control to use the commands for the selected product.

The remote control remains tuned to the selected source until another source button on the remote control is pressed. This enables you to operate additional sources (i. e. winding a tape) without changing the source on the receiver.

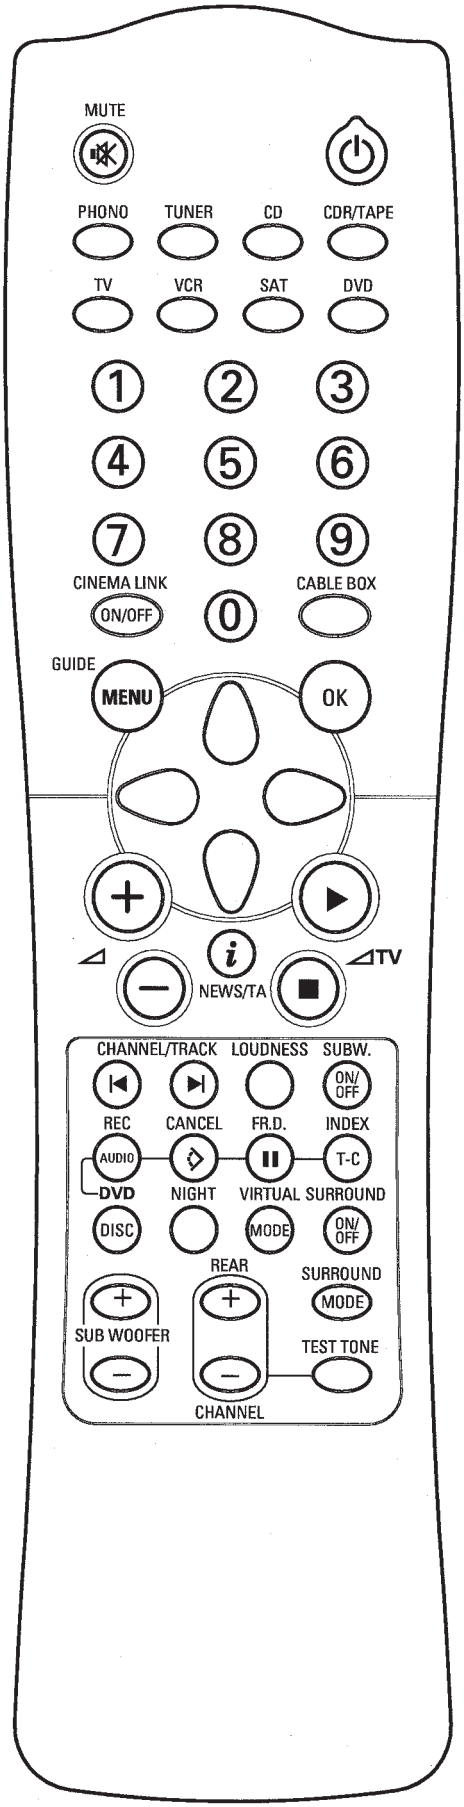

Remote control buttons

MUTE .....Mutes the sound of the receiver.

⏻ .....Switches the receiver to standby.

PHONO, TUNER, CD, CDR/TAPE, TV, VCR, SAT, DVD.....Switches the remote control to the commands of the different products. Selects the sources if pressed longer than 1 second. SAT only works with *digital* satellite receivers.

1–0.....Keys in numbers for tracks, stations or frequencies. Numbers consisting of two figures must be keyed in within 2 seconds.

CINEMA LINK ON/OFF...Switches the system connection between the receiver and the TV on and off.

CABLE BOX.....Without function.

MENU GUIDE .....**TUNER:** Switches the receiver menu on and off.
DVD, TV: Switches the DVD/TV menu on and off.

OK.....Confirms menu options.

Arrow buttons .....**TUNER:** Moves in the menus. Right/left arrows are tuning up/down.
CD, CDR: Left/right arrows are searching backwards/forwards, up/down arrows are selecting the next/previous track.

+ ◿.....Increases the receiver volume.

− ◿.....Decreases the receiver volume.

i NEWS/TA.....Switches the functions NEWS and TRAFFIC ANNOUNCEMENT on and off.
TV: Switches teletext on and off.
SAT: Switches the information text on and off.

▶ ◿**TV**.....Increases the TV volume.
CD, CDR, VCR, DVD: Starts playback.

■ ◿**TV**.....Decreases the TV volume.
CD, CDR, VCR, DVD: Stops playback.

⏮ CHANNEL/TRACK ...Selects the previous preset tuner station.
VCR: Rewinds the tape.
CD, CDR, DVD: Selects the previous track.
TV: Selects the previous channel.

⏭ CHANNEL/TRACK ...Selects the next preset tuner station.
VCR: Fast forwards the tape.
CD, CDR, DVD: Selects the next track.
TV: Selects the next channel.

LOUDNESS .....Switches LOUDNESS on and off.

SUBW. ON/OFF .....Switches the subwoofer on and off.

REC, DVD AUDIO.....**CDR, VCR:** Starts recording.
DVD: Switches audio tracks.

CANCEL, DVD ◇.....**CD, CDR, SAT, VCR:** Clears a program, cancels selections.
DVD: Switches the view angle.

FR.D., DVD ▮▮ .....**TUNER:** Switches to FREQUENCY DIRECT.
CD, CDR, VCR, DVD: Pauses playback.

INDEX, DVD T-C.....**VCR:** Switches the index search on and off.
SAT: Switches the themes on and off.
DVD: Switches between title and chapter.

DISC.....**CD-, CDR-, DVD-Changers:** Switches to the next disc.

NIGHT.....Switches NIGHT MODE on and off.

VIRTUAL MODE.....Scrolls through the different virtual surround sound modes.

SURROUND ON/OFF ....Switches SURROUND SOUND on and off.

+/− SUBWOOFER...Increases/decreases the subwoofer volume.

+/− REAR .....Increases/decreases the volume of the rear speakers. While test tone is on, the volume of the speakers you are hearing can be increased/decreased with these buttons.

SURROUND MODE.....Scrolls through the different surround modes.

TEST TONE .....Switches the test tone on and off. While test tone is on, the volume of the speakers you are hearing can be increased/decreased with +/− REAR.

Programming the universal remote control

You can identify the universal remote control by the inscription **Multibrand/Universal**.

The universal remote control must be programmed to use the codes for your appliances of different brands. This is done by keying in a 4-digit code or by scanning the codes until the correct one is found. We recommend to using the 4-digit code. This method is faster and more reliable. The code scanning method should only be used if you cannot find the code for one of your appliances. The code table can be found at the end of the booklet.

Important!

The buttons of the remote control must be used for programming, not the buttons of the receiver or other appliances.

Programming with the 4-digit code

1 Keep the source button for the appliance which should be controlled and ⏻ pressed for 3 seconds.

2 Key in the 4-digit code for the appliance (codetable at the end of the booklet).

Notes: – If more than 4 digits are entered, the remote control will recognize only the ones keyed in first.
– If you do not key in a code within 30 seconds the remote control will switch off the programming function without changing the code.
– To program a new appliance, simply overwrite the old code by entering a new one.

Scanning the codetable

1 Switch on the appliance which should be controlled.

2 Keep the source button for the appliance which should be controlled and ⏻ pressed for 3 seconds.

3 Press and release ⏻ again.
→The remote control sends the codes for channel up or standby (depending on the selected source) for one brand after the other.

4 As soon as the appliance reacts – switches to the next channel or to standby – press ⏻ to confirm the code.
→The identified code will be used.

- If the set does not react within 2 minutes, the code for this appliance is not stored in the remote control. The code of the remote control will remain unchanged.

Note: When taking out the batteries of the remote control for more than 1 minute the codes must be reprogrammed.

Once you have found and tested the codes for your various appliances, you may want to write them down here.

PHONO .....

TUNER .....

CD .....

CDR/TAPE .....

TV .....

VCR .....

SAT .....

DVD .....

Resetting the remote control

1 Keep one of the source buttons and ⏻ pressed for 3 seconds.

2 Key in the 3-digit code 981.
→The remote control is now reset to all its original Philips codes.

INSTRUCTIONS FOR USE

CONNECTORS

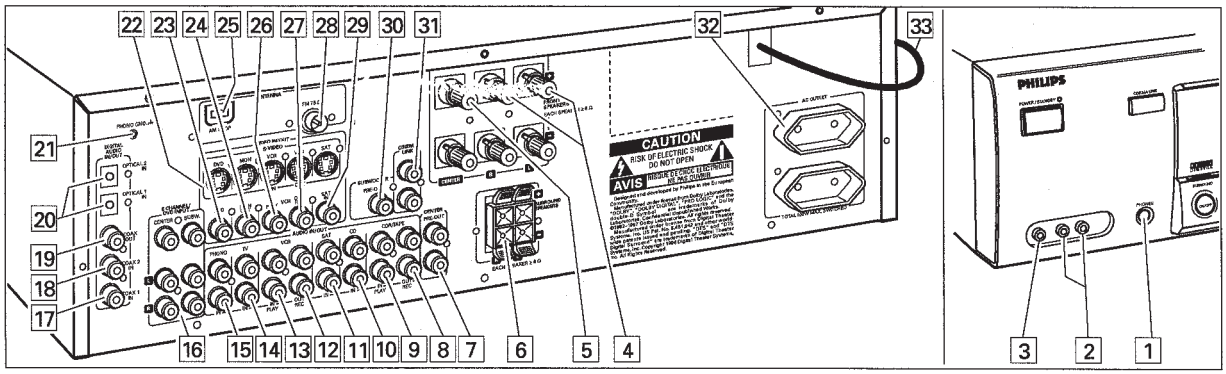

Connectors	Connectors name	Connect to:
6.3 mm headphone socket at the front	1 **PHONES**	A headphone with a 6.3 mm plug.
Audio and video inputs at the front (FR 975 only)	2 **FRONT AV / GAME**	Left and right audio out sockets of appliances such as video cameras and game consoles.
	3 **FRONT AV / GAME**	Video out sockets of appliances such as video cameras and game consoles.
FRONT SPEAKERS	4 **R, L**	Right and left front speaker.
	5 **CENTER**	Center speaker.
SURROUND SPEAKERS	6 **R, L**	Right and left surround speaker.
AUDIO IN/OUT	8 **CDR/TAPE OUT**	Input of a CD recorder or a tape deck.
	9 **CDR/TAPE IN**	Output of a CD recorder or a tape deck.
	10 **CD IN**	Output of a CD player.
	11 **SAT IN**	Output of a satellite system.
	12 **VCR OUT**	Input of a video recorder.
	13 **VCR IN**	Output of a video recorder.
	14 **TV IN**	Output of a TV.
	15 **PHONO IN**	Output of a turntable with MM coil.
	21 **PHONO GND** ⏚	Ground cable of a turntable.
6 CHANNEL / DVD INPUT	16 **6 CHANNEL / DVD INPUT**	6 channel output of appliances such as DVD or laserdisc players.
DIGITAL AUDIO IN/OUT	17 **COAX 1 IN**	Coaxial output of digital appliances (default input for source DVD).
	18 **COAX 2 IN**	Coaxial output of digital appliances.
	19 **COAX OUT**	Coaxial input of digital appliances such as CD recorders or MD recorders.
	20 **OPTICAL IN**	Optical output of digital appliances such as DVD players, CD players, CD recorders or MD players (FR 965 only).
	20 **OPTICAL 1 (2) IN**	Optical output of digital appliances such as DVD players, CD players, CD recorders or MD players (FR 975 only).
VIDEO IN/OUT	22 **S-VIDEO**	S-Video inputs/outputs of video appliances for better video quality (FR 975 only).
	23 **DVD IN**	Output of a DVD player.
	24 **MON OUT**	Input of a monitor (e. g. the TV).
	26 **VCR IN**	Output of a video recorder.
	27 **VCR OUT**	Input of a video recorder (for recording).
	29 **SAT IN**	Output of a satellite system.
Antenna connectors	25 **AM LOOP**	Frame antenna supplied.
	28 **FM 75 Ω**	Wire antenna supplied or exterior antenna.
Preamplified outputs	7 **CENTER PRE-OUT**	Input of a TV when it is used as the centre speaker (only possible when the CINEMA LINK system bus is connected).
	30 **SUBWOOFER PRE-OUT**	Input of a powered subwoofer.
System control bus	31 **CINEMA LINK**	System control bus sockets of a Philips TV with CINEMA LINK.
Mains outlets (not on all versions)	32 **AC OUTLET**	Supplies same voltage as mains. Up to 100 W total permitted load.
Mains lead	33	***After all other connections have been made***, connect the mains lead to the wall socket.

Analogue audio connections

There are analogue and digital connectors available on some appliances. If possible use the digital connection; usually this will result in better sound quality. See "Reassigning a source selection" on how to use the digital connectors of the receiver.

Because of a different kind of output signal, the use of Dolby Digital Laserdisc requires an optional AC-3 RF demodulator.

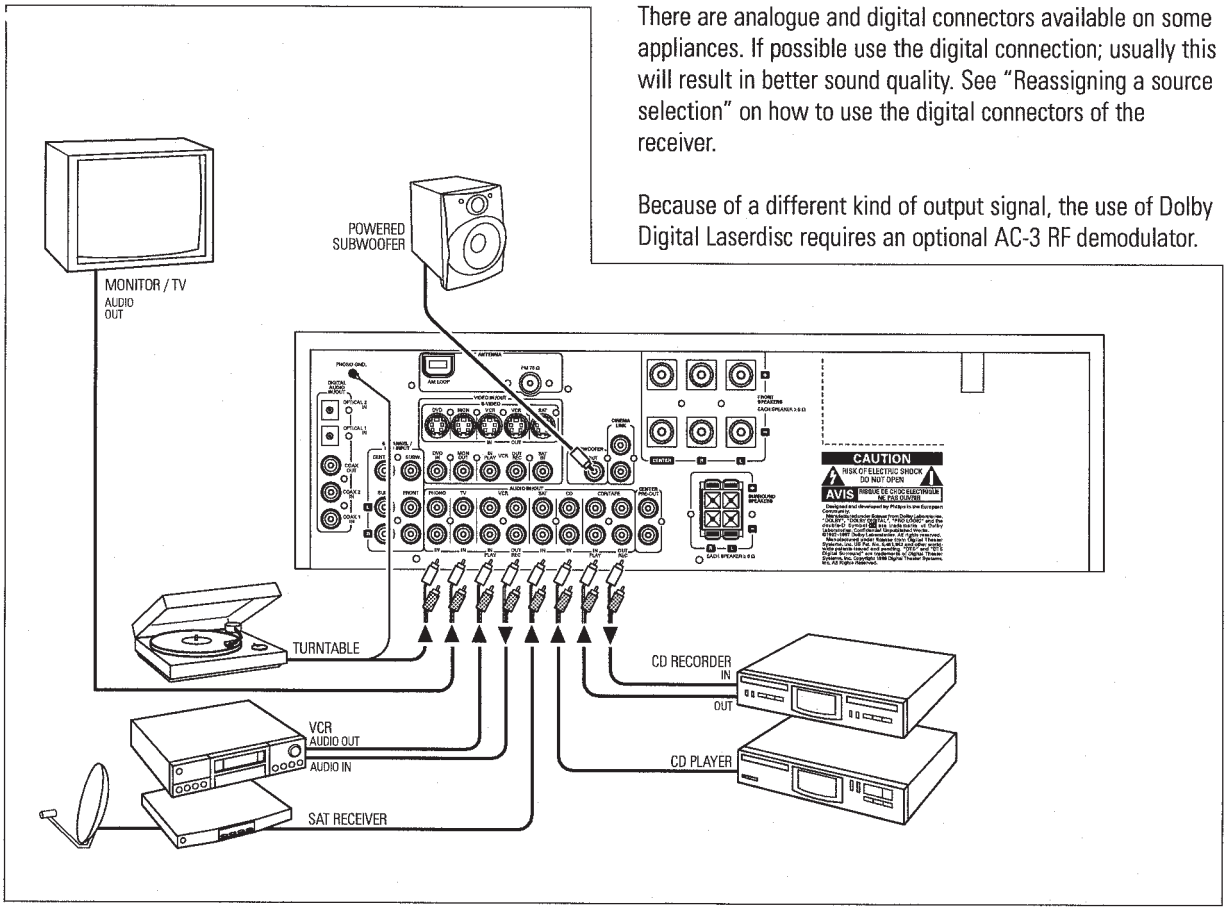

Digital audio connections

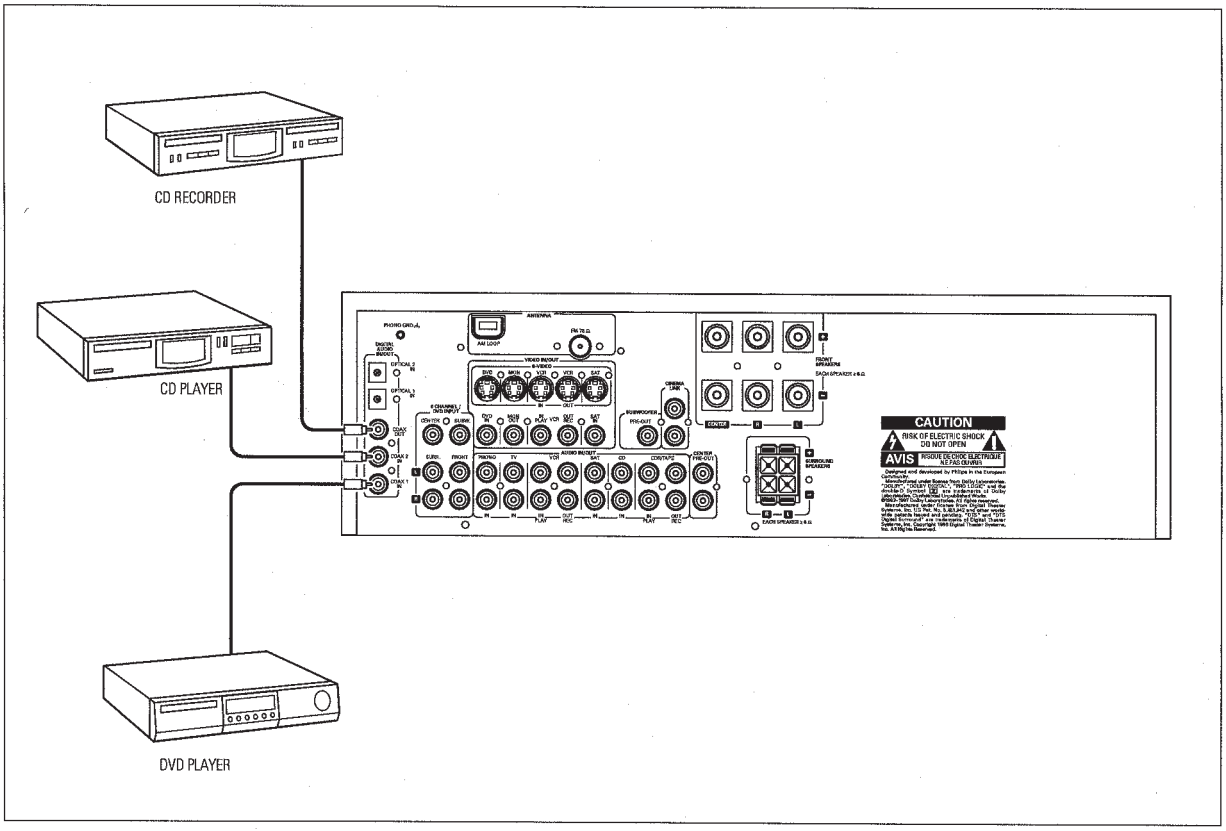

System control bus, CINEMA LINK

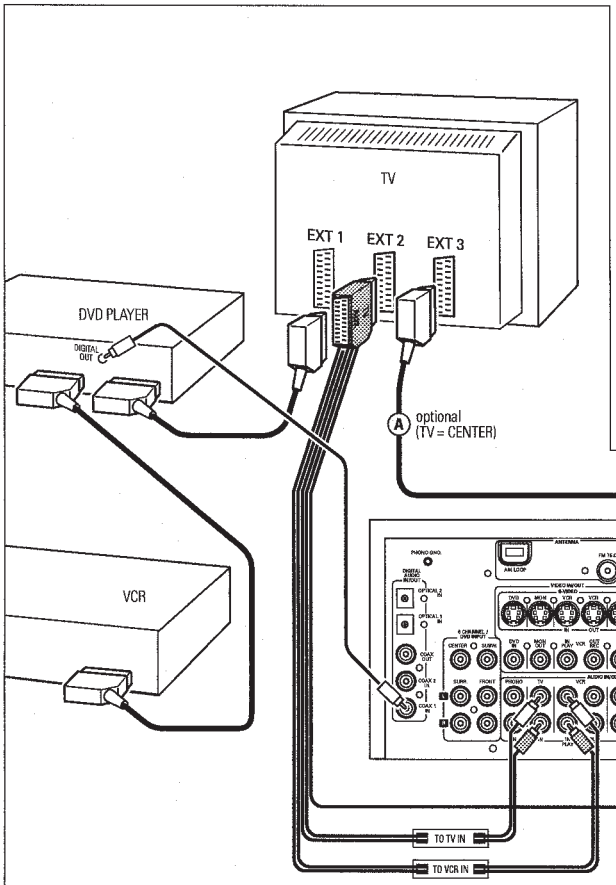

If the receiver and your Philips TV (or even better in addition a Philips VCR or DVD player) with Cinemalink are connected with the CINEMA LINK system bus control, some extra system benefits are offered:

– Upon starting a source, the system will automatically switch to that input.
– You may control the system via the TV screen. Depending on the language of the TV, this can be done in your preferred language.
– The TV can function as the center speaker of your system, making a separate center speaker unnecessary. (The cable Ⓐ has to be purchased separately.)
– By pressing the standby button on the remote control, you can switch the complete system to standby.

Video connections

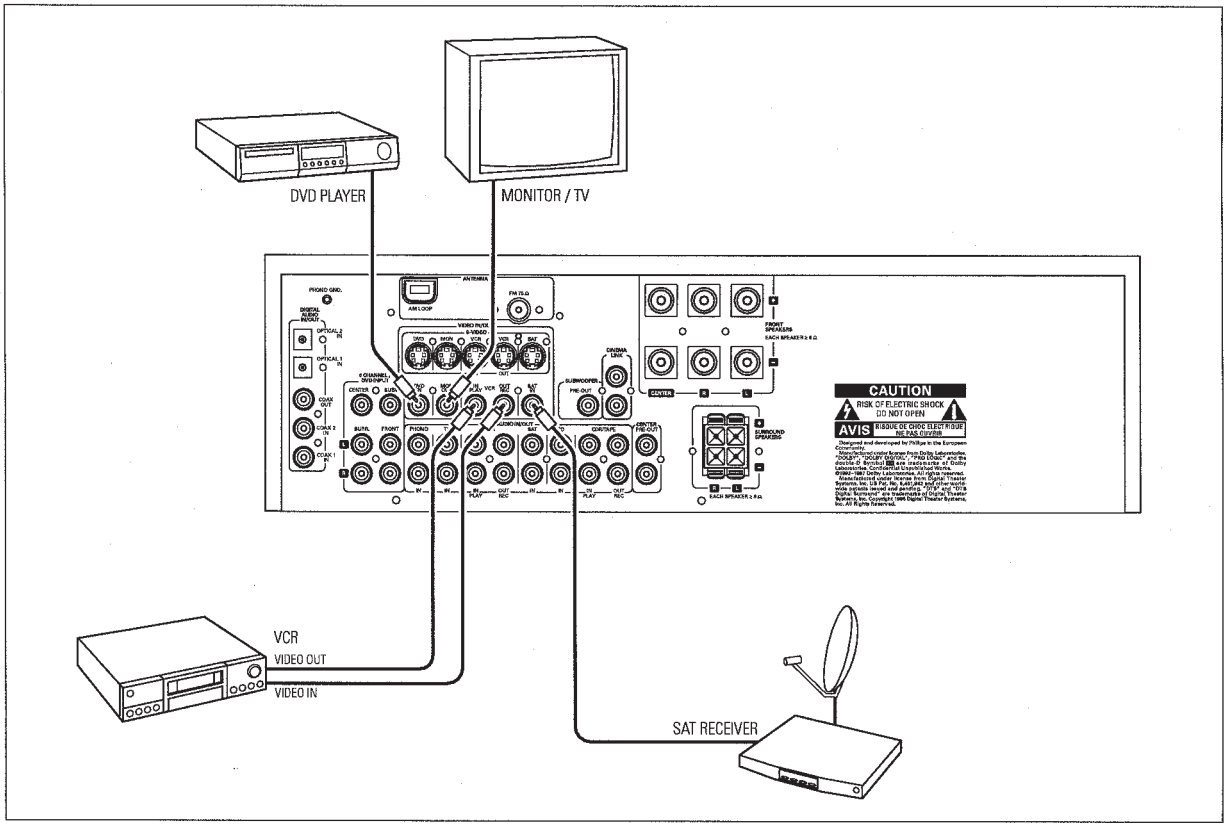

Mains

The type plate is located on the rear of the receiver.

1 Check whether the mains voltage as shown on the type plate corresponds to your local mains voltage. If it does not, consult your dealer or service organization.

2 Connect the mains cable to the wall socket.

To disconnect the set from the mains completely, remove the mains plug from the wall socket.

For users in the U. K.: please follow the instructions on page 2.

Speaker connections

Some of the speaker connections on the receiver are screw connectors and some are click-fit connectors. Use them as shown below.

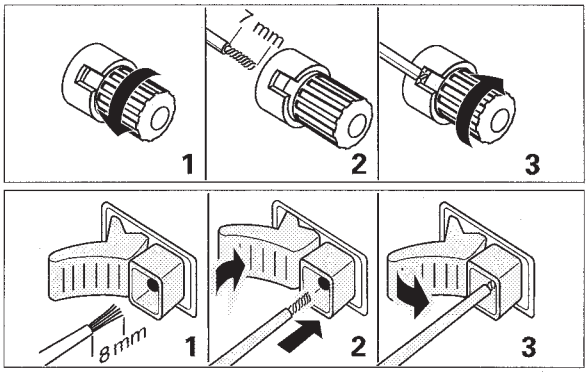

1 Always connect the coloured (or marked) wire to the coloured terminal and the black (or unmarked) wire to the black terminal.

2 Connect:
- Left front speaker to L (red and black)
- Right front speaker to R (red and black)
- Center speaker to CENTER (blue and black)
- Left surround speaker to SURROUND L (grey and black)
- Right surround speaker to SURROUND R (grey and black)

TV as the center speaker

You may use your Philips TV with CINEMA LINK as the center speaker. For TVs with a scart connector an additional audio cinch-to-scart cable is needed. For TV's with cinch connectors additional cinch cables are needed. These cables must be connected to the blue CENTER PRE-OUT connector on the back. Look into the instruction manual of your TV on how to use it as the center speaker.

Antenna connections

AM (MW) antenna

The loop antenna supplied is for indoor use only. Position the antenna as far away as possible from the receiver, the TV, the cables, a DVD player, a VCR and other radiation sources.

1 Fit the plug of the frame antenna to AM LOOP as shown below.

2 Turn the antenna for optimum reception.

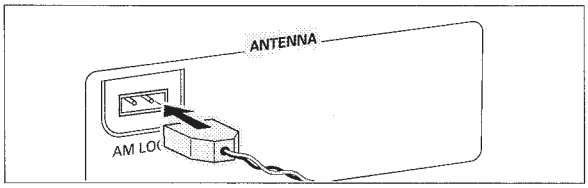

FM antenna

The wire antenna supplied can only be used to receive nearby stations. For better reception we recommend using a cable antenna system or an outdoor antenna.

1 Fit the supplied wire antenna to FM 75 Ω as shown below.

2 Move the antenna in different positions for optimum reception.

- If you are using a cable antenna system or an outdoor antenna, fit the antenna plug to FM 75 Ω instead of the wire antenna.

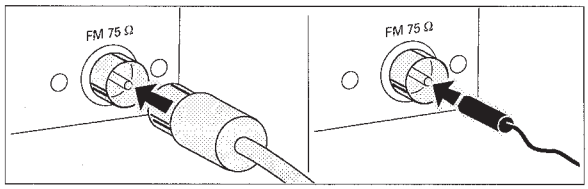

FRONT AV / GAME cap (FR 975 only)

- To remove the FRONT AV / GAME cap, press on the right side of the cap.

- Insert the cap from below to close the compartment.

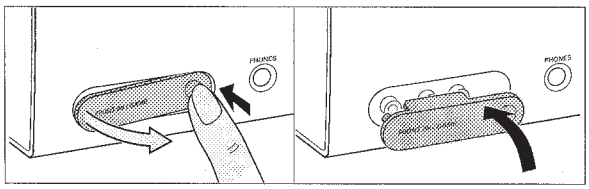

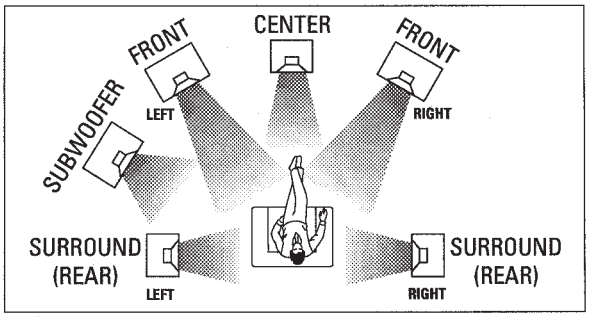

Positioning of the speakers

General hints for positioning

Avoid positioning the speakers in a corner or on the floor as this will boost the bass tones too much. Placing the speakers behind curtains, furniture, etc. will reduce the treble response. The listener should always be able to "see" the speakers.

Each room has different acoustic characteristics and the positioning possibilities are often limited. You can find the best position for your speakers by referring to the picture above.

As a minimum we recommend 5 speakers (2 front, a center, 2 surround) for good surround sound. It is possible to reproduce some kind of surround sound with fewer speakers. This is done by redirecting the signals which are foreseen for the missing speakers to the existing ones. See "Menus" on how to set up the receiver correctly for the number and size of the speakers used.

Positioning the front speakers

The front speakers should be placed right and left in front of the listening position like usual stereo speakers.

Positioning the center speaker

The center speaker should be placed in the center between the two front speakers, e. g. underneath or on top of the TV. The best height for the center speaker is the height of the listener's ears (while seated).

Positioning the surround speakers

The surround speakers should face each other and be in line with, or slightly behind the listener.

Positioning the subwoofer

A subwoofer can be used to enhance the bass performance of your system dramatically. The subwoofer can be positioned anywhere in the room, because it is not possible to locate the source of deep tones. Nevertheless, you should not place the subwoofer in the middle of a room, since the bass could be severely weakened. Do not place any object on the subwoofer.

Speaker setup and testing

The relative volume of the speakers must be adjusted for optimal surround sound. You should be at your usual listening position when adjusting the speaker volume. See "Receiver menus" on how to set up the receiver for the used speakers. Ideally, the volume in the listening position should be the same from all speakers.

1 Press POWER / STANDBY to switch on the receiver.

2 Press TEST TONE on the remote control.
→ A test tone coming from the different speakers, except the subwoofer, is heard.

3 Press + / — REAR on the remote control to increase/decrease the volume of the actual speaker. The best result is achieved when all speakers have equal volume in the listening position.

4 Press TEST TONE on the remote control.
→ The test tone stops.

Note: If you are not completely satisfied with the volume settings, we recommend making minor adjustments to them during surround sound playback.

Power handling

If the receiver is used at very high power it can produce distortions which may seriously damage your speakers. If distortions occur, reduce the volume and the tone controls to a level where the sound is acceptable again.

To avoid overheating of the set a safety circuit has been built in. Therefore your set may disconnect under extreme conditions. If this happens, switch the set off and let it cool down before reusing it.

Headphones

Connecting headphones to PHONES will switch off the speakers. The receiver switches to STEREO and surround sound will be reduced to a stereo signal which is reproducible by standard headphones.

Disconnecting the headphones switches on the speakers again. If you wish to enjoy surround sound again, switch the receiver back to surround sound.

Maintenance

Clean the receiver with a soft, slightly dampened, lint-free cloth. Do not use any cleaning agents as they may have a corrosive effect.

Do not expose the receiver to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight).

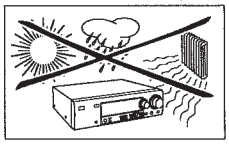

Display

The display of the receiver is divided into 4 sections, which are to be used for the following:

Speaker diagram



A rectangle with a letter in it shows that a speaker has been selected in the setup menu. However, the subwoofer indicator will only light when a subwoofer signal is available. If only a letter is shown, this speaker is not used and its sound is reproduced by the other speakers.

..... virtual surround sound
SURROUND.....surround sound is reproduced
DIGITAL SURROUND ....digital surround sound is reproduced
L, R .....front left and right speaker
C.....center speaker
SL, SR .....surround speakers
SW.....subwoofer

Menu indication



These signs show you if the menu is on or off and indicate in which direction you may move.

MENU .....menu is on
◀.....You may move backwards to the previous menu topic using ◀ PREV. / EXIT ("left" key on the remote control).
▲ .....You may move up in an option list using ▲▼ MENU NAVIGATOR ("up" key on the remote control).
▼ .....You may move down in an option list using ▲▼ MENU NAVIGATOR ("down" key on the remote control).
▶.....You may move forward to the next menu topic using NEXT ▶ ("right" key on the remote control).
OK.....You may confirm the displayed value.

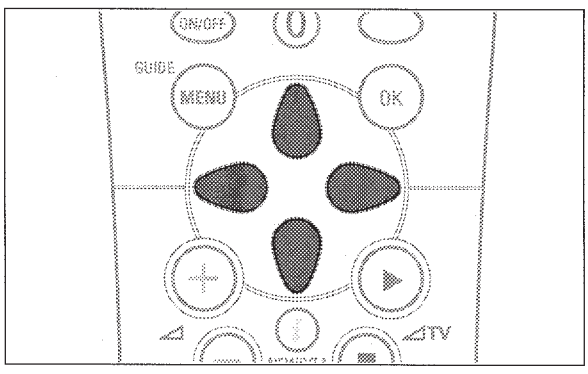

Status lights

Signs showing you various settings and information about the status of the receiver.

PRESET.....Tuner is tuned to a preset radio station.
SENS HI.....Tuner is switched to high sensitivity.
SENS LO.....Tuner is switched to low sensitivity.
CINEMA LINK ON .....CINEMA LINK is active
STEREO.....An FM station is being received in stereo.
RDS.....An RDS station is being received.
EON.....An RDS station with EON is being received.
HALL.....HALL effect is on.
TA.....RDS traffic announcement is on
NEWS.....RDS news announcement is on
ANA .....Analogue input is being used for the playing source.
NIGHT.....NIGHT MODE is on.
COAX 1.....Coaxial digital input COAX 1 is being used for the playing source.
COAX 2.....Coaxial digital input COAX 2 is being used for the playing source.
DOWNMIX.....Incoming multi channel signals are being reduced to fewer output signals (depending on the number of speakers).
OPT.....Optical digital input OPTICAL IN is being used for the playing source (FR 965 only).
OPT 1 .....Optical digital input OPTICAL 1 IN is being used for the playing source (FR 975 only).
OPT 2 .....Optical digital input OPTICAL 2 IN is being used for the playing source (FR 975 only).
LOUDNESS .....LOUDNESS is switched on.

Information area



This area is used for feedback of the receiver, tuner frequencies, menu options, values and scrolling text messages.

Receiver menu

The receiver is equipped with a menu system. The menu is used for the setup of the receiver. The different menu options are related to each other in a logical way. Let's assume you have no center speaker connected, and therefore switched CENTER SPEAKR to NO. If you try to use VOL CENTER, a message will be scrolled that this is not possible (INSTALL CENTER SPEAKER).

The menu always works the same way. Arrows in the display show you the possible moving directions.

1 Press SETUP MENU.
→**MENU**, and * EFFECTS is displayed.

- **You can exit the menu at any time by pressing SETUP MENU.**

2 Turn ▲▼ MENU NAVIGATOR until the desired option (or a value) is displayed.

3 Press NEXT ▶ to choose the displayed option (or ENTER / OK to confirm a value).

- You can leave any option (values remain unchanged) by pressing ◀ PREV. / EXIT.

Menu structure

* EFFECTS
  Switches sound effects.
  - VIRT SURR
    virtual surround: 0…100 %

* VOL BALANCE
  Adjusts the relative volume balance between the connected speakers.
  - TEST TONE
    Test tone: on/off
  - VOL FRONT-L
    Volume front left speaker: –50…+50
  - VOL FRONT-R
    Volume front right speaker: –50…+50
  - VOL CENTER
    Volume center speaker: –50…+50
  - VOL REAR-L
    Volume rear left speaker: –50…+50
  - VOL REAR-R
    Volume rear right speaker: –50…+50
  - VOL SUBWOOFER
    Volume subwoofer: –50…+50

Note: When using the 6 CHANNEL / DVD INPUT *the values below cannot be changed.*

* SPEAKR SETUP
  Selects the used speakers.
  - SUBW PRESENT
    Subwoofer present: yes/no
  - CENTER SPEAKR
    Center speaker present: yes/no
  - REAR SPEAKER
    Rear speakers present: yes/no

* SPEAKR SIZES
  Chooses the speaker sizes of the used speakers, for optimal sound reproduction. LARGE indicates a speaker which can reproduce frequencies lower than 50 Hz. If SUBW PRESENT is set to NO, FRONT SIZE can only be set to LARGE. If FRONT SIZE is set to SMALL, CENTER SIZE can only be set to SMALL and consequently a subwoofer must be connected.
  - FRONT SIZE
    Left and right front speakers: small/large
  - CENTER SIZE
    Center speaker: small/large
  - REAR SIZE
    Rear speakers: small/large

* SPK DISTANCE
  Distance between the usual listening position and the speakers. This defines the delay time for the surround sound.
  - DISTANCE L/R
    Distance to front speakers: 1…10 m
  - DISTANCE CNTR
    Distance to center speaker: 1…10 m
  - DISTANCE REAR
    Distance to rear speakers: 1…10 m

* SELECT INPUT
  Assigns the audio input connectors to the different source selections chosen with SOURCE SELECTOR (see "SOURCE SELECTION" for details).
  - COAX 1
    Digital coaxial input 1, COAX 1 IN
  - COAX2
    Digital coaxial input 2, COAX 2 IN
  - OPT (FR 965 only)
    Digital optical input, OPTICAL IN
  - OPT 1 (FR 975 only)
    Digital optical input, OPTICAL 1 IN
  - OPT 2 (FR 975 only)
    Digital optical input, OPTICAL 2 IN
  - SAT IN
    Analogue audio input SAT IN
  - VCR IN
    Analogue audio input VCR IN
  - TV IN
    Analogue audio input TV IN
  - CDR IN
    Analogue audio input CDR IN
  - CD IN
    Analogue audio input CD IN
  - 6 CH IN
    Analogue audio input 6 CHANNEL / DVD INPUT

* TUNER
  Setup for preset radio stations (see "TUNER" for details).
  - AUTO INSTALL
    Stores radio stations automatically
  - MAN INSTALL
    Stores radio stations manually
  - GIVE NAME
    Allows to assign names to stored radio stations
  - RESHUFFLE
    Resorts stored radio stations

TV menu

If the receiver is connected to a Philips CINEMA LINK TV via the CINEMA LINK system control bus sockets (see "CONNECTIONS"), you may use the TV to set up the system. An option called RECEIVER will be added to the TV menu.

If CINEMA LINK is on, adjustments on the receiver will be shown on the TV screen for a few seconds. Consult the instruction booklet of your TV on how to use the TV menu. The options offered may vary by TV model.

Switching the connection

- Press CINEMA LINK to switch the connection between the receiver and the TV either on or off.
  ➞ If the connection is switched on, **CINEMA LINK ON** is displayed.

Note: We recommend switching CINEMA LINK *off during recording. This avoids unwanted interruptions due to switching TV functions.*

If CINEMA LINK is switched on and the TV menu is active, TV MENU is displayed and the menu and sound functions on the receiver are locked.

SOURCE SELECTOR

When selecting a source by turning SOURCE SELECTOR, the audio and video inputs with the corresponding name are activated. The incoming signal is reproduced by all audio and – if the source includes a video signal – video outputs of the receiver. It is possible to reassign a source selection to other than these standard inputs.

Source selected.....Connectors used

DVD.....COAX 1 digital audio input and DVD IN video input

PHONO.....PHONO IN audio input

TUNER.....The tuner part of the receiver is used, all inputs are switched off.

CD.....CD IN audio input

CDR/TAPE.....CDR/TAPE IN audio input

TV.....TV IN audio input and no video input

VCR.....VCR IN audio input and VCR IN video input

SAT.....SAT IN audio input and SAT IN video input

6 CHANNEL / DVD INPUT selection

The 6 CHANNEL / DVD INPUT connectors can be assigned to any of the available sources (excluding TUNER and PHONO). The assignment can be done via the * SELECT INPUT option in the menu. See below for more details.

Reassigning a source selection

If a source is selected with SOURCE SELECTOR the standard audio input is used. To change this, the source selection must be reassigned to another audio input.

Example: Reassigning CD from the analogue CD IN audio input to the digital COAX 2 IN audio input.

1 Choose * SELECT INPUT from the menu and press NEXT ▶.

2 Turn SOURCE SELECTOR to select the source which should be reassigned (e. g. CD).
→▶The name of the source is displayed and the light of the source flashes.

3 Turn ▲▼ MENU NAVIGATOR to select the input connectors which should be used (e. g. CD → COAX2).

4 Press ENTER / OK to confirm your selection.
→▶STORED is displayed briefly.

5 This source selection is now using the chosen audio input (e. g. CD uses the COAX 2 IN input connectors, **COAX 2** lights when switching to CD).

Using one source selection for two or more appliances

You may assign more than one source to a source selection. This can be useful when products are connected one after the other in a chain.

Example: A VCR is connected to the TV but only the TV is connected to the receiver. Both SOURCE SELECTOR settings, TV as well as VCR, have to use the TV input connectors.

1 Choose * SELECT INPUT from the menu and press NEXT ▶.

2 Turn SOURCE SELECTOR to select the source which should be reassigned (e. g. VCR).
→▶The name of the source is displayed and the light of the source flashes.

3 Turn ▲▼ MENU NAVIGATOR to select the input connectors which should be used (e. g. VCR → TV IN).

4 Press ENTER / OK to confirm your selection.
→▶STORED is displayed briefly.

5 This source selection is now using the chosen audio input (e. g. VCR uses the TV IN input connectors, VCR (TV IN) is displayed briefly when switching to VCR).

About 6 CHANNEL / DVD INPUT

The 6 CHANNEL / DVD INPUT can be used to connect a device with a built-in multichannel decoder (e.g. Dolby Digital, DTS, etc.) and 6-channel output connector, i. e. a high end DVD player.

When using the 6 CHANNEL / DVD INPUT audio input, the receiver works as a multichannel amplifier. The source reproduces surround sound and sends it to the receiver divided into the necessary channels. Therefore the SURROUND ON/OFF, HALL and SURR. MODE button have no effect since the provided signal is already multichannel.

From a source which is connected to the 6 CHANNEL / DVD INPUT audio input cannot be recorded.

Playing a source

1 Press POWER / STANDBY to switch on the receiver.

2 Turn SOURCE SELECTOR to select a source.
→The name of the source is displayed.

- You can select the FRONT AV / GAME input by pressing FRONT AV (FR 975 only).

3 Start playback of the source as usual.

Adjusting the sound

- Turn VOLUME to adjust the volume.
→VOLUME and the volume level between 0 and 50 is displayed.

1 Press BASS or TREBLE.
→BASS or TREBLE and the actual value are displayed briefly. Then TURN VOLUME KNOB TO CHANGE is scrolled.

2 Turn VOLUME to adjust the bass or treble.
→BASS or TREBLE and the actual value are displayed.

Note: If VOLUME *is not turned within 5 seconds or if any other control is used, the bass or treble adjustment is switched off.*

- If a subwoofer is connected, press SUBW. ON/OFF to increase the bass performance.

Note: In case of digital surround sound, a subwoofer signal will only be available when supported by the source material.

- Press LOUDNESS to switch loudness either on or off.
→**LOUDNESS** is displayed if loudness is on.

Recording from a source

If you wish to record from a source you must select it with SOURCE SELECTOR. The incoming signal is reproduced by all audio and – if the source includes a video signal – video outputs of the receiver. The sound settings do not affect the recording.

1 Turn SOURCE SELECTOR (or press FRONT AV – FR 975 only) to select the source you want to record from.
→The name of the source is displayed.

2 Prepare the desired recording appliance. It must be connected to one of the outputs of the receiver.

3 Start recording on the recording appliance.

4 Start the playback of the source as usual.

Notes: – *The audio and video signal of* VCR IN *is not reproduced by* VCR OUT. *The same applies to the audio signal of* CDR/TAPE IN to CDR/TAPE OUT.
– *We recommend not to use the digital output* COAX OUT *of the receiver to record from an analogue source. Use the analogue output* CDR/TAPE *instead.*
– *From a source which is connected to the* 6 CHANNEL / DVD INPUT *audio input cannot be recorded.*

Recording from the digital output

It is possible to connect a digital recorder to the digital output of the receiver. In this way, all signals coming from the digital inputs can be recorded directly on the connected audio recorder. The receiver will also convert all signals coming from the analogue inputs to the digital output.

The receiver can be used to record digitally a multichannel surround sound audio signal (Dolby Digital, DTS or MPEG) from, for example, DVD to CD-R. The receiver will convert the digital multichannel signal into a stereo signal without loss of relevant sound information.

Notes: – *When recording a Dolby Digital, DTS or MPEG signal, each track must be recorded individually.*
– *Digital recording is not possible when the digital source material is copy-protected.*

About surround sound

Surround sound gives you a complete new listening sensation. You will have the feeling of being in the middle of the action, because sound is coming from everywhere around you. Look out for TV broadcasts, audio and video tapes and discs with the DOLBY SURROUND, DOLBY DIGITAL, dts or MPEG Multichannel marks which are encoded for multichannel surround sound. You should prefer Dolby Digital, DTS or MPEG Multichannel to get the best out of your receiver.

The FR 965 and FR 975 are able to reproduce DTS surround sound. DTS is a premium multichannel surround sound system available on DVD discs, laserdiscs and audio discs. Consult your software dealer on the availability of DTS software in your region.

Notice that DVD discs do not always carry full multichannel surround. To be sure that a disc is multichannel encoded consult your dealer.

Most ordinary stereo tapes and discs can be replayed using surround sound settings with good results. If the reproduction is distorted in surround mode, switch to normal stereo mode.

The availabilty of the various surround sound modes described depends on the number of speakers used and the incoming sound information.

Switching surround sound

With surround sound on, you can switch through the different surround modes. Note that the possibilities are related to speaker setup defined in the receivers menu.

If a digital surround signal is detected, the receiver will scroll either DOLBY DIGITAL, DTS or MPEG.

1 Press SURROUND ON/OFF to switch on the surround sound.
→The surround mode in use is scrolled.

2 Press SURR. MODE repeatedly to listen to the different surround modes (if available).
→The chosen mode and the speakers used are displayed. If the incoming multichannel signals are reduced to fewer output signals, **DOWNMIX** is displayed.

3 Press VIRTUAL MODE as often as necessary to switch through the virtual surround sound modes:
1 × to activate 3D SURROUND
2 × to activate MULTI FRONT
3 × to activate MULTI REAR
4 × to activate NATURAL SURROUND
→A light indicates if a virtual surround sound mode is on. -signs indicate which virtual surround sound mode is active.

4 Press SURROUND ON/OFF to switch off the surround sound.
→SURROUND OFF is scrolled.

Surround sound settings

HALL

The sound reproduction is enhanced and a slight echo is added. This gives the impression of being in a large room. Can only be used in stereo mode.

SURROUND

The surround mode enables normal surround sound reproduction with 4 or 5 speakers. Depending on the source material, Dolby Surround Pro Logic, Dolby Digital, DTS or MPEG is reproduced.

PRO LOGIC, DOLBY DIGITAL, DTS, MPEG

In addition to SURROUND, the surround mode used – depending on the source material – will be displayed. In case of digital surround, the sound format AC-3 (for Dolby Digital), DTS or MPEG (for MPEG 2 Multichannel) will be displayed, followed by the sound channels, available on the source (e. g. DVD).

Example: AC-3 3/2.1 Dolby Digital, 3 front channels, 2 surround channels and a subwoofer channel.

MPEG 2/0.0 MPEG Multichannel, stereo sound only.

AC-3 3/1.0 Dolby Digital, 3 front channels, 1 (mono) surround channel without subwoofer signal.

DTS 3/2.1 DTS, 3 front channels, 2 surround channels and a subwoofer channel.

FRONT-3 STEREO

The surround sound is muted. 3 Stereo lets you listen to surround sound without using the surround speakers.

STEREO

All sound is reproduced and played through the front left and right speakers. This enables standard stereo reproduction.

Virtual Surround

Your receiver is able to reproduce one or more forms of virtual surround sound. Virtual surround gives a more real life sound impression by creating phantom speakers in addition to or instead of real speakers. The position of the listener influences the surround effect. The area where the effect is best is shown in grey.

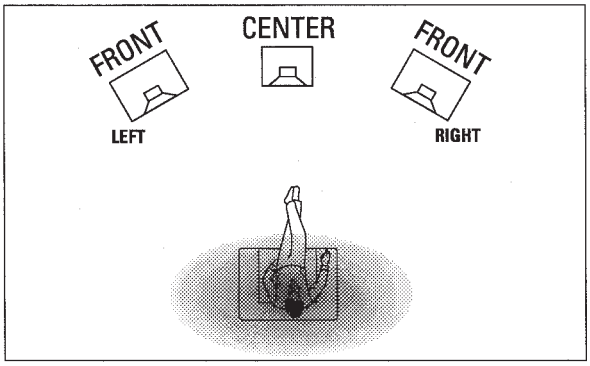

The level of virtual surround sound effect can be adjusted in the setup menu. The following surround sound modes are available:

3D SURROUND

No rear speakers are needed. The sound of the rear channel is simulated by the front speakers. Surround sound is simulated through the front left, right and center speakers.

MULTI FRONT

Phantom speakers are created next to the left and right front speaker.

MULTI REAR

Phantom speakers are created next to the left and right rear speaker.

NATURAL SURROUND

Phantom speakers are created next to the left and right front and rear speakers.

Note: The availability of MULTI FRONT *and* MULTI REAR *depends on the sound channels on the source material.*

NIGHT MODE (only on the remote control)

The loud parts of the sound are lowered and the soft passages are raised. You can enjoy surround sound without disturbing sleeping children or neighbours. Night mode only works with Dolby Digital and MPEG, and only if supported by the source material.

Tuning to radio stations

You can search for radio stations by scanning the frequency band. You can also key in the frequency of a known radio station. If an FM station is being broadcast and received in stereo, **STEREO** is shown.

Searching for radio stations

1 Turn SOURCE SELECTOR to select the tuner.
→TUNER is displayed.

2 Select a waveband by pressing TUNER AM/FM repeatedly.
→The selected waveband is displayed.

3 Keep ◀ or ▶ pressed for approximately 1 second.
→SEARCH is displayed and the tuner tunes to a station with sufficient strength.

4 Repeat this procedure until you find the desired station.

- To fine tune to a weak transmitter, briefly press ◀ or ▶ as often as necessary for optimum reception.

Tuning to a radio station by frequency (with the remote control only)

1 Press TUNER.
→TUNER is displayed.

2 Press FR. D..
→_ is displayed.

3 Use 1–0 to key in the frequency of a radio station.

Note: Only valid numbers within the frequency range of the tuner can be keyed in.

Switching FM sensitivity

You can switch the tuner to a lower search sensitivity, to search only for stations with a strong signal (FM only).

1 Turn SOURCE SELECTOR to select the tuner.
→TUNER is displayed.

2 Press SENS. on the receiver.
→Either **SENS HI** or **SENS LO** is displayed for 5 seconds.

Note: While searching for radio stations, the actual sensitivity is displayed. In this case, **SENS LO** *means the tuner is only looking for radio stations with a strong signal.*

Storing radio stations

You may store up to 30 radio stations in the memory. The receiver can select and program radio stations by itself or you can choose them yourself.

Automatic programming

1 Choose ✱ TUNER from the menu and press NEXT ▶.

2 Choose AUTO INSTALL and press NEXT ▶.
→The preset number where programming will start, the waveband and AUTO are displayed.

3 Turn TUNER PRESET ▲▼ to change the preset number where programming should start.

4 Use TUNER AM/FM to switch to the desired waveband.

5 Press ENTER / OK to start programming.
→AUTO INSTALL flashes and all available radio stations are programmed, this may take a few minutes. Programming is done when AUTO INSTALL stops flashing.

Manual programming

1 Choose ✱ TUNER from the menu and press NEXT ▶.

2 Choose MAN INSTALL and press NEXT ▶.
→A preset number, the waveband and the frequency are displayed.

3 Turn TUNER PRESET ▲▼ to change to the preset number where the radio station should be stored.

4 Tune to the desired radio station (see "Searching for radio stations").

5 Press ENTER / OK to confirm your selection.
→STORED is displayed briefly. The radio station is programmed at the chosen preset number.

6 Select and store all desired radio stations this way.

Tuning to stored radio stations

1 Turn SOURCE SELECTOR to TUNER to select the tuner.
→►TUNER is displayed.

2 Turn TUNER PRESET ▲▼ to select a preset radio station.
→►**PRESET**, the preset number and station are displayed.

Resorting stored radio stations

After programming radio stations, you might want to change their sequence. RESHUFFLE allows you to exchange the positions of presets.

1 Choose ✱ TUNER from the menu and press NEXT ►.

2 Choose RESHUFFLE and press NEXT ►.
→►**PRESET**, a preset number and station are displayed.

3 Turn TUNER PRESET ▲▼ to select a preset station.

4 Press ENTER / OK to confirm the selection.
→►The selected preset number SWAP (-) and a second preset number are displayed.

5 Turn TUNER PRESET ▲▼ to select the other preset station.

6 Press ENTER / OK to confirm the exchange.
→►RESHUFFLED is displayed briefly and these two preset numbers are swapped.

Naming radio stations

It is possible to assign a name to any of the preset radio stations. RDS station names also can be overwritten.

1 Choose ✱ TUNER from the menu and press NEXT ►.

2 Choose GIVE NAME and press NEXT ►.
→►A preset radio station is displayed.

3 Turn TUNER PRESET ▲▼ to select the preset to be renamed.

4 Press ENTER / OK to confirm your selection.
→►The existing name or _ _ _ _ _ _ _ _ is displayed.

5 Turn TUNER PRESET ▲▼ to select a letter and NEXT ► or ◄ PREV. to move to the next or previous position.

6 After you have entered the entire name, press ENTER / OK to confirm.
→►STORED is displayed and the name is stored.

Note: If you want to use the transmitted RDS station name again, simply clear the given name.

Clearing station names

1 Use the menu option ✱ TUNER, choose GIVE NAME.
→►A preset radio station is displayed.

2 Turn ▲▼ MENU NAVIGATOR to select the name to be cleared.

3 Press ENTER / OK to confirm your selection.

4 Press ◄ PREV. while the first letter is flashing.
→► CL is flashing to the left of the station name.

5 Press ENTER / OK to clear the station name.
Or, if you have changed your mind,
press ◄ PREV. to leave the station name as it is.

RDS

Radio **D**ata **S**ystem is a service that allows FM stations to send additional information. If you are receiving an RDS station, RDS and the station name are displayed.

Switching through different RDS information

- Press RADIO TEXT on the receiver repeatedly to switch through the following information (if available):
  – Radio text messages
  – RDS clock
  – Frequency
  – Station name

Note: The time signal broadcasted from certain RDS stations may not always be accurate.

RDS News and Traffic Announcement

It is possible to set up the tuner in such a way that any playback is interrupted by news or traffic information of a chosen RDS station. Announcement functions only work if the necessary RDS signals are being broadcast.

If RDS stations are also carrying an EON signal (**E**nhanced **O**ther **N**etworks), **EON** is displayed. This signal enables the tuner to search not only the chosen RDS station, but the whole EON station network for news and traffic information.

1 Tune to the desired RDS station.

2 Press NEWS/TA:
Once to display **NEWS**, this switches on the news announcement function.
Twice to display **TA**, this switches on the traffic announcement function.
Three times to display **TA** and **NEWS**, this switches on both announcement functions.

3 Select and play any other source as usual.
→ While news or traffic information is being broadcast the receiver will switch to tuner and **NEWS** or **TA** will flash.

4 Press NEWS/TA until the display indication disappears to switch off the function(s).
or
Press NEWS/TA during an announcement to switch off the function(s).

Note: Be sure to switch the news and traffic announcement off during recording, otherwise these announcements also will be recorded.

ADDENDUM

Remote Control / Remote Control Buttons

The following should be read instead of the original text

MUTE .....Mutes the sound of the receiver in all modes, except TV.
Mutes the sound of your Philips TV set if your remote control is in TV mode.

⏻ .....Switches the source selected on your remote control (e.g. VCR, TV) to standby.
When pressed longer than 2 seconds, the receiver switches to standby.

Connections / Analog Audio Connections

Please read the following text as additional to the text

DTS Digital Surround™ is a discrete 5.1-channel digital audio format available on CD, LD, and DVD software which consequently cannot be decoded and played back inside most CD, LD, or DVD players. For this reason, when DTS-encoded software is played back through the analog outputs of the CD, LD, or DVD player, excessive noise will be exhibited. To avoid possible damage to the audio system, proper precautions should be taken by the customer if the analog outputs are connected directly to the receiver.

To enjoy DTS Digital Surround™ playback, a DTS-compatible player has to be connected to one of the digital inputs of the receiver.

System Setup

Please read the following new chapter after the "Positioning the Speakers" chapter in this section:

Receiver Adjustment

Once the number and position of loudspeakers has been fixed, you can adjust the initial receiver settings for optimal surround sound with the actual setup:

1 Set what speakers have been connected to the receiver *(see "Menus / Speaker Setup")*
Note: The initial setting of your receiver is:
two front speakers left and right: present (cannot be altered)
center speaker: present
two rear speakers: present
subwoofer: present

2 Select the size of the speakers (SMALL or LARGE) *(see "Menus: Speaker Sizes")*
Select SMALL if your speaker is able to reproduce low notes down to at least 80–100 Hz.
Select LARGE if your speaker is able to reproduce low notes down to at least 50 Hz.
(As a rule of thumb, a LARGE speaker has a cone diameter of at least 12 cms (5 inches).)
See the specification sheets of your loudspeakers.
Note: The initial setting of your receiver is: all speakers set to LARGE.

3 Set the distance from the speakers to the listener's position *(see "Menus: Speaker Distance")*
Note: The initial setting of your receiver is: all speakers set at a distance of 3 meters.

General note: Use the initial settings if you prefer that your receiver does not correct automatically for speaker sizes and distances.

DISMANTLING HINTS

Dismantling of Front

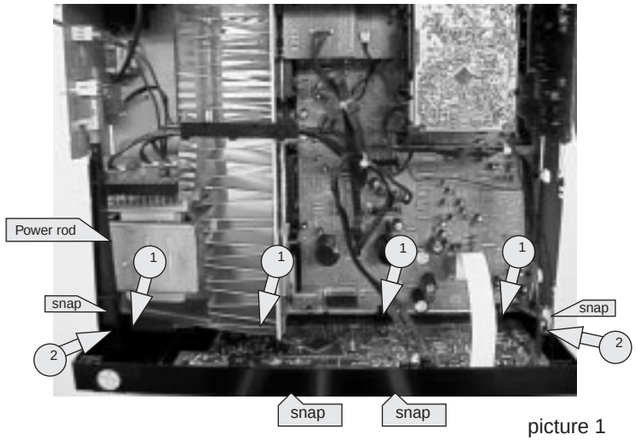

picture 1

1) Remove top cover
2) Remove power rod
3) Remove 6 x screw as shown in picture 1
4) Release two snaps (left & right side front)
5) Release two snaps on the bottom side front
6) Tipp down front as shown in picture 2

picture 2

Dismantling of mainstrafo

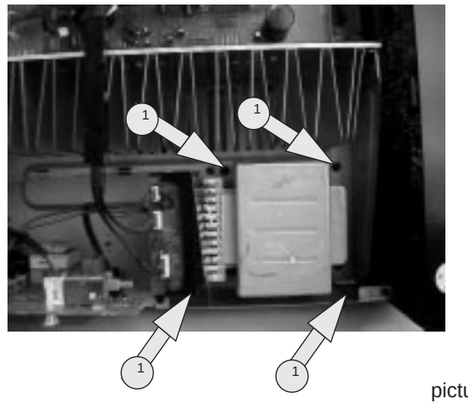

picture 8

1) Remove power rod
2) Remove 4x screw as shown in picture 8

Dismantling of mono board

1) Remove front . See picture 1
2) Remove whole front (disconnect the wires on the mono board coming from front)

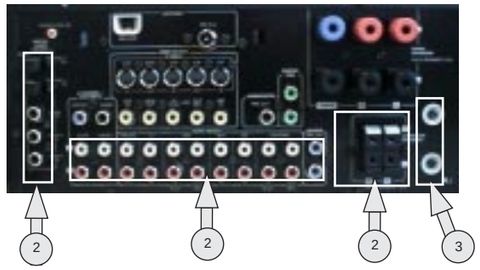

picture 3

3) Remove 14 x screws shown in mentionned aria . See picture 3

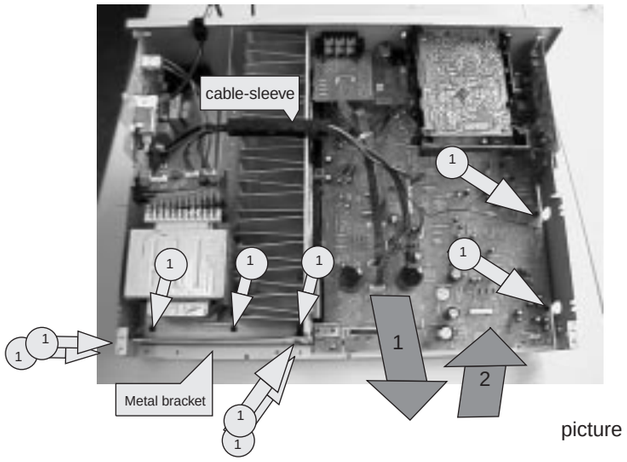

picture 4

4) Remove wires out the cable-sleeve.
5) Remove 7 x screw and remove metal bracket
6) Remove 2 x screw on mono board . See pictue 4
7) Remove mono board as shown arrow 1 & 2 . See picture 4
8) Bring the mono board in the service position as shown in picture 5

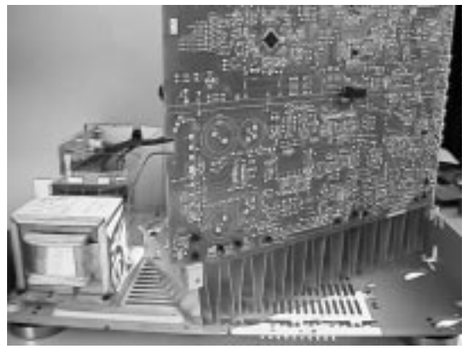

picture 5

Legend

1 = Torx M3x6mm (screw with big head)
2 = Torx 3x10mm
3 = Torx M3x6mm

3-1

Service position monoboard

1) Bring front in position as shown in picture 6
2) Snap nok of front in bottom to make front stable . See picture 7
3) Connect front wiring back to monoboard.
*The tuner module doesn't have to be connected. Use an other source (pe.CD)

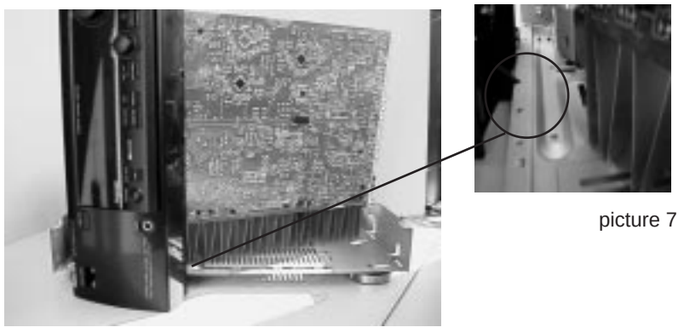

picture 7

picture 6

Service position main trafo

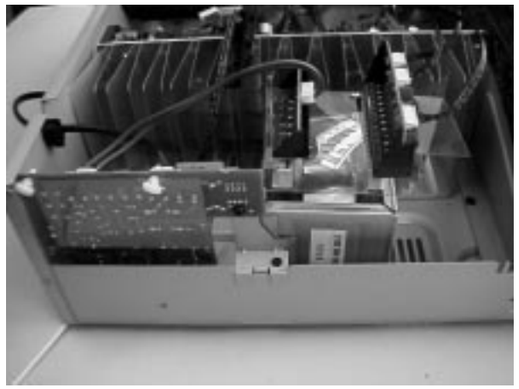

picture 9

1) Put main trafo as shown in picture 9

Handling service cover

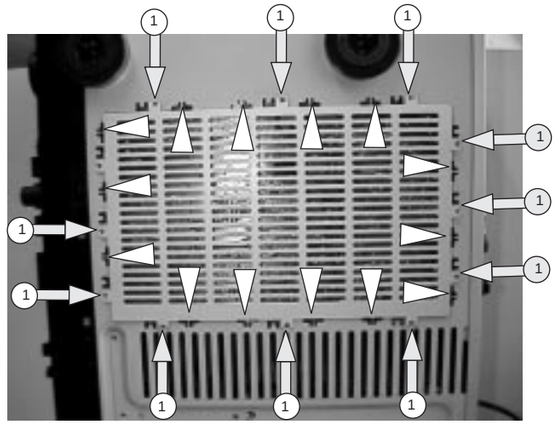

picture 10

1) To open the service cover cut 14 x lugs between cover and bottem . See picture 10 (▽)
2) To close the service cover put 11 x screw in mentionned holes. See picture 10
Service codenumber 12x Torx M3x6mm screw with big head = 4822 502 14659

DISMANTLING HINTS

Dismantling of MDM module

1) Remove all the screws mentionned in the arial . See picture 11

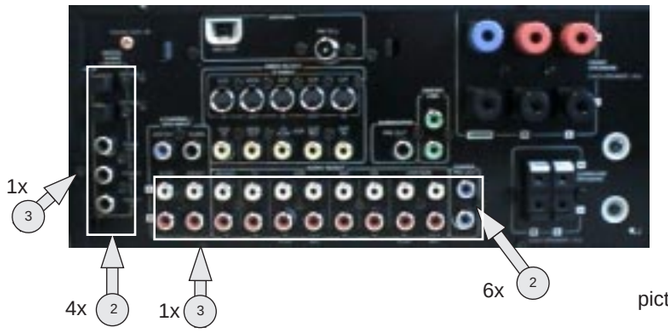

picture11

2) Remove backplate a little backwards. See arrow 1 (picture 12)
3) Pull module out the set as shown in picture 12

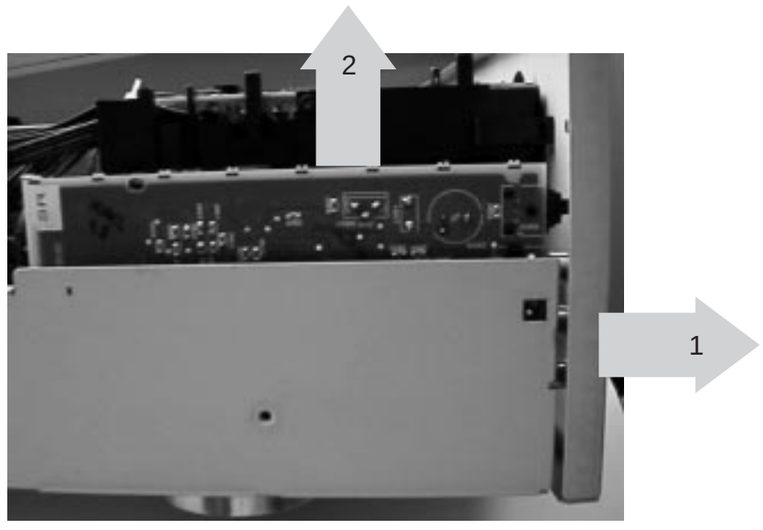

picture12

Legend

1 = Torx M3x6mm (screw with big head)

2 = Torx 3x10mm

3 = Torx M3x6mm

WIRING DIAGRAM

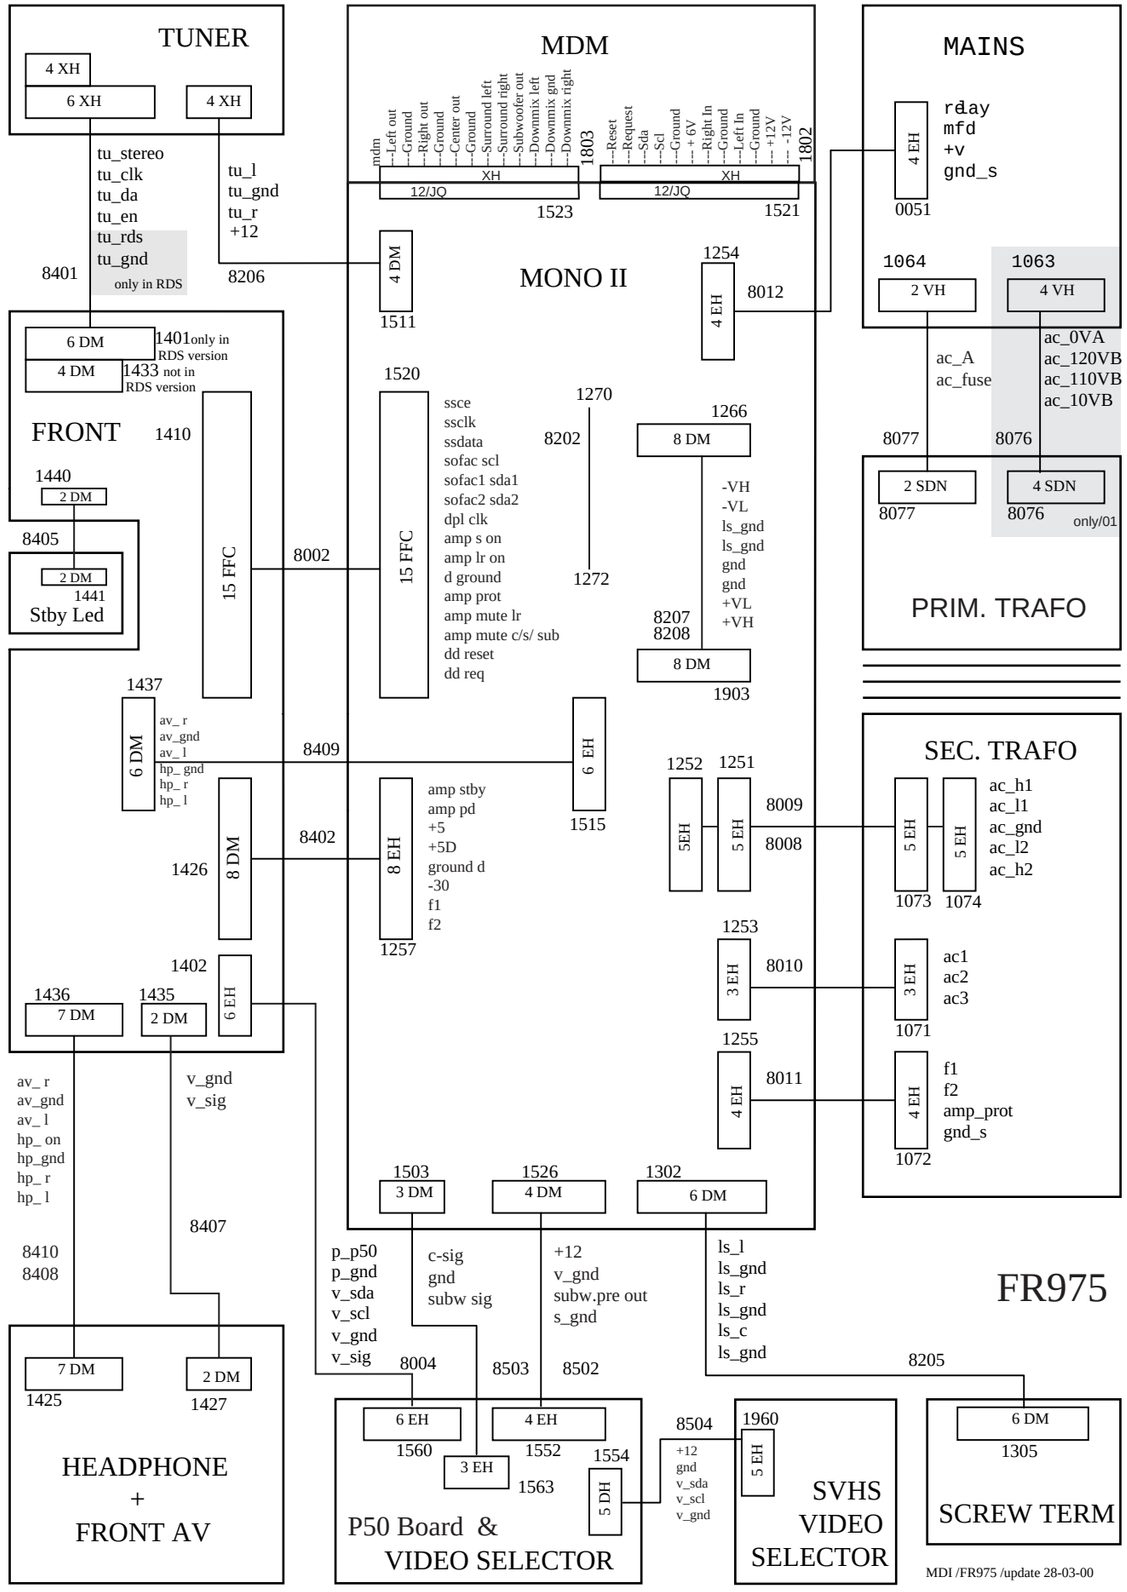

4-1

BLOCKDIAGRAM

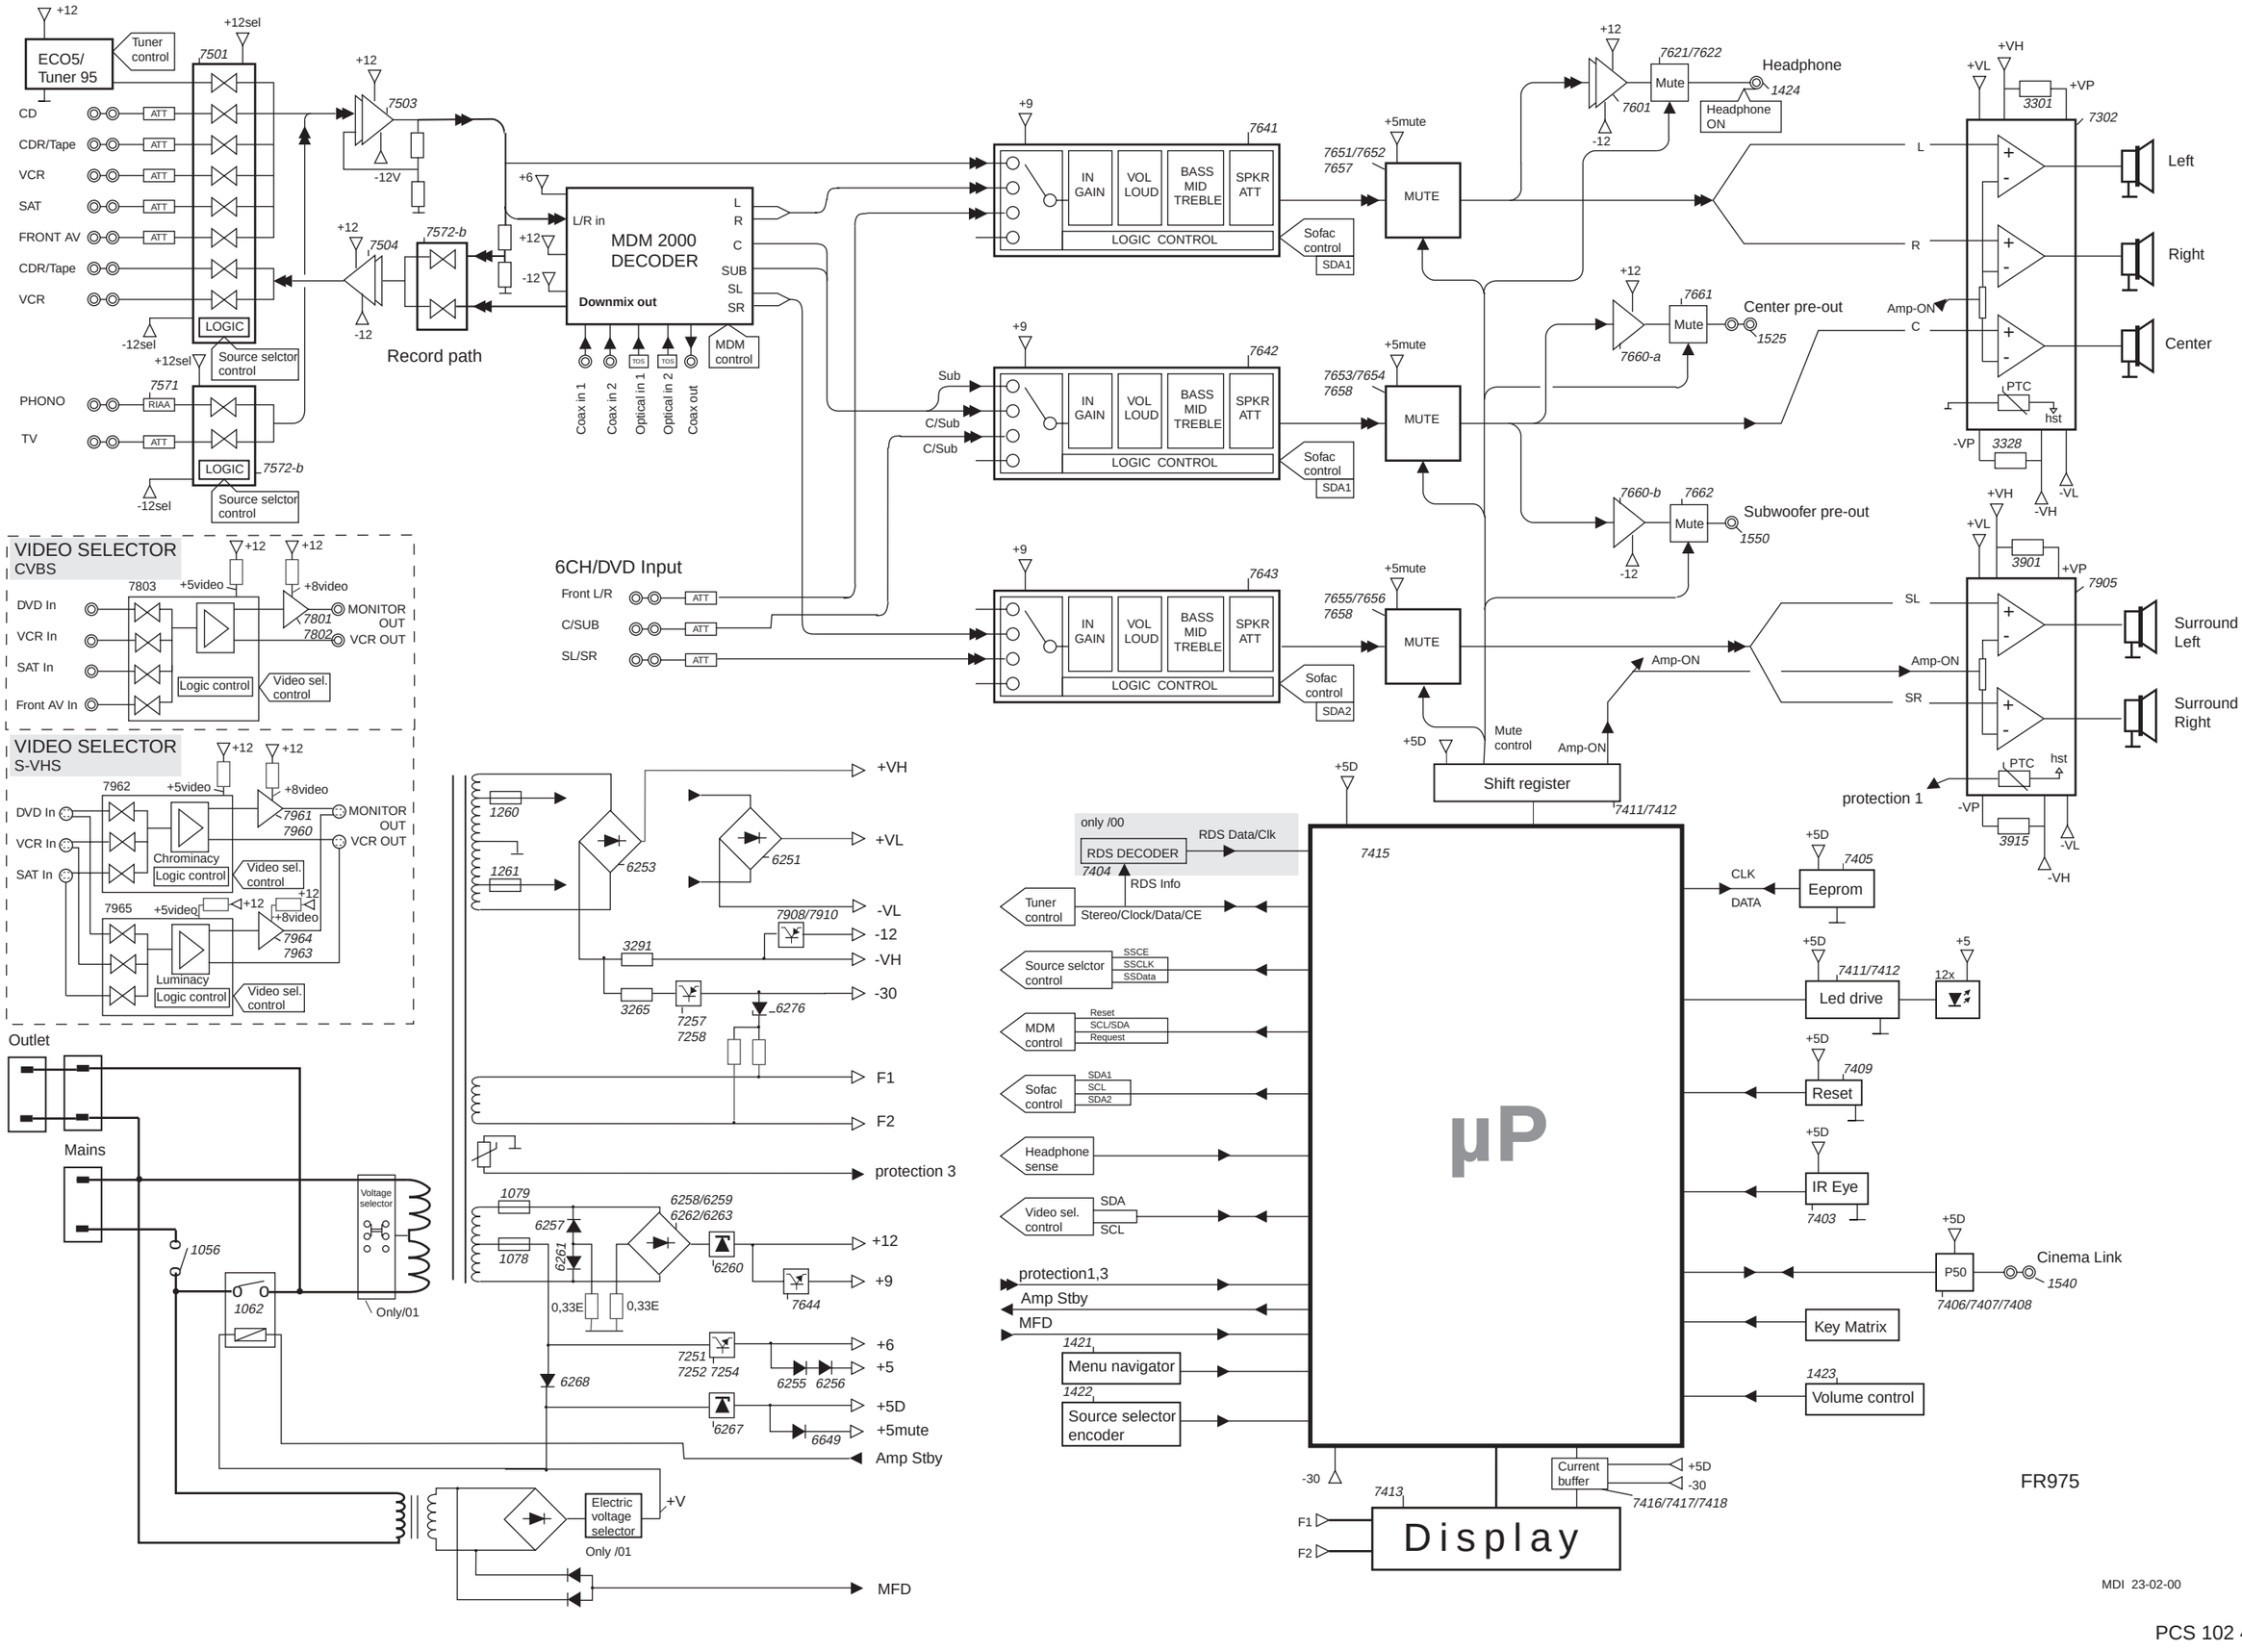

5-1

SERVICE TEST PROGRAM

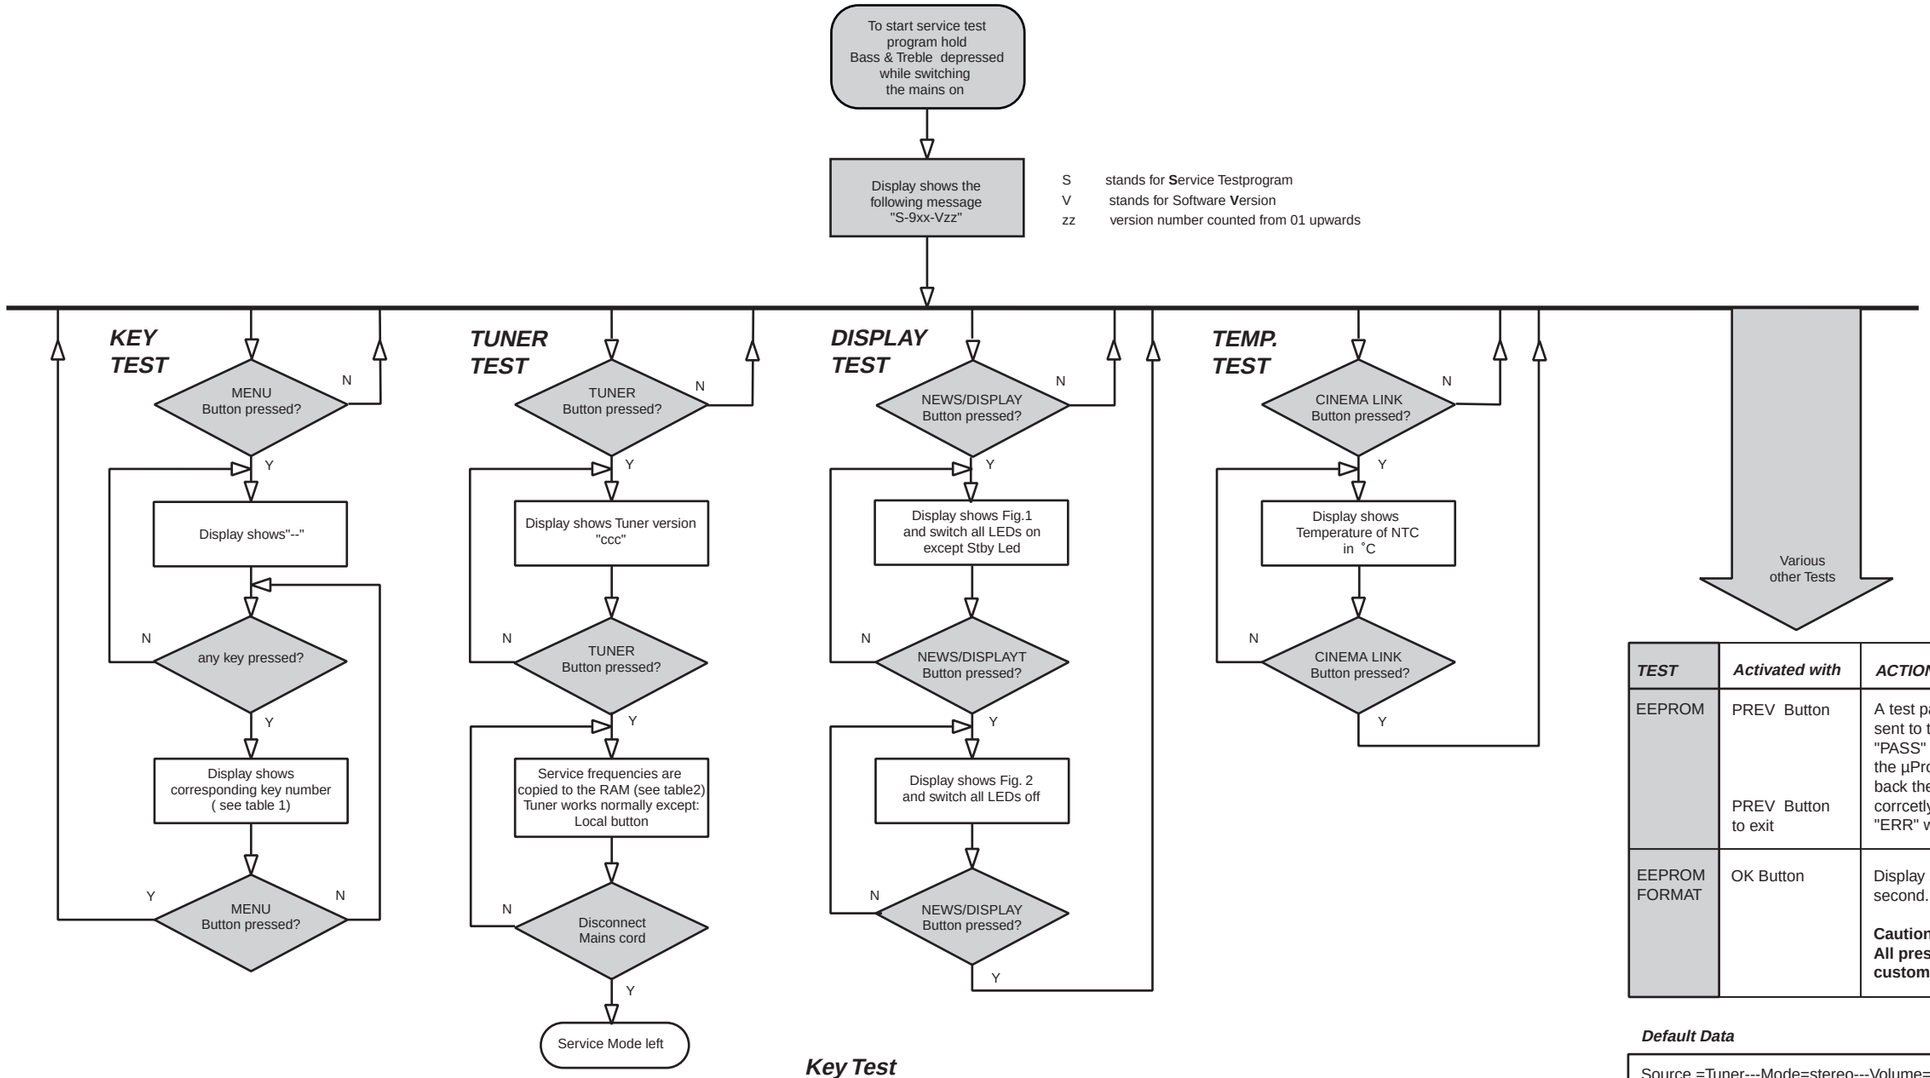

TEST	*Activated with*	*ACTION*
EEPROM	PREV Button PREV Button to exit	A test pattern will be sent to the Eeprom. "PASS" is displayed if the µProcessor read back the test pattern corrcetly, otherwise "ERR" will be displayed.
EEPROM FORMAT	OK Button	Display shows"NEW" for 1 second. **Caution!** **All presets from the customer will be Lost**

Tuner Test

Display info Version	Europe "EUR" /00	East Eur. 3-band "EEL" /14	East Eur. 2-band "EEU" /14	USA "USA" /17	Oversea "OSE" /01
Preset 1	87.5MHz	65.81MHz	65.81MHz	87.5MHz	87.5MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	74MHz	74MHz	530kHz	531kHz
4	1602kHz	87.5MHz	87.5MHz	1700kHz	1602kHz
5	558kHz	531kHz	531kHz	560kHz	558kHz
6	1494kHz	1602kHz	1602kHz	1500kHz	1494kHz
7	153kHz	558kHz	558kHz	98MHz	----
8	279kHz	1494kHz	1494kHz	----	----
9	198kHz	153kHz	98MHz	----	----
10	98MHz	279kHz	70.01MHz	----	----
11	----	198kHz	----	----	98MHz

Table 2

This table is valid for all types of tuners.
Custormer presets will not changed after this Tuner test.
If a station is tuned then the display flag "OK" will be ON otherwise it will be OFF.
If the tuned frequency is carrying RDS information, the display flag "RDS" will be ON.
Oversea version: the tuning grid can be switched between 9kHz and 10kHz by pressing the key "TUNER" for longer then 2 seconds. "Grid 9" or "Grid10" will be shown accordingly.
Grid 9kHz is in FM 50kHz , Grid 10kHz is in FM 100kHz
Europe version: the LW can be switched On and Off by pressing the key "TUNER" for longer than 2 seconds. LW OFF or LW ON will be shown accordingly.

Key Test

Key	Number	Key	Number	Key	Number
Cinema	1	Sens	7	Loudness	13
Surr. on/off	2	*News T/A	8	Bass	14
Surr. Mode	3	Prev.Exit	9	Treble	15
Virt. Mode	4	Setup Menu	- -	*Front A/V	16
Tuner	5	Next	11		
*Radio Text	6	Enter/OK	12		

*Button Radio Text change in Name/Frequency in /01/17 version
Button News T/A change in Display in /01/17 version
Button Front A/V not in FR965

Table 1



Figure 1

Default Data

Source =Tuner---Mode=stereo---Volume=10
Bass=0---Treble=0---Loudness=Off
#Effects: 3D Surr=100
#Volume balance:
Vol Front-L=0---Vol Front-R=0---Vol Center=0
Vol Rear-L=0---Vol Rear-R=0---Vol Subwoofer=0
#Speaker setup:
Subwoofer Present=Yes---Center=Yes---Rear=Yes
#Speaker Sizes:
Front Size=Large--- Center Size=Large---Rear Size=Large
#Speaker Distance:
Dist L/R=3meter---Dist Center=3meter---Dist Rear=3meter
For USA /17:
Dist L/R=10Feet---Dist Center=10Feet---Dist Rear=10Feet.
#Select input: DVD--->Coax1

For /01: FM grid is 50kHz : AM grid is 9kHz



Figure 2

mdi 04-04-00

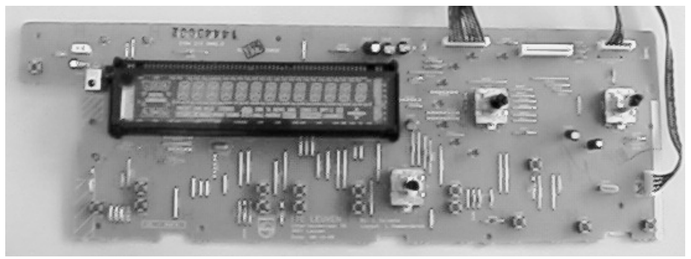

FRONT BOARD

TABLE OF CONTENTS

FTD Display pin connections..... 6-2
Headphone & Led board layout 6-3
Circuit diagram 6-4
Component layout 6-5
Partslist 6-6

FTD DISPLAY PIN CONNECTIONS

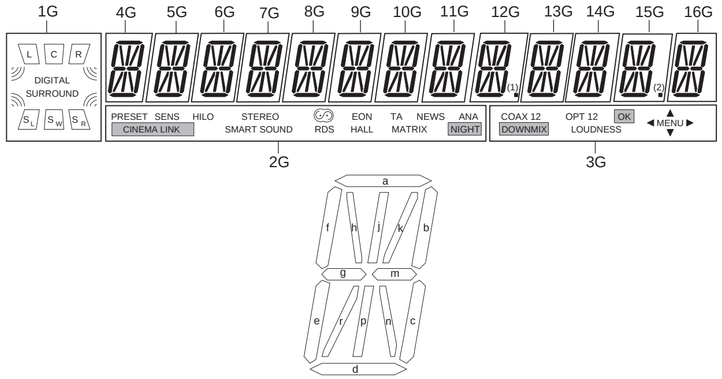

	1G	2G	3G	4G~11G	12G	13G ,14G	15G	16G
P1	L	MATRIX	DOWNMIX	a	a	a	a	a
P2	R	NIGHT	COAX	j p	j p	j p	j p	j p
P3	C	ANA	1(coax)	h	h	h	h	h
P4	(C)	LO	2(coax)	k	k	k	k	k
P5	(S_L)	CINEMA LINK	OPT	b	b	b	b	b
P6	(S_R)	EON	1(opt)	f	f	f	f	f
P7	S_W	HALL	2(opt)	m	m	m	m	m
P8	$S_{(L)}$	HI	LOUDNESS	g	g	g	g	g
P9	L	NEWS	▼	c	c	c	c	c
P10	$S_{(R)}$	PRESET	MENU	e	e	e	e	e
P11	R	RDS	►	r	r	r	r	r
P12		SMART SOUND	OK	n	n	n	n	n
P13		STEREO	◄	d	d	d	d	d
P14	SURROUND	TA	▲	-	■ (1)	-	■ (2)	-
P15	DIGITAL	SENS	-	-	-	-	-	-

Pin Connection

Pin numbers	50 49 48 47 46 45 44 43 42 41 40 39 38 37 36 35 34 33 32 31 30 29 28 27 26 25 24 23 22 21 20 19 18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3 2 1
Connection	1G 2G 3G 4G 5G 6G 7G 8G 9G 10G 11G 12G 13G 14G 15G 16G NC NC NC NC NC NC NC NC NC NC NC NC P15 P14 P13 P12 P11 P10 P9 P8 P7 P6 P5 P4 P3 P2 P1 NC NC NC NC NC NC NC NC NC NC NC NC NP NP F1 F2

Pin numbers	62 61 60 59 58 57 56 55 54 53 52 51
Connection	F2 F1 NP NC NC NC NC NC NC NC NC NC

Note: FI , F2 --------- Filament
NC ---------- No connection
NP ---------- No pin
1G ~ 16G ----- Grid

HEADPHONE BOARD - COMPONENT VIEW

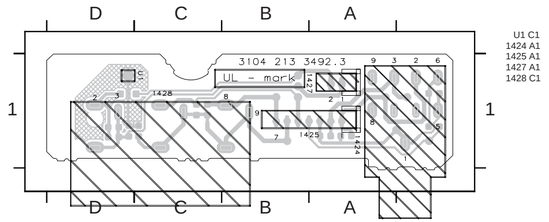

HEADPHONE BOARD - COPPER SIDE VIEW

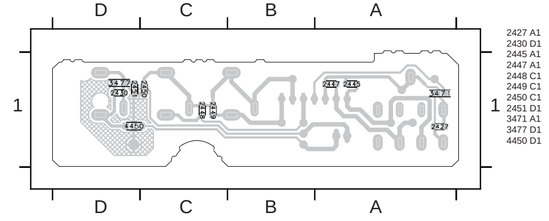

LED BOARD - COMPONENT VIEW



FRONT PART FR965 - FR975

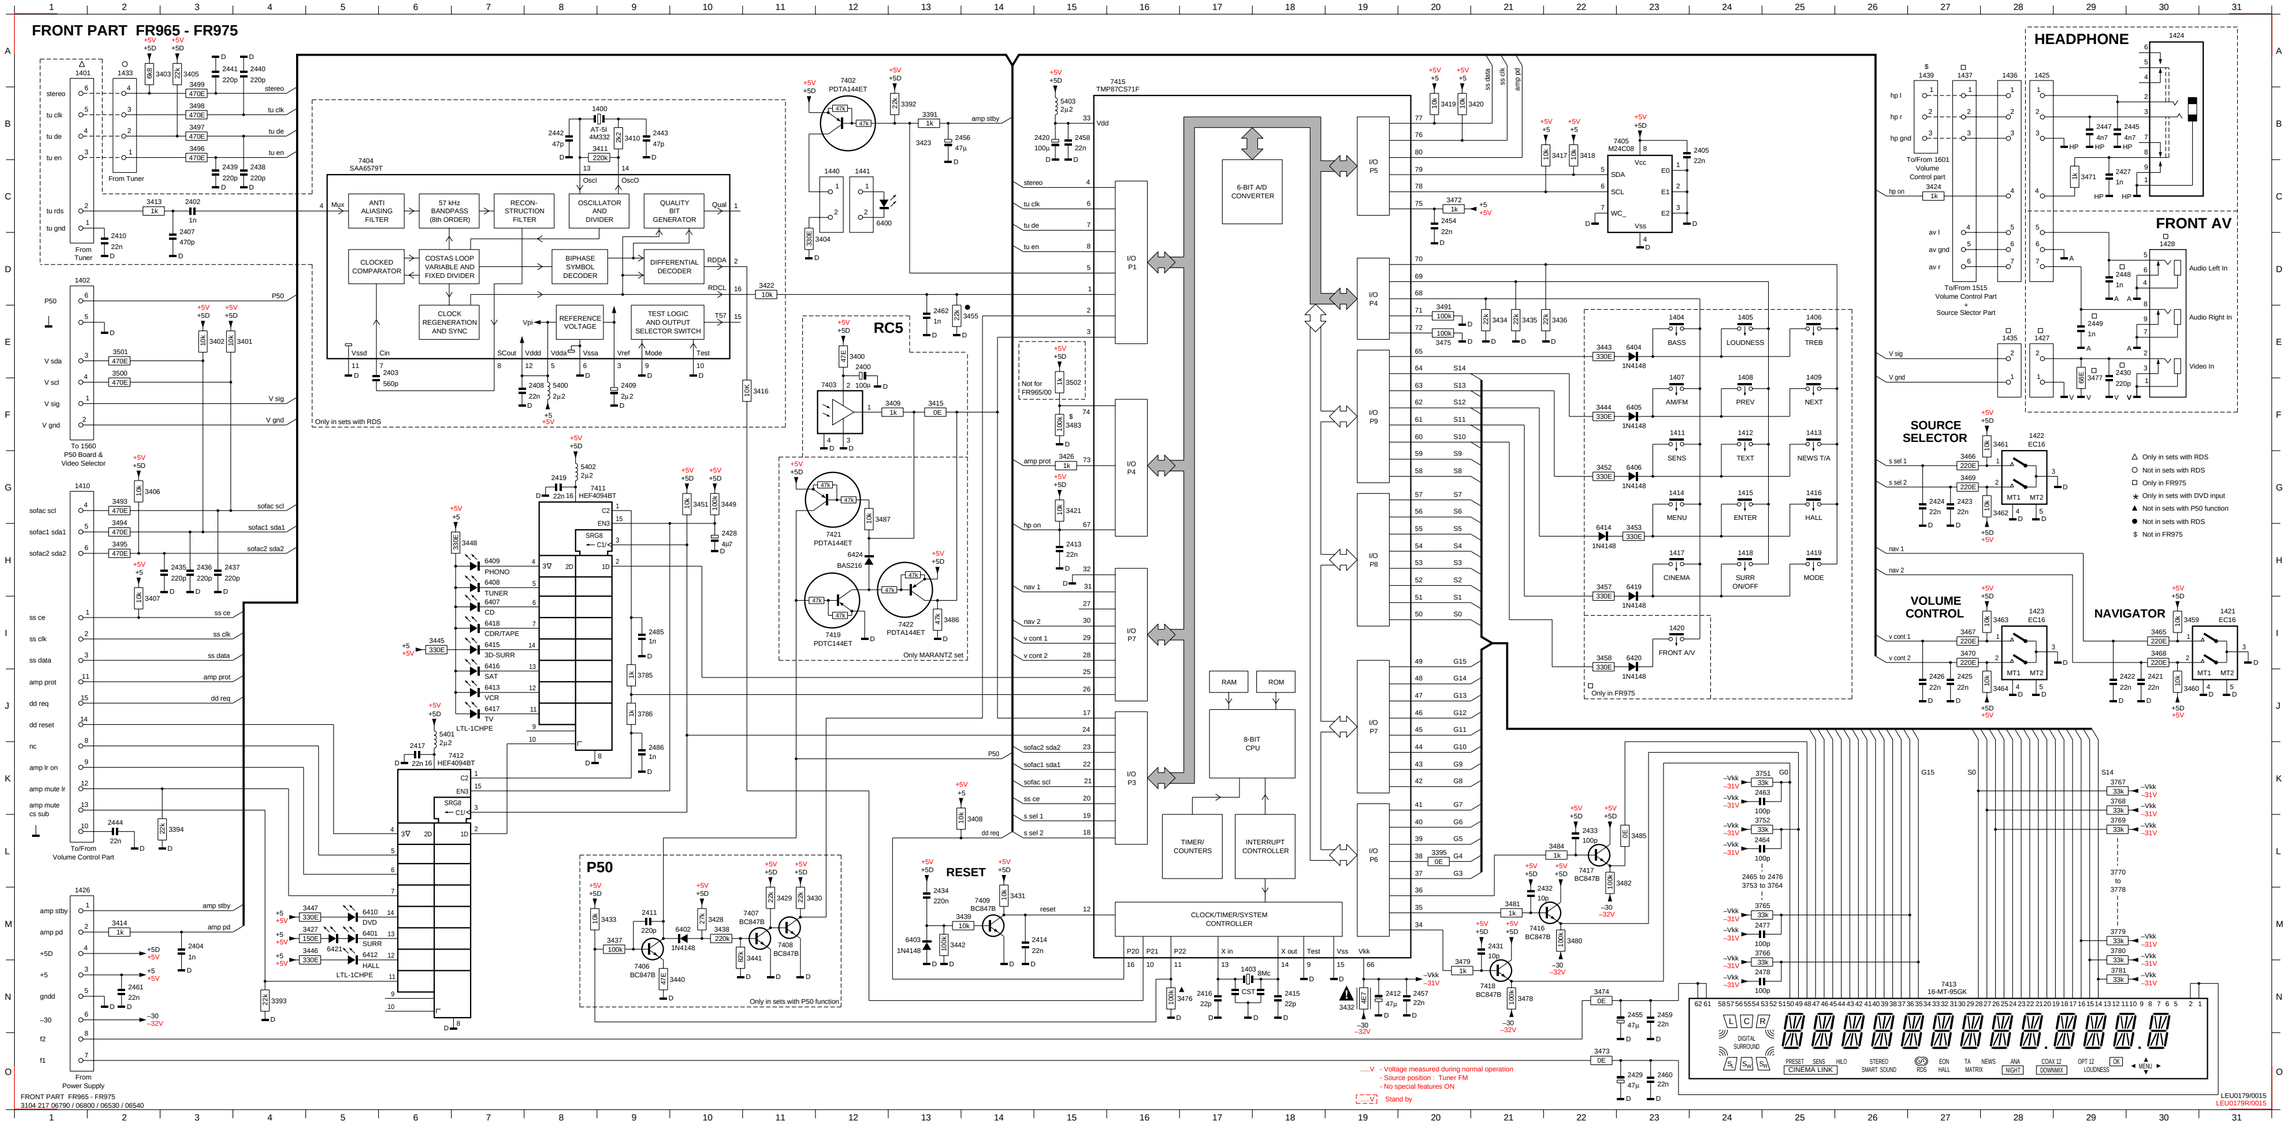

1400	B8	3418	B22	7404	C5
1401	A1	3419	B20	7405	B22
1402	D1	3420	B20	7406	N9
1403	N17	3421	G15	7407	M11
1404	E23	3422	D11	7408	M11
1405	E24	3423	B13	7409	M14
1406	E25	3424	C27	7411	G8
1407	F23	3426	G15	7412	K6
1408	F24	3427	M4	7413	N27
1409	F25	3428	M10	7415	A16
1410	G1	3429	M11	7416	M21
1411	F23	3430	M11	7417	L22
1412	F24	3431	M14	7418	N21
1413	F25	3432	N19	7419	I12
1414	G23	3433	M9	7421	H12
1415	G24	3434	E21	7422	I13
1416	G25	3435	E21		
1417	H23	3436	E22		
1418	H24	3437	M9		
1419	H25	3438	M10		
1420	I23	3439	M13		
1421	I31	3440	N10		
1422	F28	3441	N11		
1423	I28	3442	M13		
1424	A30	3443	E22		
1425	A28	3444	F22		
1426	M1	3445	I6		
1427	E28	3446	M4		
1428	D30	3447	M4		
1433	A2	3448	H7		
1435	E28	3449	G10		
1436	A28	3451	G10		
1437	A27	3452	G22		
1439	A27	3453	H23		
1440	C12	3455	E14		
1441	C12	3457	H22		
2400	E12	3458	I22		
2402	C3	3459	I30		
2403	E6	3460	J30		
2404	M3	3461	F28		
2405	B24	3462	G28		
2407	D3	3463	I28		
2408	F8	3464	J28		
2409	F9	3465	I30		
2410	D2	3466	G27		
2411	M9	3467	I27		
2412	N19	3468	I30		
2413	H15	3469	G27		
2414	M14	3470	I27		
2415	N18	3471	C29		
2416	N17	3472	C20		
2417	K6	3473	O22		
2419	G8	3474	N22		
2420	B15	3475	E20		
2421	J30	3476	N16		
2422	J29	3477	F29		
2423	G27	3478	N21		
2424	G27	3479	N20		
2425	J27	3480	M22		
2426	J27	3481	M21		
2427	C29	3482	L23		
2428	H10	3483	F15		
2429	O23	3484	L22		
2430	E29	3485	L23		
2431	M21	3486	I13		
2432	M21	3487	G12		
2433	L22	3491	E20		
2434	M13	3493	G2		
2435	H3	3494	H2		
2436	H3	3495	H2		
2437	H3	3496	B3		
2438	C4	3497	B3		
2439	C3	3498	B3		
2440	A4	3499	A3		
2441	A3	3500	E2		
2442	B8	3501	E2		
2443	B9	3502	F15		
2444	L2	3751	K24		
2445	B29	3752	L24		
2447	B29	3753	M24		
2448	D29	3764	M25		
2449	E29	3765	M24		
2454	C20	3766	M24		
2455	N23	3767	K29		
2456	B13	3768	K29		
2457	N20	3769	L29		
2458	B15	3770	L29		
2459	N23	3778	M29		
2460	O23	3779	M29		
2461	N2	3780	M29		
2462	E13	3781	N29		
2463	K24	3785	J9		
2464	L24	3786	J9		
2465	L24	5400	F8		
2476	L25	5401	J6		
2477	M24	5402	G8		
2478	N24	5403	B15		
2485	I9	6400	C12		
2486	K9	6401	M5		
3391	B13	6402	M10		
3392	B13	6403	M13		
3393	N4	6404	E23		
3394	L3	6405	F23		
3395	L20	6406	G23		
3400	E12	6407	I7		
3401	E4	6408	H7		
3402	E3	6409	H7		
3403	A2	6410	M5		
3404	D12	6412	M5		
3405	A3	6413	J7		
3406	G2	6414	H22		
3407	I2	6415	I7		
3408	L14	6416	I7		
3409	F12	6417	J7		
3410	B9	6418	I7		
3411	B8	6419	H23		
3413	C2	6420	I23		
3414	M2	6421	M5		
3415	F13	6424	H12		
3416	F11	7402	A12		
3417	B22	7403	F12		

6-5

FRONT BOARD - COMPONENT & COPPER SIDE VIEW

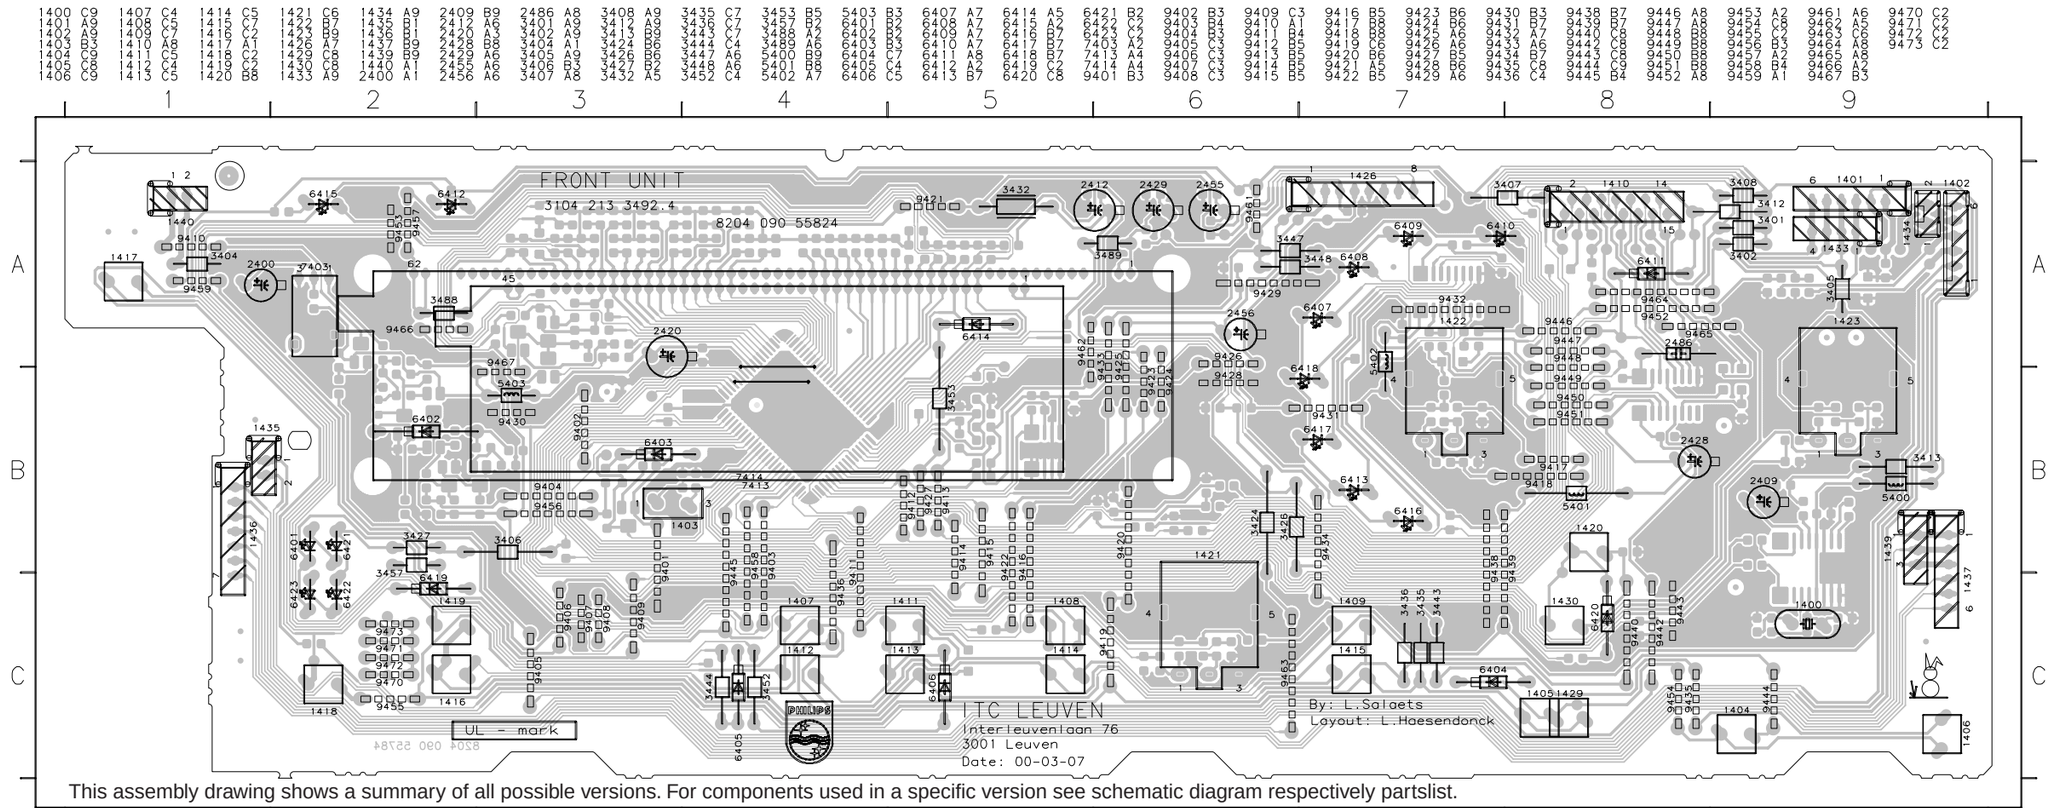

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.

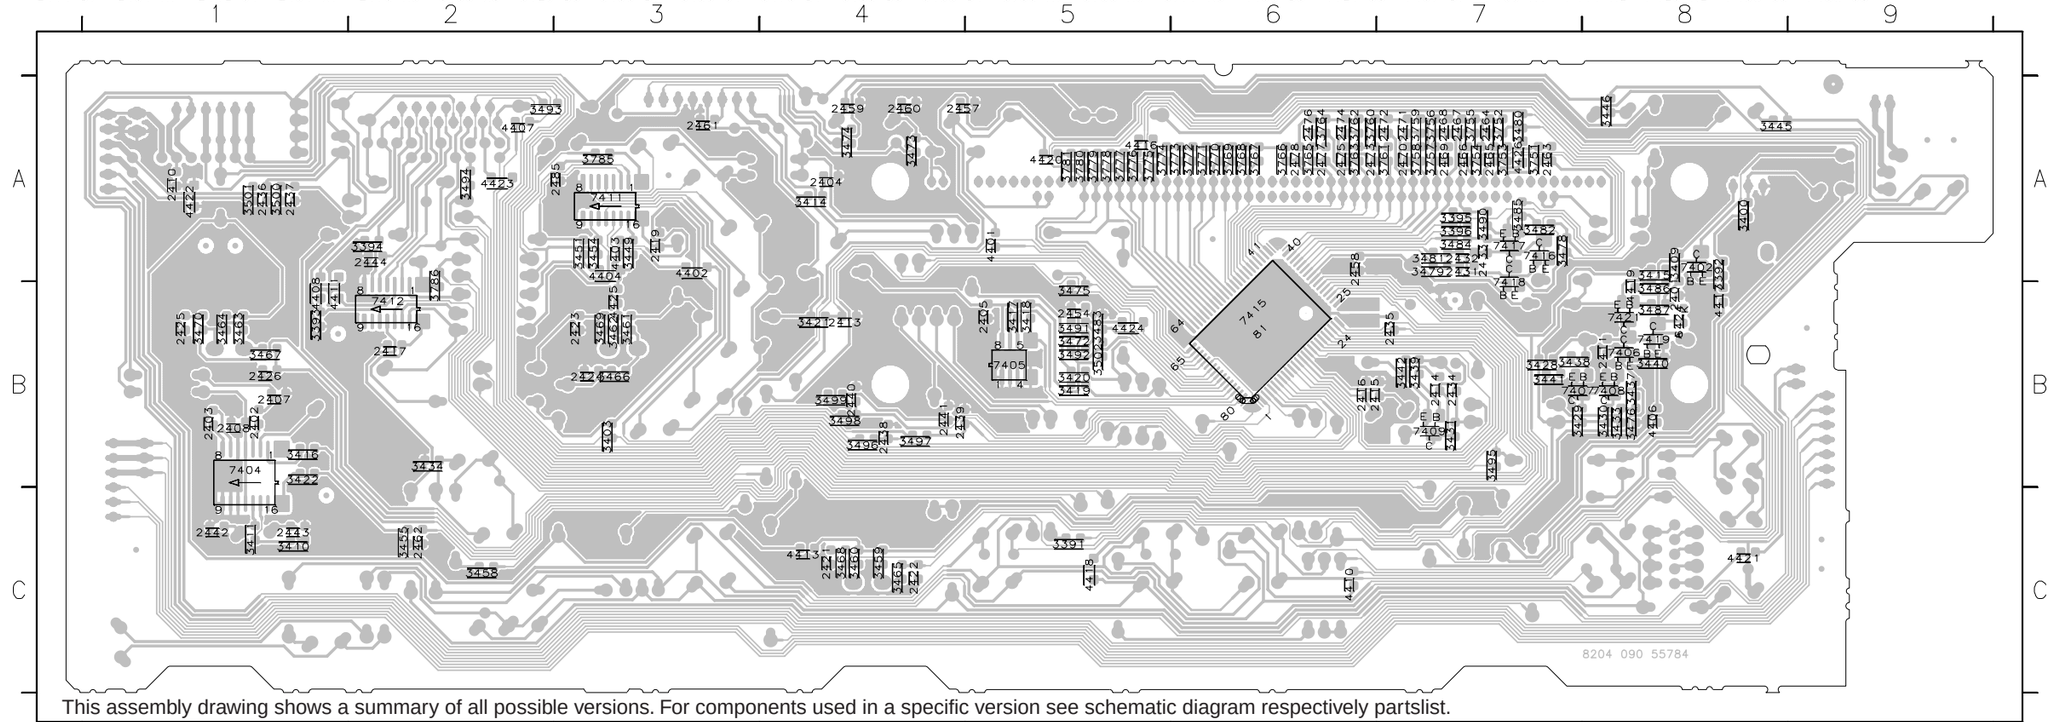

This assembly drawing shows a summary of all possible versions. For components used in a specific version see schematic diagram respectively partslist.

6-6

ELECTRICAL PARTSLIST - FRONT BOARD

MISCELLANEOUS

1400	4822 242 11033	CRYSTAL (4,332MH)
1403	4822 242 72066	CST8,00MT
1404	4822 276 13114	SWITCH, PUSH BUTTON
1405	4822 276 13114	SWITCH, PUSH BUTTON
1406	4822 276 13114	SWITCH, PUSH BUTTON
1407	4822 276 13114	SWITCH, PUSH BUTTON
1408	4822 276 13114	SWITCH, PUSH BUTTON
1409	4822 276 13114	SWITCH, PUSH BUTTON
1410	4822 265 10981	15FE-BT-VK-N
1411	4822 276 13114	SWITCH, PUSH BUTTON
1412	4822 276 13114	SWITCH, PUSH BUTTON
1413	4822 276 13114	SWITCH, PUSH BUTTON
1414	4822 276 13114	SWITCH, PUSH BUTTON
1415	4822 276 13114	SWITCH, PUSH BUTTON
1416	4822 276 13114	SWITCH, PUSH BUTTON
1417	4822 276 13114	SWITCH, PUSH BUTTON
1418	4822 276 13114	SWITCH, PUSH BUTTON
1419	4822 276 13114	SWITCH, PUSH BUTTON
1420	4822 276 13114	SWITCH, PUSH BUTTON
1421	4822 273 10372	SWITCH, ROTARY
1422	4822 273 10372	SWITCH, ROTARY
1423	4822 273 10365	ROTARY ENCODER 24P
1424	4822 265 11584	1P YKB21-5209
1428	4822 265 11336	3P. FEM. CINCH
8002	4822 320 12706	FLEXIBLE FOIL 15P 220MM

CAPACITORS

2400	4822 124 41584	100UF 20% 10V
2402	5322 122 31647	1NF10%X7R 63V
2403	5322 116 80853	560PF 5%NP0 63V
2404	5322 122 31647	1NF10%X7R 63V
2405	5322 122 32654	22NF10%X7R 63V
2407	5322 122 34099	470PF10%X7R 63V
2408	5322 122 32654	22NF10%X7R 63V
2409	4822 124 22652	2,2UF20% 50V
2410	5322 122 32654	22NF10%X7R 63V
2411	4822 122 33575	220PF 5% NP0 63V
2412	4822 124 41751	47UF 20% 50V
2413	5322 122 32654	22NF10%X7R 63V
2414	5322 122 32654	22NF10%X7R 63V
2415	5322 122 32658	22PF 5% 50V
2416	5322 122 32658	22PF 5% 50V
2417	5322 122 32654	22NF10%X7R 63V
2419	5322 122 32654	22NF10%X7R 63V
2420	4822 124 23432	100UF20% 10V
2421	5322 122 32654	22NF10%X7R 63V
2422	5322 122 32654	22NF10%X7R 63V
2423	5322 122 32654	22NF10%X7R 63V
2424	5322 122 32654	22NF10%X7R 63V
2425	5322 122 32654	22NF10%X7R 63V
2426	5322 122 32654	22NF10%X7R 63V
2427	5322 122 31647	1NF10%X7R 63V
2428	4822 124 40769	4,7UF20% 100V
2429	4822 124 41751	47UF 20% 50V
2430	4822 122 33575	220PF 5% NP0 63V
2431	5322 122 32531	100PF 5%NP0 50V
2432	5322 122 32531	100PF 5%NP0 50V
2433	5322 122 32531	100PF 5%NP0 50V
2434	4822 126 14076	220N 25V. P8020
2435	4822 122 33575	220PF 5% NP0 63V
2436	4822 122 33575	220PF 5% NP0 63V
2437	4822 122 33575	220PF 5% NP0 63V
2438	4822 122 33575	220PF 5% NP0 63V
2439	4822 122 33575	220PF 5% NP0 63V
2440	4822 122 33575	220PF 5% NP0 63V
2441	4822 122 33575	220PF 5% NP0 63V
2442	4822 126 13692	47PF 1% NP0 63V
2443	4822 126 13692	47PF 1% NP0 63V
2444	5322 122 32654	22NF10%X7R 63V
2445	5322 126 10223	4,7NF10%X7R 63V
2447	5322 126 10223	4,7NF10%X7R 63V
2448	5322 122 31647	1NF10%X7R 63V
2449	5322 122 31647	1NF10%X7R 63V
2454	5322 122 32654	22NF10%X7R 63V
2455	4822 124 41751	47UF 20% 50V
2456	4822 124 40433	47UF20% 25V
2457	5322 122 32654	22NF10%X7R 63V
2458	5322 122 32654	22NF10%X7R 63V
2459	5322 122 32654	22NF10%X7R 63V
2460	5322 122 32654	22NF10%X7R 63V
2461	5322 122 32654	22NF10%X7R 63V
2462	5322 122 31647	1NF10%X7R 63V
2463	5322 122 32531	100PF 5%NP0 50V
2464	5322 122 32531	100PF 5%NP0 50V
2465	5322 122 32531	100PF 5%NP0 50V
2466	5322 122 32531	100PF 5%NP0 50V
2467	5322 122 32531	100PF 5%NP0 50V
2468	5322 122 32531	100PF 5%NP0 50V
2469	5322 122 32531	100PF 5%NP0 50V
2470	5322 122 32531	100PF 5%NP0 50V
2471	5322 122 32531	100PF 5%NP0 50V
2472	5322 122 32531	100PF 5%NP0 50V
2473	5322 122 32531	100PF 5%NP0 50V
2474	5322 122 32531	100PF 5%NP0 50V
2475	5322 122 32531	100PF 5%NP0 50V
2476	5322 122 32531	100PF 5%NP0 50V
2477	5322 122 32531	100PF 5%NP0 50V
2478	5322 122 32531	100PF 5%NP0 50V
2485	5322 122 31647	1NF10%X7R 63V
2486	4822 122 33197	1NF 10% 50V

RESISTORS

3391	4822 051 10102	1K00 2% 0,25W
3392	4822 051 20223	22K00 5% 0,1W
3393	4822 051 20223	22K00 5% 0,1W
3394	4822 051 20223	22K00 5% 0,1W
3395	4822 051 20008	0R00 JUMP. (0805)
3400	4822 051 20479	47R00 5% 0,1W
3401	4822 050 21003	10K00 1% 0,6W
3402	4822 050 21003	10K00 1% 0,6W
3403	4822 117 11507	6K8 1% 0,1W
3404	4822 116 52219	330E 5% 0,5W
3405	4822 116 52257	22K 5% 0,5W
3406	4822 050 21003	10K00 1% 0,6W
3407	4822 050 21003	10K00 1% 0,6W
3408	4822 050 21003	10K00 1% 0,6W
3409	4822 051 10102	1K00 2% 0,25W
3410	4822 117 11449	2K2 1% 0,1W
3411	4822 117 13579	220K 1% 0.1W
3413	4822 050 11002	1K00 1% 0,4W
3414	4822 051 10102	1K00 2% 0,25W
3415	4822 051 20008	0R00 JUMP.
3416	4822 117 10833	10K 1% 0,1W
3417	4822 117 10833	10K 1% 0,1W
3418	4822 117 10833	10K 1% 0,1W
3419	4822 117 10833	10K 1% 0,1W
3420	4822 117 10833	10K 1% 0,1W
3421	4822 117 10833	10K 1% 0,1W
3422	4822 117 10833	10K 1% 0,1W
3424	4822 050 11002	1K00 1% 0,4W
3426	4822 050 11002	1K00 1% 0,4W
3427	4822 116 83868	150R 5% 0,5W
3428	4822 051 20273	27K00 5% 0,1W
3429	4822 051 20223	22K00 5% 0,1W
3430	4822 051 20223	22K00 5% 0,1W
3431	4822 117 10833	10K 1% 0,1W
3432 ⚠	4822 052 10478	4R70 5% 0,33W
3433	4822 117 10833	10K 1% 0,1W
3434	4822 051 20223	22K00 5% 0,1W
3435	4822 116 52257	22K 5% 0,5W
3436	4822 116 52257	22K 5% 0,5W
3437	4822 117 10837	100K 1% 0.1W
3438	4822 117 13579	220K 1% 0.1W
3439	4822 117 10833	10K 1% 0,1W
3440	4822 051 20479	47R00 5% 0,1W
3441	4822 117 11149	82K 1% 0,1W
3442	4822 117 10837	100K 1% 0.1W
3443	4822 116 52219	330E 5% 0,5W
3444	4822 116 52219	330E 5% 0,5W
3445	4822 117 13577	330R 1% 1,25W
3446	4822 117 13577	330R 1% 1,25W
3447	4822 116 52219	330E 5% 0,5W
3448	4822 116 52219	330E 5% 0,5W
3449	4822 117 10837	100K 1% 0.1W
3451	4822 117 10833	10K 1% 0,1W
3452	4822 116 52219	330E 5% 0,5W
3453	4822 116 52219	330E 5% 0,5W
3455	4822 051 20223	22K00 5% 0,1W
3457	4822 116 52219	330E 5% 0,5W
3458	4822 117 13577	330R 1% 1,25W
3459	4822 117 10833	10K 1% 0,1W
3460	4822 117 10833	10K 1% 0,1W
3461	4822 117 10833	10K 1% 0,1W
3462	4822 117 10833	10K 1% 0,1W
3463	4822 117 10833	10K 1% 0,1W
3464	4822 117 10833	10K 1% 0,1W
3465	4822 117 11503	220R 1% 0.1W
3466	4822 117 11503	220R 1% 0.1W
3467	4822 117 11503	220R 1% 0.1W
3468	4822 117 11503	220R 1% 0.1W
3469	4822 117 11503	220R 1% 0.1W
3470	4822 117 11503	220R 1% 0.1W
3471	4822 051 10102	1K00 2% 0,25W
3472	4822 051 10102	1K00 2% 0,25W
3473	4822 051 20008	0R00 JUMP. (0805)
3474	4822 051 20008	0R00 JUMP. (0805)
3475	4822 117 10837	100K 1% 0.1W
3477	4822 117 12521	68R 1% 0,1W
3478	4822 117 10837	100K 1% 0.1W
3479	4822 051 10102	1K00 2% 0,25W
3480	4822 117 10837	100K 1% 0.1W
3481	4822 051 10102	1K00 2% 0,25W
3482	4822 117 10837	100K 1% 0.1W
3484	4822 051 10102	1K00 2% 0,25W
3485	4822 051 20008	0R00 JUMP. (0805)
3491	4822 117 10837	100K 1% 0.1W
3493	4822 051 20471	470R00 5% 0,1W
3494	4822 051 20471	470R00 5% 0,1W
3495	4822 051 20471	470R00 5% 0,1W
3496	4822 051 20471	470R00 5% 0,1W
3497	4822 051 20471	470R00 5% 0,1W
3498	4822 051 20471	470R00 5% 0,1W
3499	4822 051 20471	470R00 5% 0,1W
3500	4822 051 20471	470R00 5% 0,1W
3501	4822 051 20471	470R00 5% 0,1W
3502	4822 051 10102	1K00 2% 0,25W
3751	4822 051 20333	33K00 5% 0,1W
3752	4822 051 20333	33K00 5% 0,1W
3753	4822 051 20333	33K00 5% 0,1W
3754	4822 051 20333	33K00 5% 0,1W
3755	4822 051 20333	33K00 5% 0,1W
3756	4822 051 20333	33K00 5% 0,1W
3757	4822 051 20333	33K00 5% 0,1W
3758	4822 051 20333	33K00 5% 0,1W
3759	4822 051 20333	33K00 5% 0,1W
3760	4822 051 20333	33K00 5% 0,1W
3761	4822 051 20333	33K00 5% 0,1W
3762	4822 051 20333	33K00 5% 0,1W
3763	4822 051 20333	33K00 5% 0,1W
3764	4822 051 20333	33K00 5% 0,1W
3765	4822 051 20333	33K00 5% 0,1W
3766	4822 051 20333	33K00 5% 0,1W
3767	4822 051 20333	33K00 5% 0,1W
3768	4822 051 20333	33K00 5% 0,1W
3769	4822 051 20333	33K00 5% 0,1W
3770	4822 051 20333	33K00 5% 0,1W
3771	4822 051 20333	33K00 5% 0,1W
3772	4822 051 20333	33K00 5% 0,1W
3773	4822 051 20333	33K00 5% 0,1W
3774	4822 051 20333	33K00 5% 0,1W
3775	4822 051 20333	33K00 5% 0,1W
3776	4822 051 20333	33K00 5% 0,1W
3777	4822 051 20333	33K00 5% 0,1W
3778	4822 051 20333	33K00 5% 0,1W
3779	4822 051 20333	33K00 5% 0,1W
3780	4822 051 20333	33K00 5% 0,1W
3781	4822 051 20333	33K00 5% 0,1W
3785	4822 051 10102	1K00 2% 0,25W
3786	4822 051 10102	1K00 2% 0,25W
4401	4822 051 20008	0R00 JUMP. (0805)
4402	4822 051 20008	0R00 JUMP. (0805)
4403	4822 051 20008	0R00 JUMP. (0805)
4404	4822 051 20008	0R00 JUMP. (0805)
4406	4822 051 20008	0R00 JUMP. (0805)
4407	4822 051 20008	0R00 JUMP. (0805)
4408	4822 051 20008	0R00 JUMP. (0805)
4410	4822 051 20008	0R00 JUMP. (0805)
4411	4822 051 20008	0R00 JUMP. (0805)
4413	4822 051 20008	0R00 JUMP. (0805)
4416	4822 051 20008	0R00 JUMP. (0805)
4417	4822 051 20008	0R00 JUMP. (0805)
4418	4822 051 20008	0R00 JUMP. (0805)
4420	4822 051 20008	0R00 JUMP. (0805)
4421	4822 051 20008	0R00 JUMP. (0805)
4422	4822 051 20008	0R00 JUMP. (0805)
4423	4822 051 20008	0R00 JUMP. (0805)
4424	4822 051 20008	0R00 JUMP. (0805)
4425	4822 051 20008	0R00 JUMP. (0805)
4426	4822 051 20008	0R00 JUMP. (0805)
4450	4822 051 20008	0R00 JUMP. (0805)

COILS & FILTERS

5400	4822 157 11477	LAL02TB2R2J
5401	4822 157 11477	LAL02TB2R2J
5402	4822 157 11477	LAL02TB2R2J
5403	4822 157 11477	LAL02TB2R2J

DIODES

6400	9322 100 14682	LTL1214A
6401	4822 130 82978	LTL-16KPE-P
6402	4822 130 30621	1N4148
6403	4822 130 30621	1N4148
6404	4822 130 30621	1N4148
6405	4822 130 30621	1N4148
6406	4822 130 30621	1N4148
6407	4822 130 82978	LTL-16KPE-P
6408	4822 130 82978	LTL-16KPE-P
6409	4822 130 82978	LTL-16KPE-P
6410	4822 130 82978	LTL-16KPE-P
6412	4822 130 82978	LTL-16KPE-P
6413	4822 130 82978	LTL-16KPE-P
6414	4822 130 30621	1N4148
6415	4822 130 82978	LTL-16KPE-P
6416	4822 130 82978	LTL-16KPE-P
6417	4822 130 82978	LTL-16KPE-P
6418	4822 130 82978	LTL-16KPE-P
6419	4822 130 30621	1N4148
6420	4822 130 30621	1N4148
6421	4822 130 82978	LTL-16KPE-P

TRANSISTORS & ICs

7402	4822 130 11607	PDTA144ET
7403	4822 130 10165	GP1U28XP
7404	4822 209 31981	SAA6579T
7405	4822 209 17445	M24C08-MN6
7406	4822 130 60511	BC847B
7407	4822 130 60511	BC847B
7408	4822 130 60511	BC847B
7409	4822 130 60511	BC847B
7411	5322 209 11306	HEF4094BT
7412	5322 209 11306	HEF4094BT
7413	2722 171 07168	16-MT-65GK
7415	3103 308 84190	TMP87CS71F/FR975.1
7416	4822 130 60511	BC847B
7417	4822 130 60511	BC847B
7418	4822 130 60511	BC847B

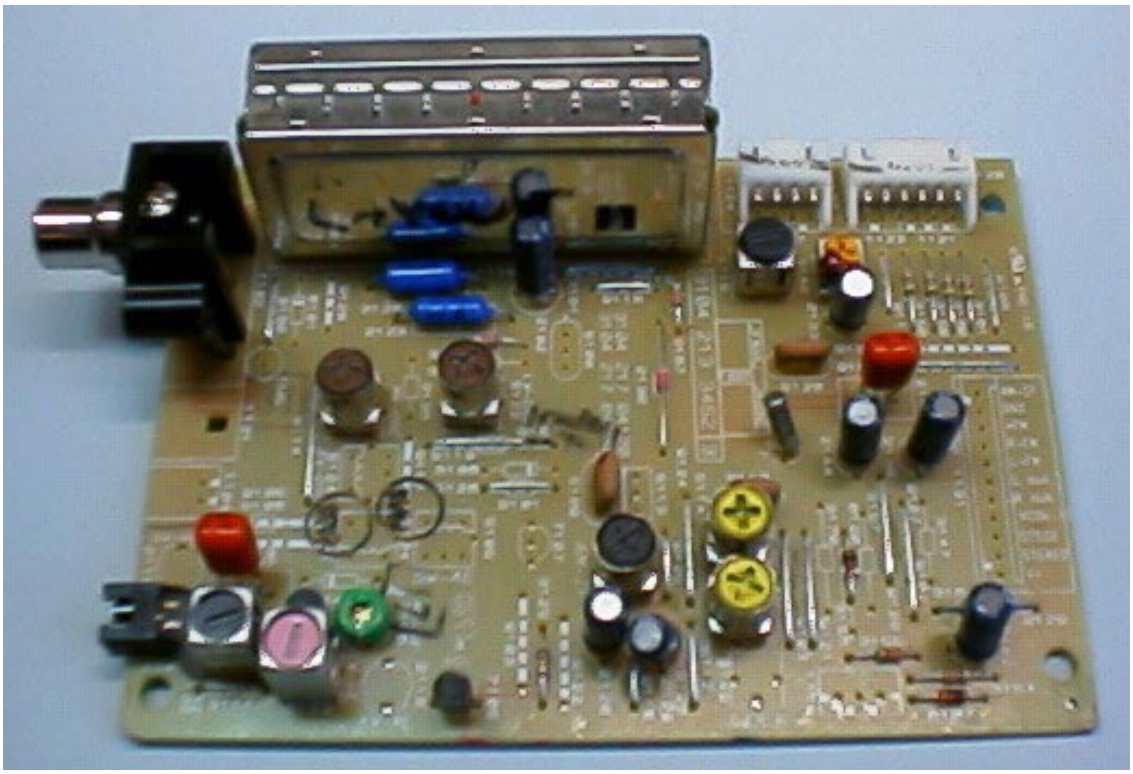

TUNER 95 BOARD

TABLE OF CONTENTS

Adjustment table 7A-2
Blockdiagram 7A-3
Component layout 7A-4
Circuit diagram 7A-5
Partslist 7A-6

TUNER 95 bis Adjustment Table (FM, MW, LW with Frame antenna)

Waverange	Input frequency	Input	Set tuned to	Adjust	Output	Scope / Voltmeter
VARICAP ALIGNMENT						
FM (50)			108 MHz	check		7 ... 9V
87.5 - 108 MHz			87.5 MHz	check		1.3 ... 2V
MW (9)			1602 kHz	5123	6	8.3V ± 0.2V
531 - 1602 kHz			531 kHz	check		1V ± 0.4V
LW (3)			279 kHz	5122		8.3V ± 0.2V
153 - 279 kHz			153 kHz	check		1V ± 0.4V
FM – DETECTION						
FM	98 Mhz 1mV continuous wave ***short pin 21 (IC7101) to ground***	A	98 MHz	5107	1 2	0mV ± 3mV
FM – VCO						
FM	98 Mhz 1 mV continuous wave	A	98 MHz	3142	3	152kHz ± 1 kHz
DISTORTION						
FM	98 Mhz 1 mV 90 % L + 9 % pilot mod = 1kHz	A	98MHz	mixcoil inside Tuner 1110	4	Distortion minimum
AM – IF						
MW	450kHz Δf = 10kHz Low as possible Swept signal	100nF 50E	MW	5111 5112	7	symmetrical and max. height
	450kHz continuous wave	C		5114	1 2	0mV ± 2mV
AM - RF						
MW	558kHz Mod = 1kHz 30 % AM 1494 kHz	B	558kHz	5102	7	MAX
			1494kHz	2106		
LW	198kHz mod = 1kHz 30 % AM	*	198kHz	5103		MAX

adjtable for 3104 217 04121/04341

* Signal send via a frame antenna
(..) = tuning grid in kHz

repeat

7A-3

BLOCKDIAGRAM

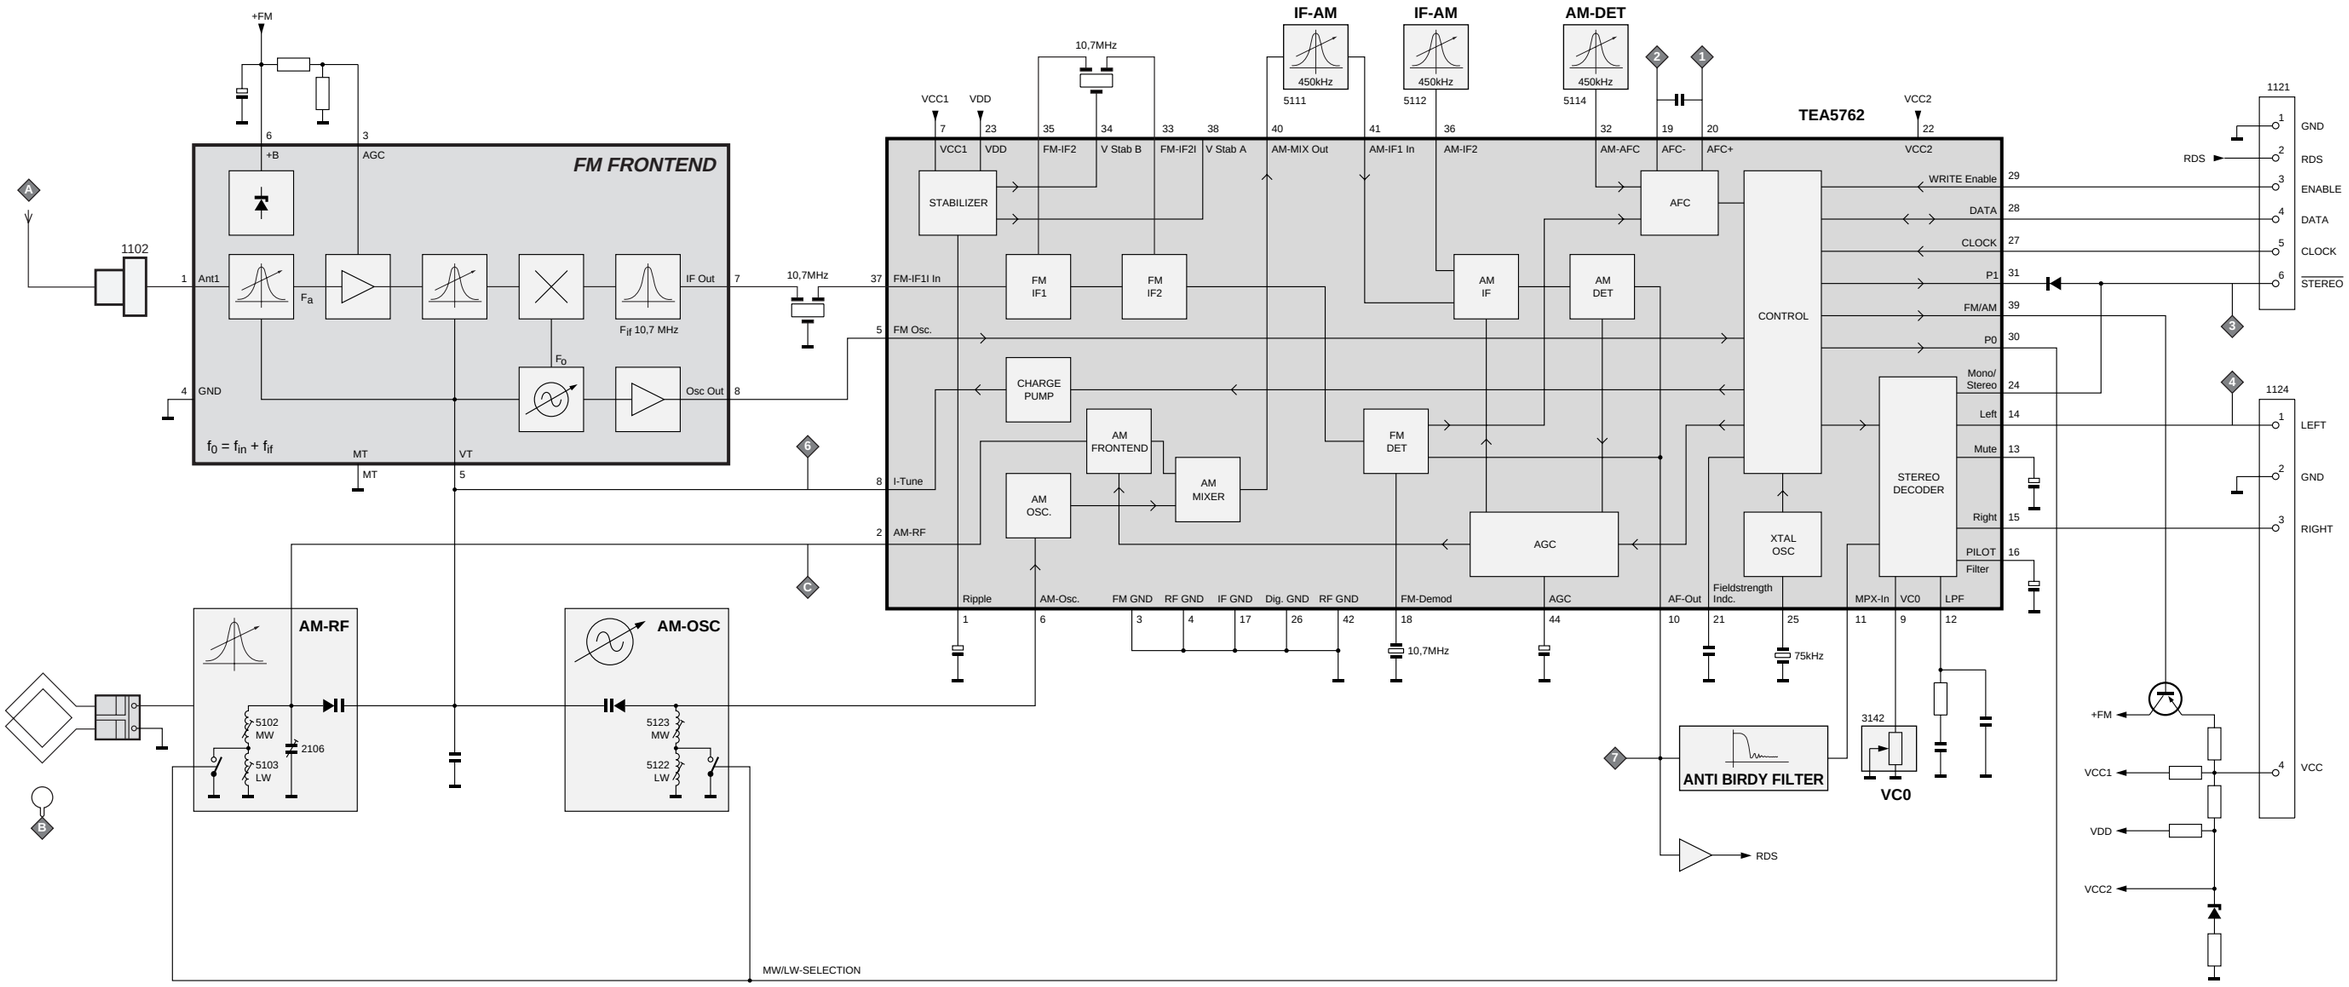

7A-4

1102	F4	2107	C4	2128	C7	2136	G10	2144	E10	2160	E9	3120	D6	3132	E5	3143	G8	3153	G9	3163	F8	3176	D9	3188	G11	5111	C8	6106	E7	7110	D11	9108	G11	9121	D9
1103	C4	2108	C6	2129	C8	2137	E11	2145	G11	2161	E9	3123	E4	3134	E5	3144	H9	3154	C10	3164	C11	3177	F7	3192	D8	5112	C9	6107	B10	7122	F7	9111	C4	9123	D9
1110	G7	2109	C5	2130	F8	2138	E10	2147	G11	2162	C11	3124	E5	3137	G5	3145	F9	3155	C10	3165	D8	3178	B8	3197	C7	5114	D8	6120	D10	7124	G6	9114	E5	9125	D8
1121	H11	2120	F5	2131	F9	2139	E8	2148	E9	3103	H6	3125	C7	3138	D9	3146	B10	3158	G11	3167	F8	3181	D8	5102	C4	5115	G9	7101	E9	9100	F4	9115	C8	9126	C8
1124	H9	2122	E6	2132	F9	2140	F10	2150	F8	3104	G6	3128	F6	3139	F8	3147	H9	3159	G11	3169	D5	3183	E7	5103	C5	5121	E9	7103	G9	9101	E7	9116	G8		
1126	G10	2123	F6	2133	F10	2141	E10	2151	F9	3107	G7	3129	E6	3140	H8	3150	C11	3160	G11	3171	D11	3184	E7	5107	F10	5122	E7	7104	D5	9102	D10	9118	G10		
2102	G7	2125	G6	2134	G10	2142	E9	2152	F9	3108	C6	3130	E6	3141	G9	3151	C10	3161	G11	3172	F7	3185	E7	5109	D7	5123	E5	7105	B6	9104	E6	9119	G7		
2106	C5	2127	F9	2135	G11	2143	C10	2158	D10	3109	B7	3131	C6	3142	G10	3152	G9	3162	D9	3173	F7	3186	G8	5110	E9	6105	D4	7109	C6	9107	F11	9120	D10		

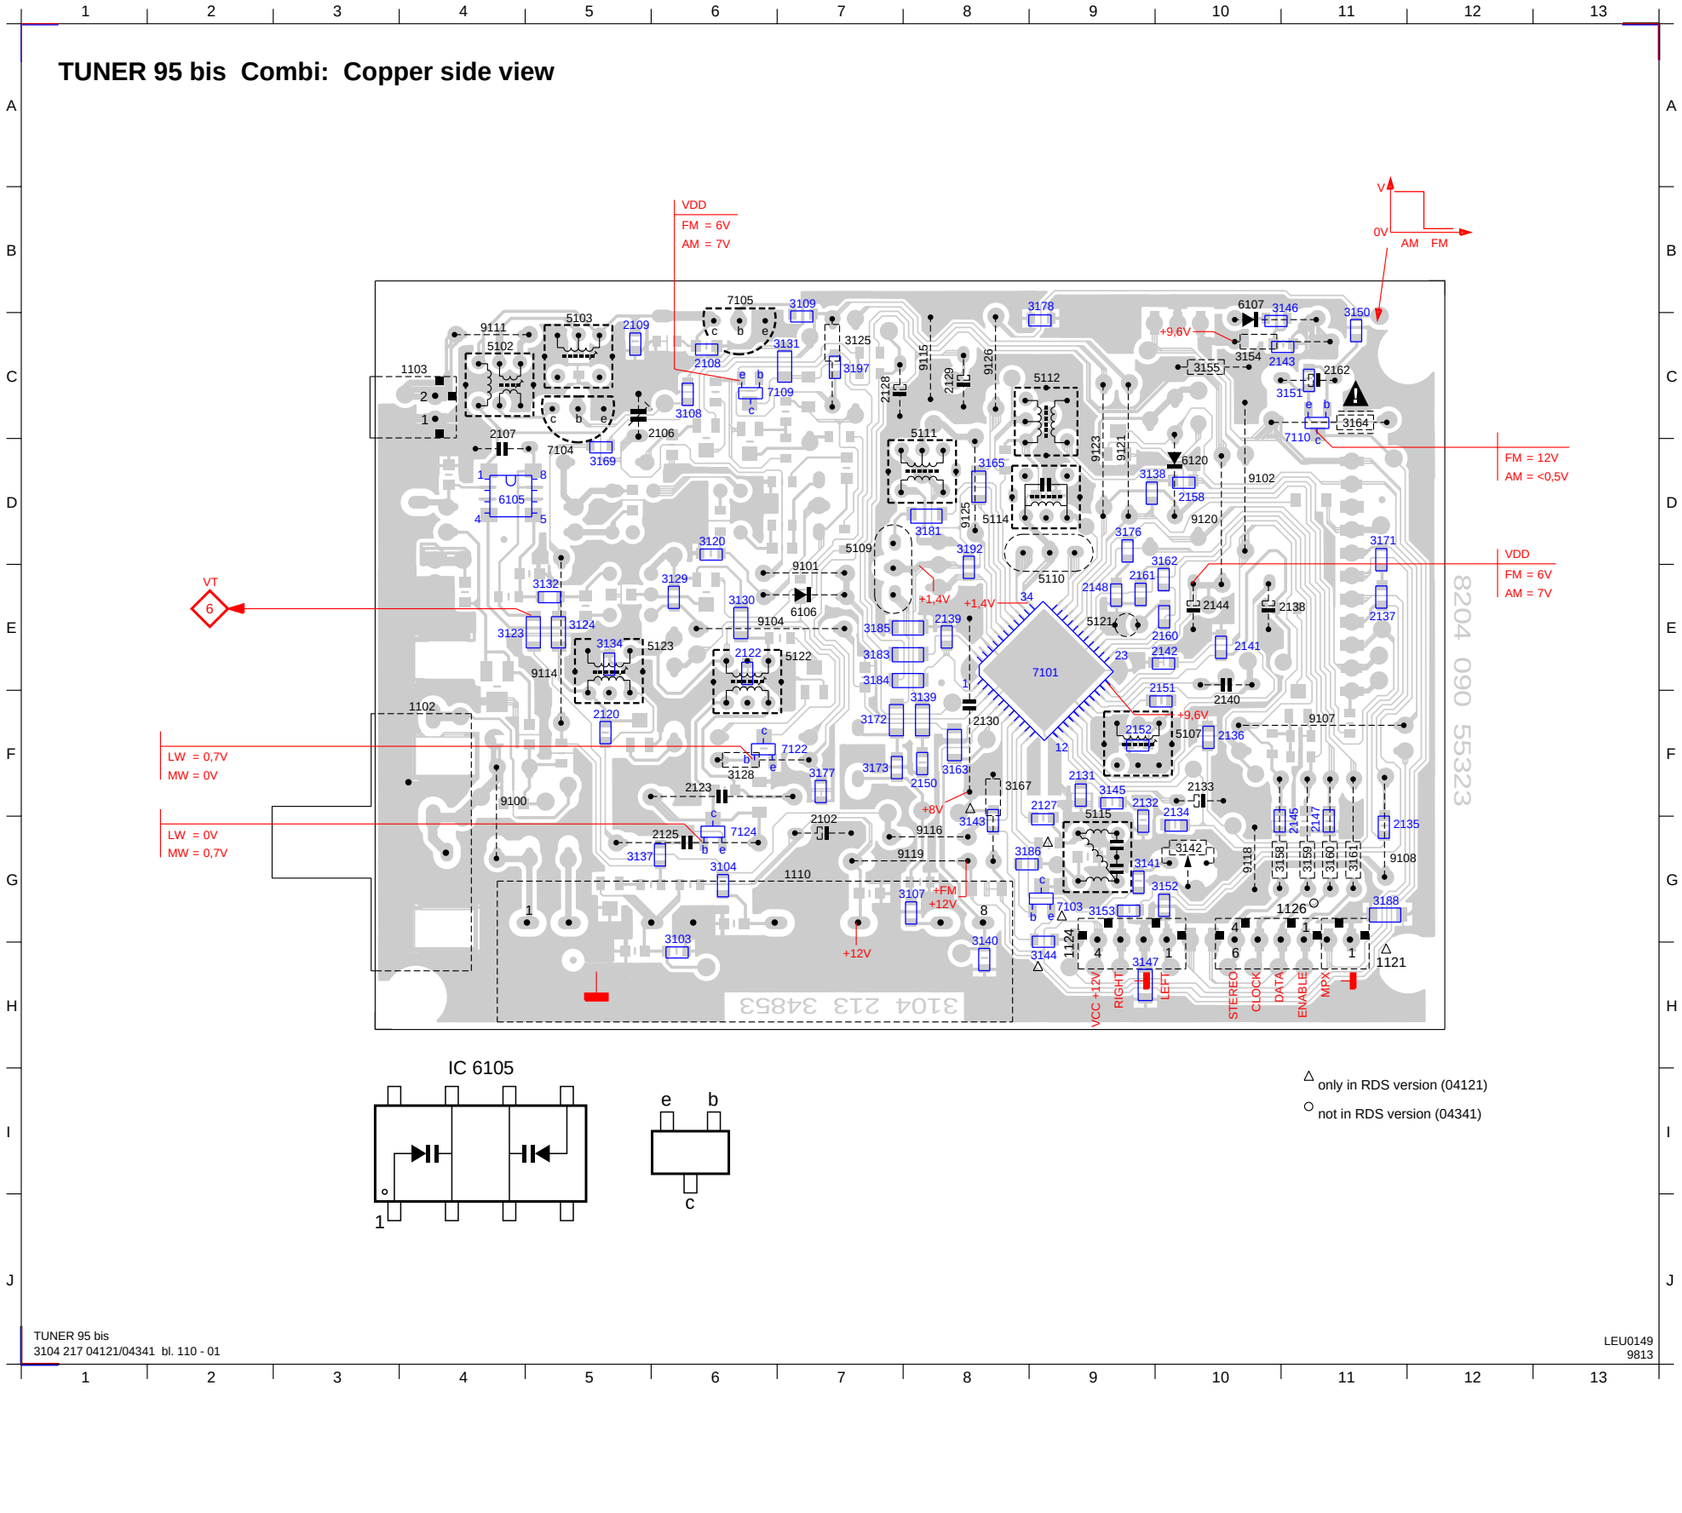

7A-5

1102 D1 1124 F21 2107 J6 2122 M7 2128 I13 2132 I17 2136 H19 2140 C14 2144 K20 2150 C6 2160 I15 3104 G4 3120 H5 3128 L9 3132 J7 3141 I16 3145 I17 3151 I20 3155 J20 3161 D19 3167 I20 3177 M10 3184 I8 3192 C12 5107 J12 5112 C12 5122 L7 6106 H5 7103 K17 7110 I19
1103 G2 1126 E20 2108 L2 2123 L7 2129 I8 2133 G18 2137 G19 2141 H15 2145 E19 2151 H12 2161 I15 3107 C6 3123 I6 3129 K8 3134 L6 3142 I16 3146 L20 3152 F20 3158 E19 3162 I15 3169 L5 3178 N20 3185 I13 3197 L11 5109 B6 5114 C13 5123 K7 6107 K20 7104 J2 7122 L9
1110 D4 2102 C2 2109 L3 2125 L7 2130 J20 2134 G19 2138 H18 2142 K19 2147 E19 2152 I11 2162 H20 3108 J1 3124 K7 3130 K8 3137 L5 3143 K17 3147 N20 3153 G20 3159 E19 3163 J8 3172 B6 3181 C7 3186 K16 5102 I3 5110 C9 5115 J15 6105a I5 6120 E17 7105 K17 7124 L6
1121 C21 2106 J4 2120 K7 2127 H16 2131 I17 2135 F19 2139 I7 2143 K20 2148 E19 2158 L18 3103 G3 3109 K1 3125 L11 3131 M10 3140 F7 3144 K17 3150 H19 3154 J20 3160 D19 3164 I20 3173 B6 3183 I13 3188 M20 5103 L4 5111 C11 5121 I15 6105b I6 7101 C15 7109 L10

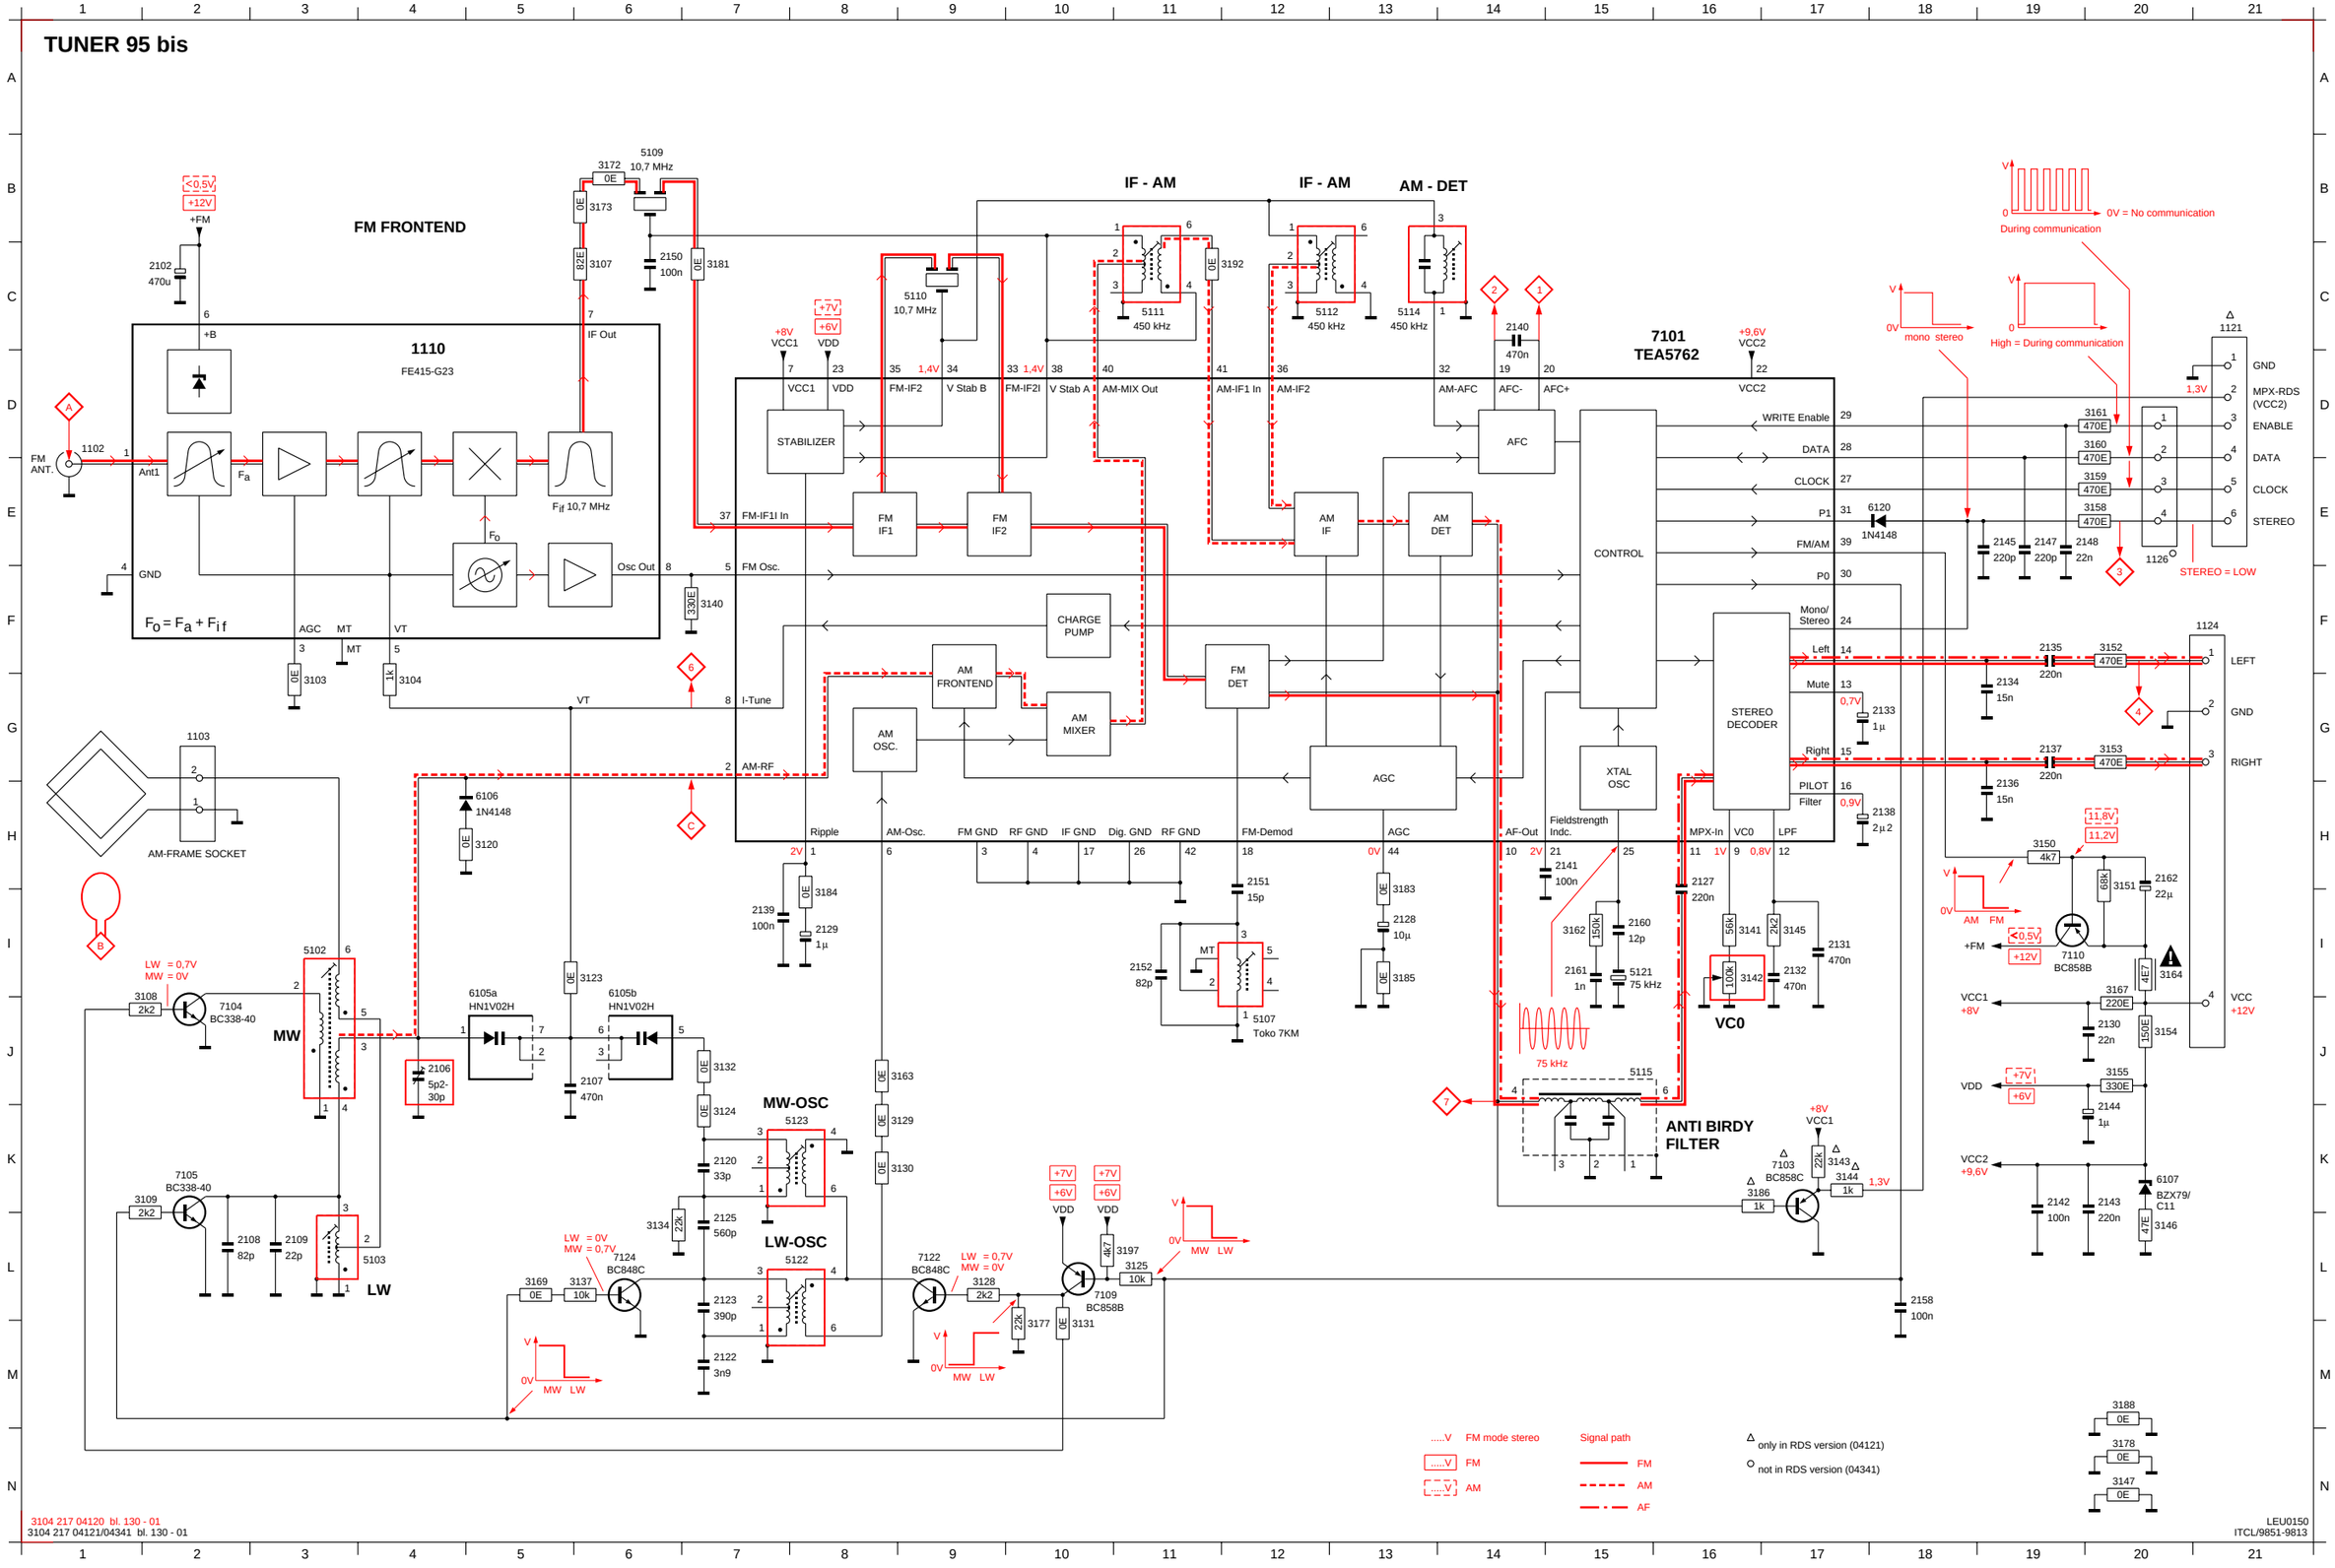

3104 217 04120 bl. 130 - 01
3104 217 04121/04341 bl. 130 - 01

LEU0150
ITCL/9851-9813

ELECTRICAL PARTSLIST - TUNER 95 BOARD

MISCELLANEOUS

1102	4822 267 10283	YKD31-0432
1103	4822 265 31184	S2B-XH-A-BK
1110	4822 210 10739	FE415-G23

CAPACITORS

2102	4822 124 80791	470UF20%16V
2106	4822 125 60102	5P2-30P N750100V
2107	4822 121 51252	470NF 5%63V
2108	4822 126 13695	82PF 1% NP063V
2109	5322 122 32658	22PF 5% 50V
2120	5322 122 32659	33PF5%50V
2122	5322 126 10465	3,9NF 10% X7R 50V 08
2123	4822 121 10766	390PF 1% 630V KP464
2125	4822 121 10578	560P1%630V
2127	4822 122 32927	220NF +80-20%Y5V 50V
2128	4822 124 41579	10UF 20% 50V
2129	4822 124 40242	1UF20%63V
2130	4822 126 11585	22NF+80-20% Y5V 25V
2131	4822 122 33325	470NF 16V
2132	4822 122 33325	470NF 16V
2133	4822 124 40242	1UF20%63V
2134	4822 126 13188	15NF 5% X7R63V
2135	4822 122 32927	220NF +80-20%Y5V 50V
2136	4822 126 13188	15NF 5% X7R63V
2137	4822 122 32927	220NF +80-20%Y5V 50V
2138	4822 124 41576	2,2UF 20% 50V
2139	4822 126 10002	100NF20%Y5V 25V
2140	4822 121 51252	470NF 5%63V
2141	4822 122 31947	100NF20%Y5V 63V
2142	4822 122 31947	100NF20%Y5V 63V
2143	4822 122 32927	220NF +80-20%Y5V 50V
2144	4822 124 40242	1UF20%63V
2145	4822 122 33575	220PF5%NPO50V
2147	4822 122 33575	220PF5%NPO50V
2148	4822 122 33809	22NF20%Y5V 50V
2150	4822 122 31947	100NF20%Y5V 63V
2151	4822 126 14236	50V 15P 5%
2152	4822 126 13695	82PF 1% NP063V
2158	4822 122 31947	100NF20%Y5V 63V
2160	4822 122 32139	12PF 2%NP0 63V
2161	5322 122 34123	1NF10%X7R 50V
2162	4822 124 81151	22UF 50V

RESISTORS

3103	4822 051 20008	0R00 JUMP. (0805)
3104	4822 051 10102	1K002% 0,25W
3107	4822 051 20829	82R005%0,1W
3108	4822 117 11449	2K2 1%0,1W
3109	4822 117 11449	2K2 1%0,1W
3110	4822 051 20008	0R00 JUMP. (0805)
3111	4822 051 20008	0R00 JUMP. (0805)
3120	4822 051 20008	0R00 JUMP. (0805)
3123	4822 051 10008	0R005% 0,25W
3124	4822 051 10008	0R005% 0,25W
3125	4822 116 83864	10K5%0,5W
3128	4822 116 52256	2K2 5%0,5W
3129	4822 051 20008	0R00 JUMP. (0805)
3130	4822 051 10008	0R005% 0,25W
3131	4822 051 10008	0R005% 0,25W
3132	4822 051 20008	0R00 JUMP. (0805)
3134	4822 051 20223	22K005%0,1W
3135	4822 051 20008	0R00 JUMP. (0805)
3137	4822 117 10833	10K1%0,1W
3138	4822 051 20008	0R00 JUMP. (0805)
3139	4822 051 10008	0R005% 0,25W
3140	4822 051 20331	330R005%0,1W
3141	4822 117 11148	56K1%0,1W
3142	4822 100 11163	100K30%LIN0,1W
3143	4822 051 20223	22K005%0,1W
3144	4822 051 10102	1K002% 0,25W
3145	4822 117 11449	2K2 1%0,1W
3146	4822 051 20479	47R005%0,1W
3147	4822 051 10008	0R005% 0,25W
3150	4822 051 20472	4K705%0,1W
3151	4822 051 20683	68K005%0,1W
3152	4822 051 20471	470R005%0,1W
3153	4822 051 20471	470R005%0,1W
3154	4822 116 83868	150R5%0,5W
3155	4822 116 52219	330E5%0,5W
3158	4822 116 83883	470R5%0,5W
3159	4822 116 83883	470R5%0,5W
3160	4822 116 83883	470R5%0,5W
3161	4822 116 83883	470R5%0,5W
3162	4822 051 20224	220K005%0,1W
3163	4822 051 10008	0R005% 0,25W
3164	4822 052 10478	4R705% 0,33W
3165	4822 051 10008	0R005% 0,25W
3167	4822 116 83872	220R5%0,5W
3169	4822 051 20008	0R00 JUMP. (0805)
3171	4822 051 20008	0R00 JUMP. (0805)
3172	4822 051 10008	0R005% 0,25W
3173	4822 051 20008	0R00 JUMP. (0805)
3176	4822 051 20008	0R00 JUMP. (0805)
3177	4822 051 20223	22K005%0,1W

7A-6

ELECTRICAL PARTSLIST - TUNER 95 BOARD

RESISTORS

3178	4822 051 10008	0R005% 0,25W
3181	4822 051 10008	0R005% 0,25W
3183	4822 051 10008	0R005% 0,25W
3184	4822 051 10008	0R005% 0,25W
3185	4822 051 10008	0R005% 0,25W
3186	4822 051 10102	1K002% 0,25W
3188	4822 051 10008	0R005% 0,25W
3192	4822 051 20008	0R00 JUMP. (0805)
3197	4822 051 20472	4K705%0,1W

COILS & FILTERS

5102	4822 157 71634	MW AERIAL
5103	4822 157 71635	LW AERIAL
5107	4822 157 11443	2U4 10M7
5109	4822 157 71639	SFE10,7MJA10H-A-TF21
5110	4822 242 70665	SFE10,7MS3-A
5111	4822 158 60511	AM-1F
5112	4822 157 70302	F7MCS-12216N
5114	4822 157 70302	F7MCS-12216N
5115	4822 157 71636	BIRDIE COIL
5121	4822 242 10261	T6252F00 (75KHZ)
5122	4822 157 60517	110,00 UH8%
5123	4822 157 60517	110,00 UH8%

DIODES

6105	4822 130 83075	HN1V02H-B
6106	4822 130 30621	1N4148
6107	4822 130 34488	BZX79-B11
6120	4822 130 30621	1N4148

TRANSISTORS & INTERGRATED CIRCUITS

7101	4822 209 90315	TEA5762H/V1
7103	4822 130 42513	BC858C
7104	5322 130 44779	BC338-40
7105	5322 130 44779	BC338-40
7109	5322 130 41983	BC858B
7110	5322 130 41983	BC858B
7122	5322 130 42136	BC848C
7124	5322 130 42136	BC848C

7B-1
7B-1

BLOCKDIAGRAM

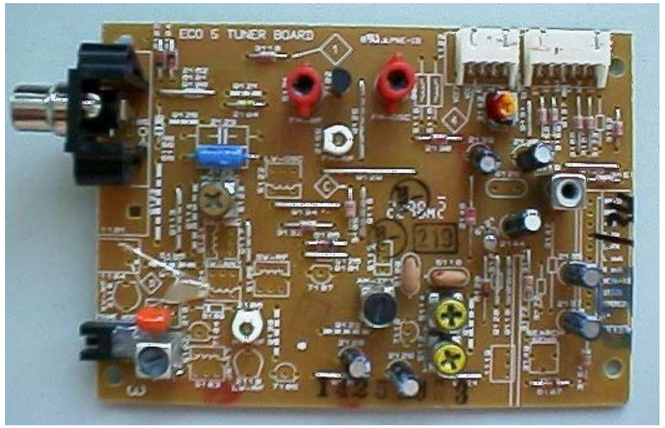

TUNER BOARD ECO5

TABLE OF CONTENTS

Blockdiagram 7B-1
Component layout 7B-2
Adjustmanttable 7B-2
Circuit diagram 7B-3
Partslist 7B-4

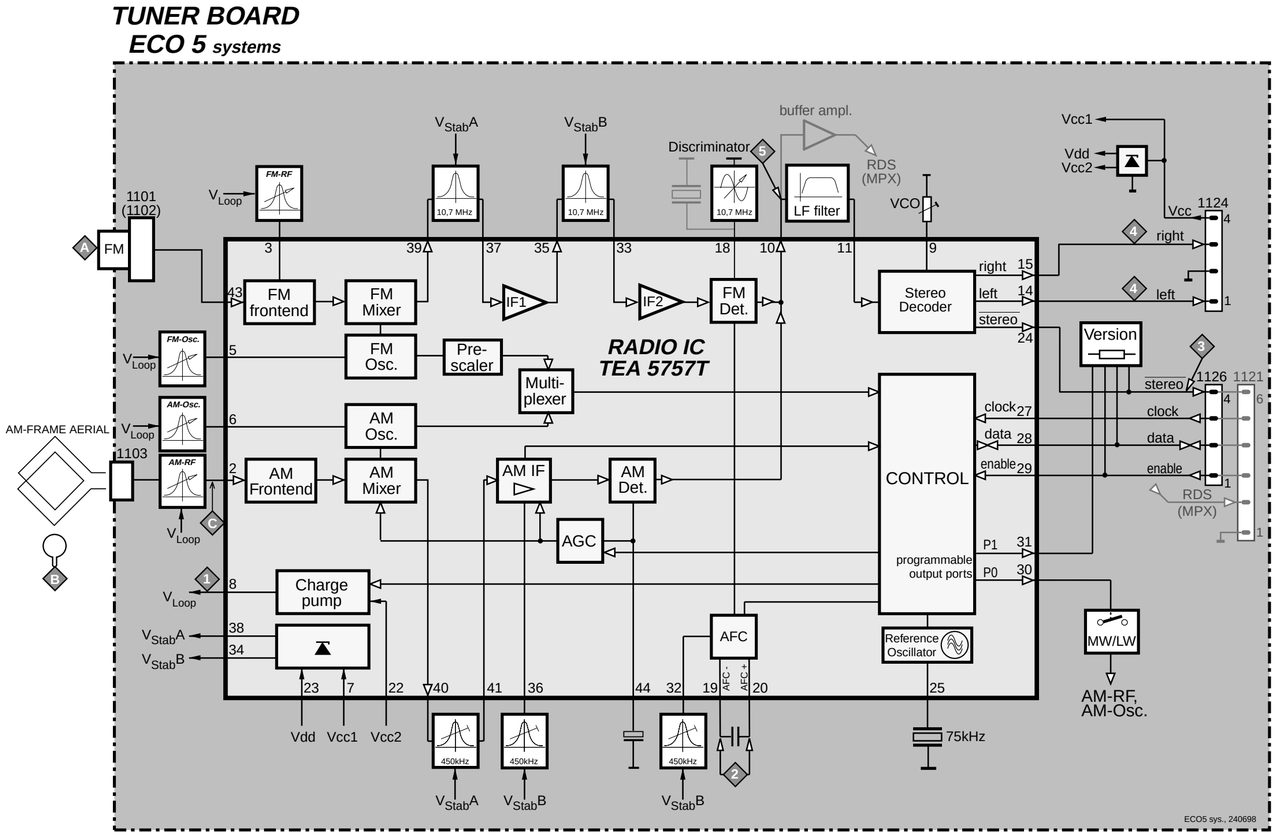

1101	A1	2106	C2	2137	C5	3149	C5	3173	A5	5114	C4	5130	A3	7104	C2	9117	B2	9129	B3
1102	A1	2107	C2	2138	A5	3152	A5	5102	C2	5115	A4	5131	A3	7105	C3	9118	B4	9130	C3
1103	C1	2110	C2	2144	B5	3154	C5	5103	C2	5116	A4	6101	A2	7107	B3	9119	C4	9131	A5
1104	B1	2115	C1	2148	B4	3157	B5	5104	C2	5119	B5	6102	A1	7119	C4	9120	B4	9133	C3
1105	A1	2123	A2	2155	A3	3158	A5	5105	B2	5120	B4	6103	A1	9100	A2	9121	A2	9134	B3
1119	C5	2125	A2	2162	A2	3159	A5	5106	B2	5121	B4	6104	A2	9101	B3	9122	C3	9136	A5
1120	A5	2128	C3	3105	B3	3160	A5	5109	B4	5122	B3	6106	B3	9105	B2	9123	B1	9137	A5
1130	B5	2129	C4	3110	A2	3161	A5	5110	B4	5123	B2	6107	C5	9111	C2	9124	C4		
1131	B5	2130	A4	3132	B3	3170	C5	5111	C3	5124	B2	6109	C2	9113	B2	9125	A3		
2104	A2	2133	A4	3142	A4	3171	C5	5112	C4	5126	B3	6120	C4	9114	B2	9126	B5		
2105	A1	2135	B5	3147	B5	3172	C5	5113	B3	5127	B4	7102	A3	9115	B3	9128	A2		

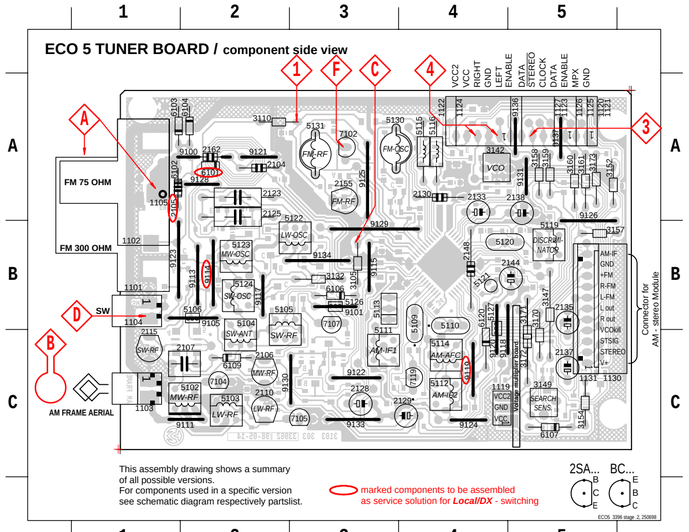
ECO 5 TUNER BOARD / component side view
FM 75 OHM
FM 300 OHM
AM FRAME AERIAL
SW
This assembly drawing shows a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.
marked components to be assembled as service solution for Local/DX - switching
2SA... BC...
Connector for AM - stereo Module
ECOS 3396 stage 2, 250698

2101	C4	2118	B4	2139	B2	2153	C3	2166	B2	3112	A3	3123	A3	3143	C2	3175	A2	4105	B3	4153	B4	6105	A4	7120	B4
2102	C4	2119	B4	2141	B1	2154	C3	2167	B2	3113	A2	3125	A3	3144	C2	3176	C2	4106	B4	4154	C3	6110	A4	7121	B3
2103	C3	2120	B4	2142	B1	2156	C4	2168	B1	3114	A3	3126	B3	3145	C2	3177	A1	4107	C4	4155	A4	6111	B4	7122	B4
2108	A4	2122	B3	2143	A1	2157	B4	3101	C3	3115	A3	3127	B3	3146	A1	3178	A1	4108	B4	4156	A2	6130	C2	7123	B4
2109	A4	2124	A5	2145	C1	2158	B4	3102	C3	3116	A3	3128	B3	3148	A1	3179	A1	4109	A3	4157	B3	6131	C3	7124	C4
2111	A2	2126	C2	2146	C1	2159	C2	3103	C3	3117	B4	3133	B4	3153	C2	3180	A4	4110	A3	4158	C2	7101	B2	7125	A1
2112	B5	2127	C2	2147	C1	2160	C4	3104	B3	3118	B3	3134	B4	3155	A2	3181	C3	4111	C1	4159	A2	7103	C2		
2113	A4	2131	C2	2149	B2	2161	A3	3106	C4	3119	A3	3136	B4	3156	A1	4101	A4	4120	C2	4160	A1	7106	A3		
2114	A4	2132	C1	2150	B2	2163	A2	3108	A4	3120	B4	3137	B4	3167	C2	4102	A4	4150	B2	4161	A1	7108	A3		
2116	B3	2134	C1	2151	C2	2164	B1	3109	A4	3121	A3	3140	B2	3168	B3	4103	C2	4151	B3	4162	C1	7109	A3		
2117	A3	2136	B1	2152	C3	2165	B3	3111	A3	3122	B3	3141	C2	3169	B2	4104	A2	4152	B3	4163	C1	7111	A1		

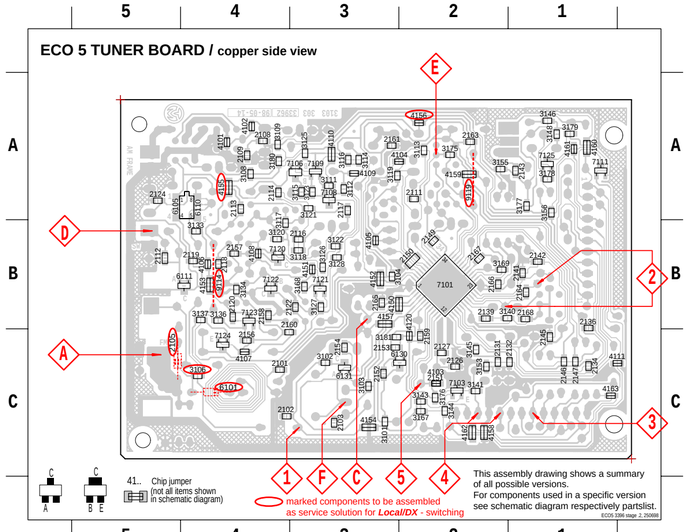
ECO 5 TUNER BOARD / copper side view
41.. Chip jumper (not all items shown in schematic diagram)
marked components to be assembled as service solution for Local/DX - switching
This assembly drawing shows a summary of all possible versions.
For components used in a specific version see schematic diagram respectively partslist.
ECOS 3396 stage 2, 250698

TUNER ADJUSTMENT TABLE (ECO5 FM/MW- and FM/MW/LW - versions with AM-frame aerial)

Waverange	Input frequency	Input	Tuned to	Adjust	Output	Scope/Voltmeter
VARICAP ALIGNMENT						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)			108MHz	5130		8V ±0.2V
			87.5MHz (65.81MHz)	check		4.3V ±0.5V (1.2V ±0.5V)
MW FM/AM-version, 10kHz grid 530 - 1700kHz			1700kHz	5123		8V ±0.2V
			530kHz	check		1.1V ±0.4V
FM/MW-version, 9kHz grid 531 - 1602kHz			1602kHz	5123	1	6.9V ±0.2V
			531kHz	check		1.1V ±0.4V
LW 153 - 279kHz			279kHz	5122		8V ±0.2V
			153kHz	check		1.1V ±0.4V
MW FM/MW/LW- version, 9kHz grid 531 - 1602kHz			1602kHz	5123		8V ±0.2V
			531kHz	check		1.1V ±0.4V
FM IF						
FM	10.7MHz, 50mV continuous wave	F	IC 7101 21 shortcircuit to block AFC 2141	5119	2	0 ± 3 mV DC
FM RF						
FM 87.5 - 108MHz (65.81 - 74, 87.5 - 108MHz)	108MHz	A	108MHz	2155	4	MAX
	87.5MHz (65.81MHz)	mod=1kHz Δf=±22.5kHz	87.5MHz (65.81MHz)	5131		
VCO						
FM	98MHz, 1mV continuous wave	A	98MHz	3142	3	152kHz ±1kHz [1]
AM IF						
MW	450kHz connect pin 6 of IC 7101 (AM Osc.) with short wire to ground (pin 4)	C	IC 7101 36 220R 100nF	5111	4	fo symmetric, mark
		Δf=±15kHz V_{RF} = 3mV	IC 7101 40 see remark 2) 220R 100nF	5112		
AM AFC **MW**		C continuous wave V_{RF} = 10mV		5114	2	0 ± 2 mV DC
AM RF [3]						
MW [4] FM/MW/LW- and FM/MW-version (9kHz grid) 531 - 1602kHz	1494kHz	B Δf = ±30kHz V_{RF} as low as possible	1494kHz	2106	4	fo symmetric, mark
	558kHz		558kHz	5102		
LW	198kHz		198kHz	5103		
MW FM/AM-version, 10kHz grid 530 - 1700kHz	1500kHz		1500kHz	2106		
	560kHz		560kHz	5102		

ECO5, discr. coil, 080797

Use service test program. By selecting the TUNER TEST test frequencies will be stored as preset frequencies automatically.

1) If sensitivity of frequency counter is too low adjust to max. channel separation (input signal: stereo left 90% + 9%, adjust output on right channel to minimum)

2) RC network serves for damping the IF-filter while adjusting the other one.

3) For AM RF adjustments the original frame antenna has to be used !

4) MW has to be aligned before LW.

Repeat

7B-3

TUNER BOARD ECO5 / Systems

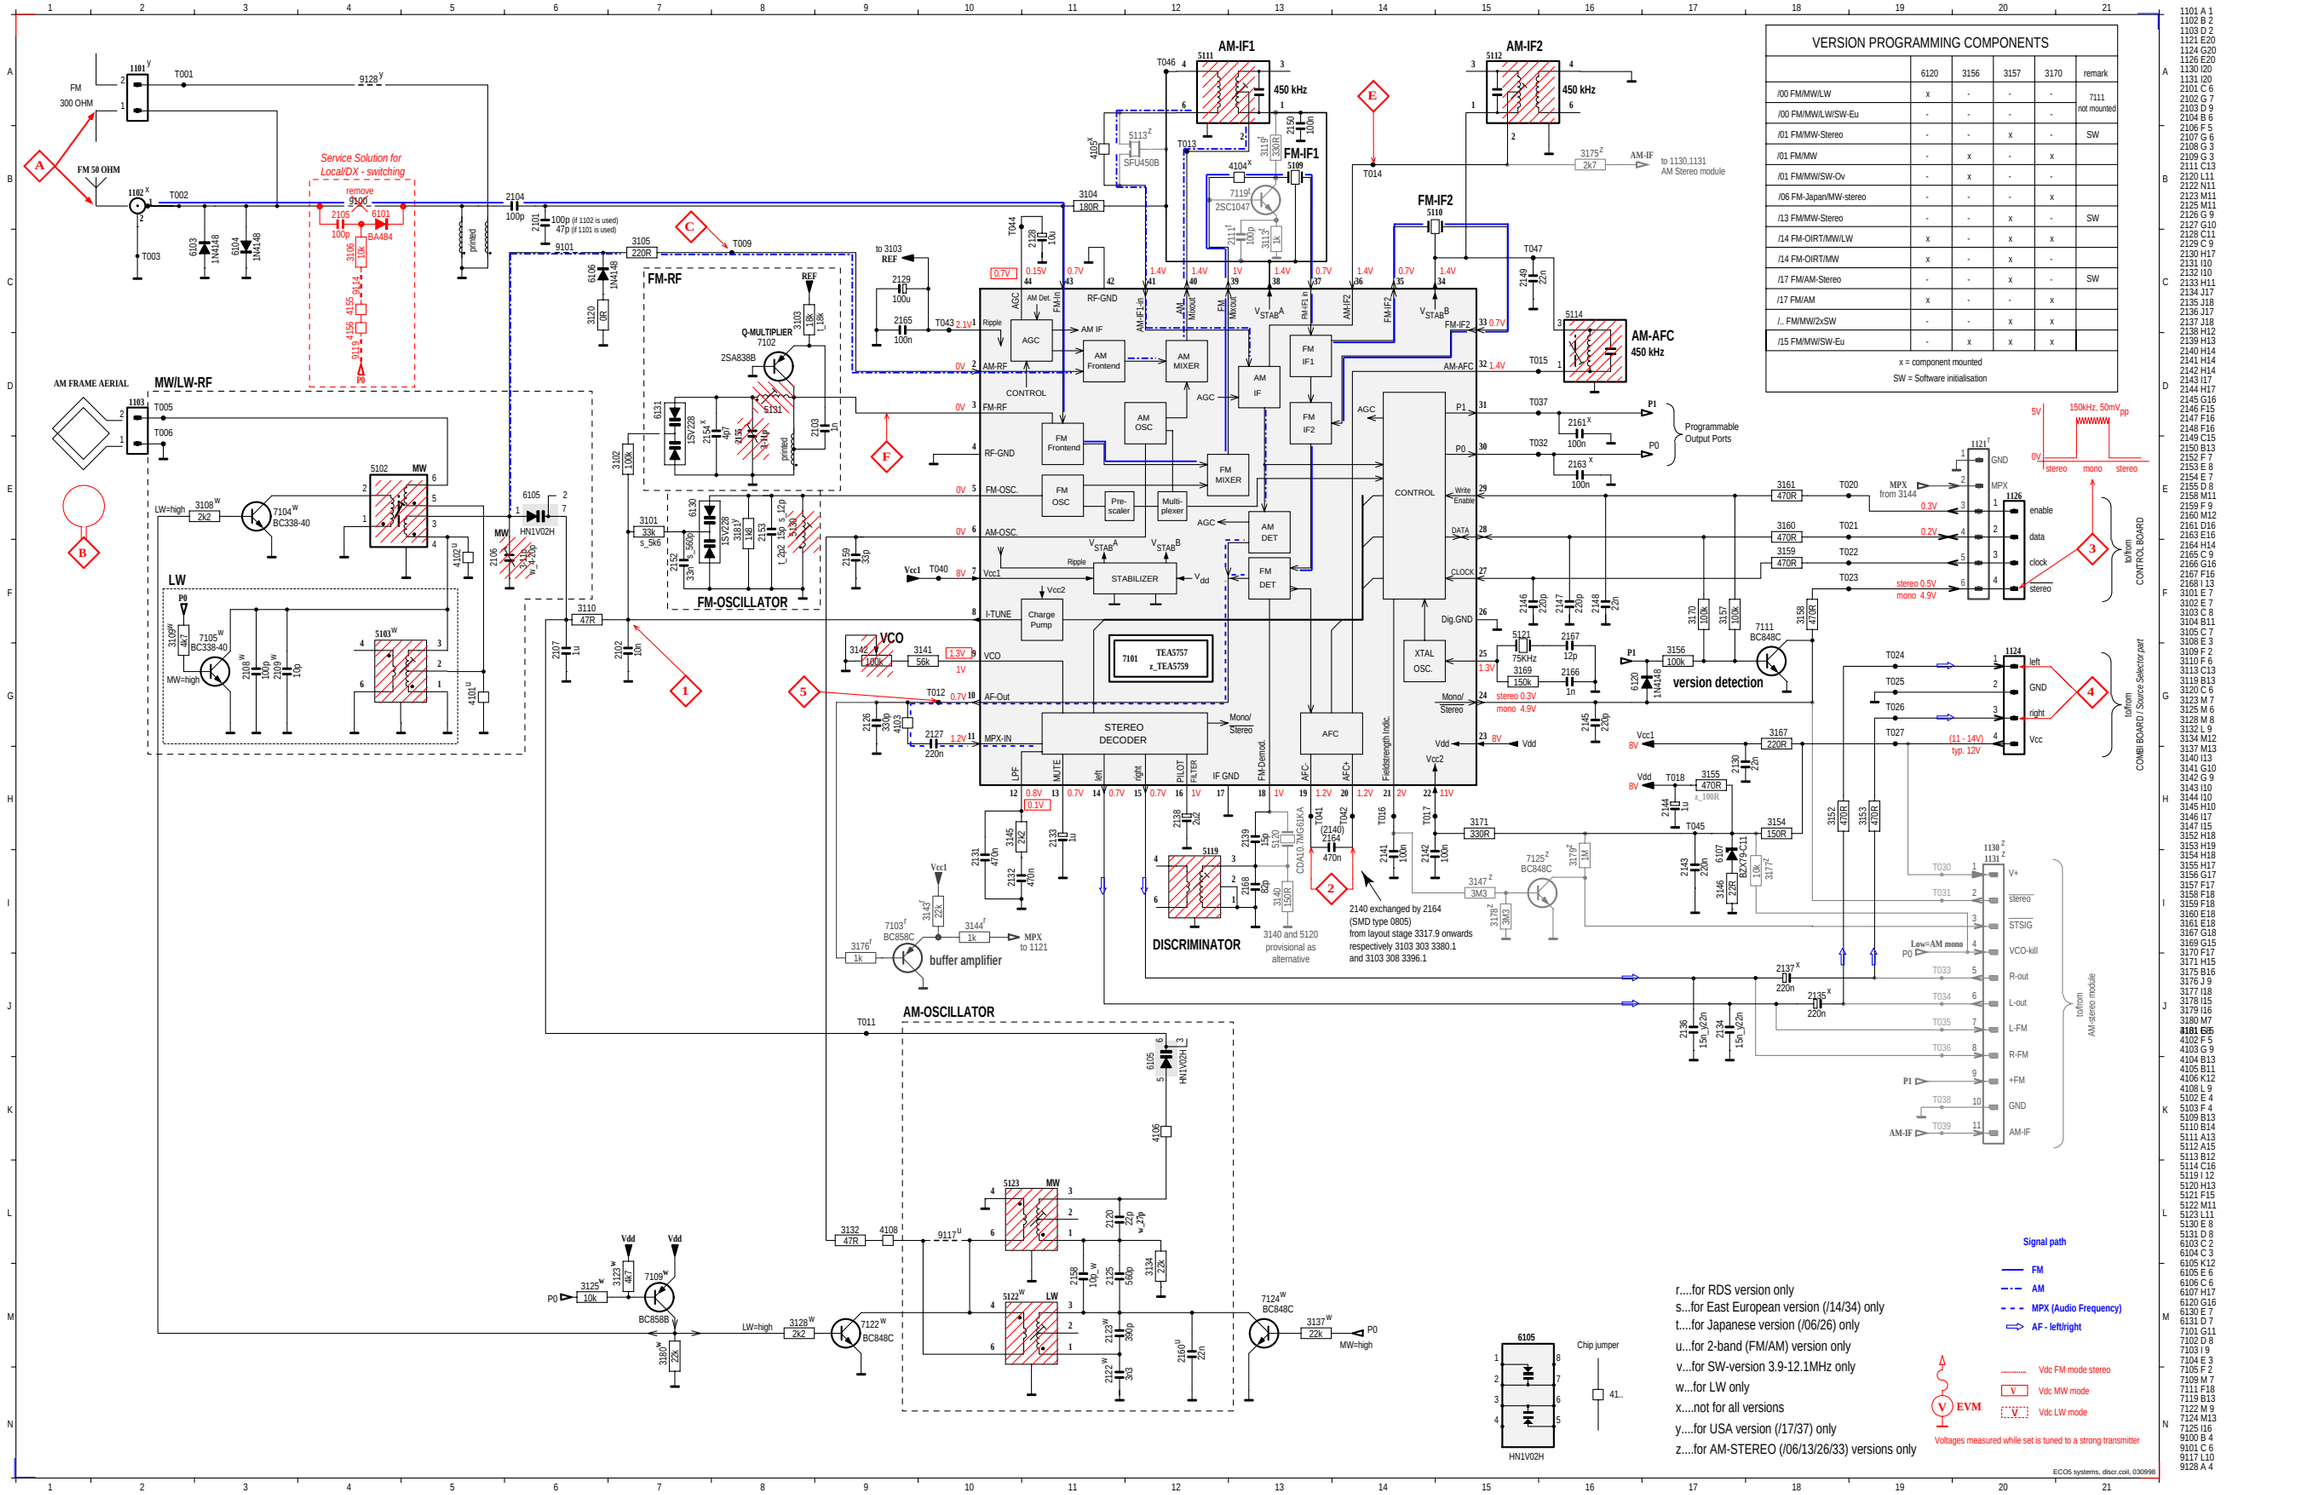

7B-4

ELECTRICAL PARTSLIST - ECO5 TUNER BOARD

MISCELLANEOUS

1101	482226731505	Antenna Socket 300R	only in /17
1102	482226710283	Antenna Socket 75R	only in /01

CAPACITORS

2101	532212232531	100PF 5%NP0 50V	only in /01
2101	482212613692	47PF 1% NP0 63V	only in /17
2102	482212233177	10NF 20% X7R 50V	
2103	532212234123	1NF10%X7R 50V	
2104	482212233195	100PF 10% 50V	
2106	482212560101	3P0-11P N450 100V	
2107	482212151319	1UF 10% 63V	
2120	532212232658	22PF 5% 50V	
2125	482212151381	560PF 5% 400V	
2126	532212231863	63V 330PF PM5	
2127	482212613473	220NF80-20% 50V	
2128	482212441579	10UF 20% 50V	
2129	482212441584	100UF 20% 10V	
2130	482212611585	22NF+80-20% Y5V 25V	
2131	482212613482	470NF80/20% 16V	
2132	482212613482	470NF80/20% 16V	
2133	482212440242	1UF20% 63V	
2134	482212613188	15NF 5% X7R 63V	only in /01
2134	532212232654	22NF10%X7R 63V	only in /17
2135	482212440746	0,22UF20% 63V	
2136	482212613188	15NF 5% X7R 63V	only in /01
2136	532212232654	22NF10%X7R 63V	only in /17
2137	482212440746	0,22UF20% 63V	
2138	482212441576	2,2UF 20% 50V	
2139	482212614236	50V 15P 5%	
2141	482212610002	100NF20%Y5V 25V	
2142	482212610002	100NF20%Y5V 25V	
2143	482212613473	220NF80-20% 50V	
2144	482212440242	1UF20% 63V	
2145	482212233575	220PF 5% NP0 63V	
2146	482212233575	220PF 5% NP0 63V	
2147	482212233575	220PF 5% NP0 63V	
2148	482212611585	22NF+80-20% Y5V 25V	
2149	532212232654	22NF10%X7R 63V	
2150	482212231947	100NF20%Y5V 63V	
2152	482212612105	50V 33NF PM5	
2153	482212232504	15PF 2% NP0 50V 1206	
2155	482212560101	3P0-11P N450 100V	
2159	532212232659	33PF 5% 50V	
2160	532212232654	22NF10%X7R 63V	
2164	482212613482	470NF80/20% 16V	
2165	482212610002	100NF20%Y5V 25V	
2166	532212234123	1NF10%X7R 50V	
2167	482212232139	12PF 2%NP0 63V	
2168	482212613695	82PF 1% NP0 63V	

RESISTORS

3101	482205120333	33K00 5% 0,1W	
3102	482205120104	100K00 5% 0,1W	
3103	482211710965	18K 1% 0,1W	
3104	482211711448	180R 1% 0,1W	
3105	482211683872	220R 5% 0,5W	
3110	482211652195	47E 5% 0,5W	
3120	482205120008	0R00 JUMP. (0805)	
3132	482211652195	47E 5% 0,5W	
3134	482205120223	22K00 5% 0,1W	
3141	482211711148	56K 1% 0,1W	
3142	482210011163	100K 30%LIN 0,1W	
3145	482211711449	2K2 1% 0,1W	
3146	482205120229	22R 5% 0,1W	
3152	482211683883	470R 5% 0,5W	
3153	482205120471	470R 5% 0,1W	
3154	482211683868	150R 5% 0,5W	
3155	482205120471	470R 5% 0,1W	
3156	482205120104	100K 5% 0,1W	only in /01
3158	482211683883	470R 5% 0,5W	
3159	482211683883	470R 5% 0,5W	
3160	482211683883	470R 5% 0,5W	
3161	482211683883	470R 5% 0,5W	
3167	482211711503	220R 1% 0.1W	
3169	482205120154	150K 5% 0,1W	
3170	482211652234	100K 5% 0,5W	
3171	482211652219	330E 5% 0,5W	
4101	482205120008	0R00 JUMP. (0805)	
4102	482205120008	0R00 JUMP. (0805)	
4103	482205120008	0R00 JUMP. (0805)	
4104	482205120008	0R00 JUMP. (0805)	
4105	482205120008	0R00 JUMP. (0805)	
4106	482205120008	0R00 JUMP. (0805)	
4108	482205120008	0R00 JUMP. (0805)	
4111	482205120008	0R00 JUMP. (0805)	
4120	482205120008	0R00 JUMP. (0805)	
4150	482205110008	0R00 5% 0,25W	
4152	482205110008	0R00 5% 0,25W	
4153	482205110008	0R00 5% 0,25W	
4154	482205110008	0R00 5% 0,25W	
4157	482205110008	0R00 5% 0,25W	
4158	482205110008	0R00 5% 0,25W	
4159	482205110008	0R00 5% 0,25W	

COILS & FILTERS

5102	482215771634	MW RF COIL
5109	482224270665	SFE 10,7MHz
5110	482224270665	SFE 10,7MHz
5111	482215860511	AM-IF Filter 10,7MHz
5112	482215770302	AM-IF Filter 10,7MHz
5114	482215770302	AM-IF Filter 10,7MHz
5119	482215711443	Disciminator 10,7MHz
5121	482224210261	Quartz 75kHz
5123	482215760517	Osc Coil MW
5130	482215630947	RF-Coil 1,5T
5131	482215630947	RF-Coil 1,5T

DIODES

6103	482213030621	1N4148	
6104	482213030621	1N4148	
6105	482213083075	HN1V02H-B	
6106	482213030621	1N4148	
6107	482213034488	BZX79-B11	
6120	482213030621	1N4148	only in /17
6130	482213082833	1SV228	
6131	482213082833	1SV228	

TRANSISTORS & ICs

7101	482220990924	TEA5757H/V1
7102	482213060093	2SA838B
7111	532213042136	BC848C

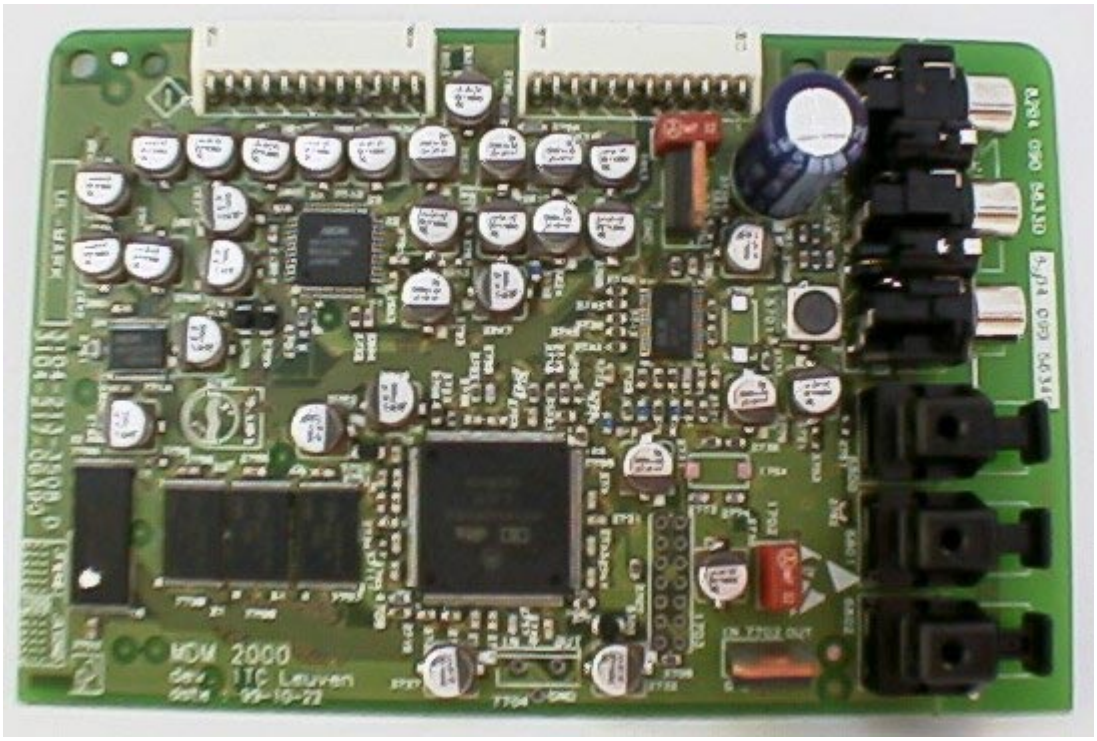

MULTI-CHANNEL DECODING MODULE

TABLE OF CONTENTS

Troubleshooting 8-2
Block-diagram 8-3
Partslist 8-4

MULTI-CHANNEL DECODING MODULE - Troubleshooting

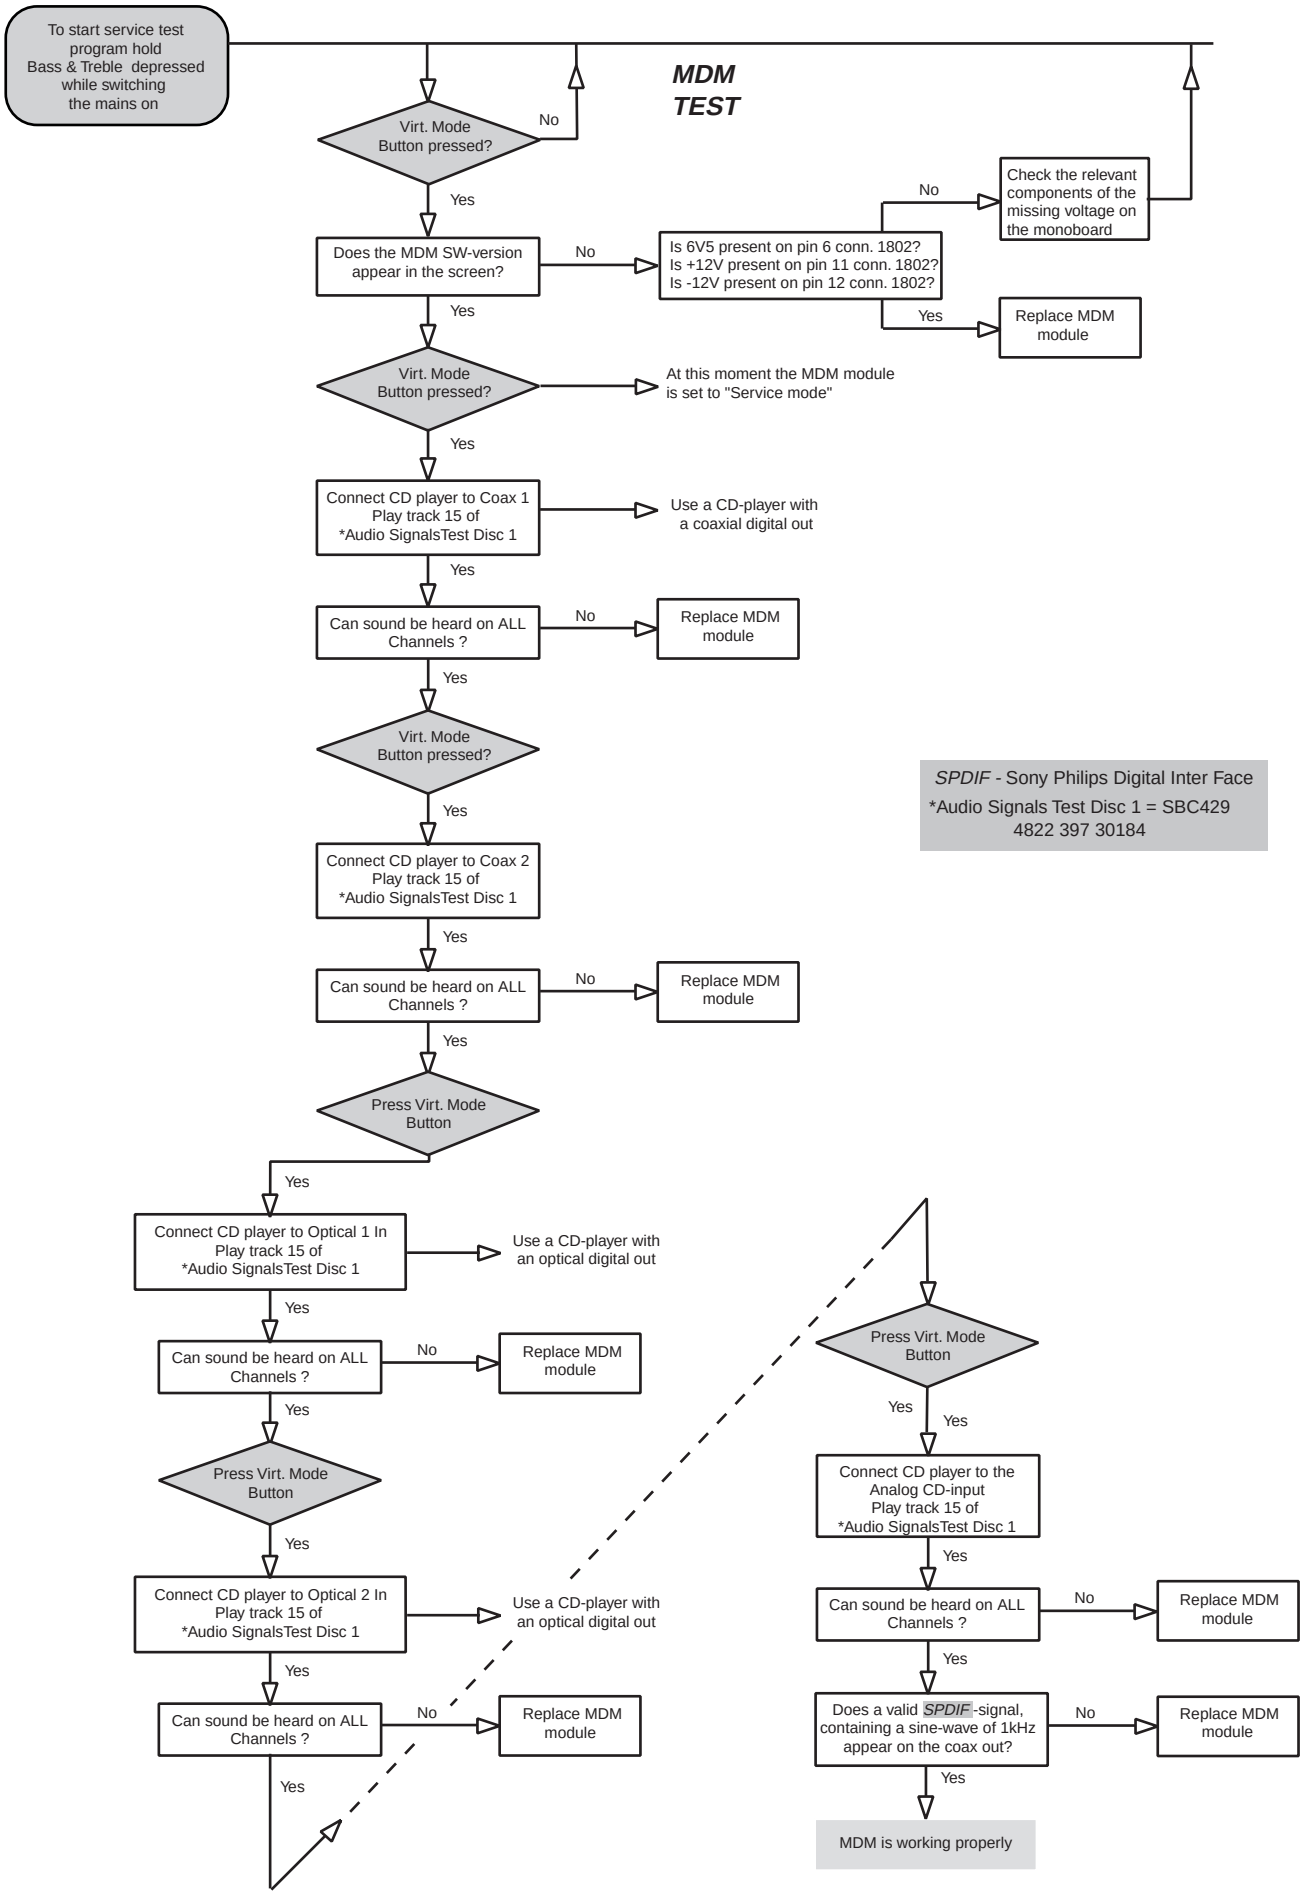
To start service test program hold Bass & Treble depressed while switching the mains on
MDM TEST
Virt. Mode Button pressed?
No
Yes
Does the MDM SW-version appear in the screen?
No
Is 6V5 present on pin 6 conn. 1802?
Is +12V present on pin 11 conn. 1802?
Is -12V present on pin 12 conn. 1802?
No
Check the relevant components of the missing voltage on the monoboard
Yes
Replace MDM module
Yes
Virt. Mode Button pressed?
At this moment the MDM module is set to "Service mode"
Yes
Connect CD player to Coax 1
Play track 15 of
*Audio SignalsTest Disc 1
Use a CD-player with a coaxial digital out
Yes
Can sound be heard on ALL Channels ?
No
Replace MDM module
Yes
Virt. Mode Button pressed?
Yes
Connect CD player to Coax 2
Play track 15 of
*Audio SignalsTest Disc 1
Yes
Can sound be heard on ALL Channels ?
No
Replace MDM module
Yes
Press Virt. Mode Button
Yes
Connect CD player to Optical 1 In
Play track 15 of
*Audio SignalsTest Disc 1
Use a CD-player with an optical digital out
Yes
Can sound be heard on ALL Channels ?
No
Replace MDM module
Yes
Press Virt. Mode Button
Yes
Connect CD player to Optical 2 In
Play track 15 of
*Audio SignalsTest Disc 1
Use a CD-player with an optical digital out
Yes
Can sound be heard on ALL Channels ?
No
Replace MDM module
Yes
Press Virt. Mode Button
Yes
Connect CD player to the Analog CD-input
Play track 15 of
*Audio SignalsTest Disc 1
Yes
Can sound be heard on ALL Channels ?
No
Replace MDM module
Yes
Does a valid SPDIF -signal, containing a sine-wave of 1kHz appear on the coax out?
No
Replace MDM module
Yes
MDM is working properly

SPDIF - Sony Philips Digital Inter Face

*Audio Signals Test Disc 1 = SBC429
4822 397 30184

BLOCK-DIAGRAM

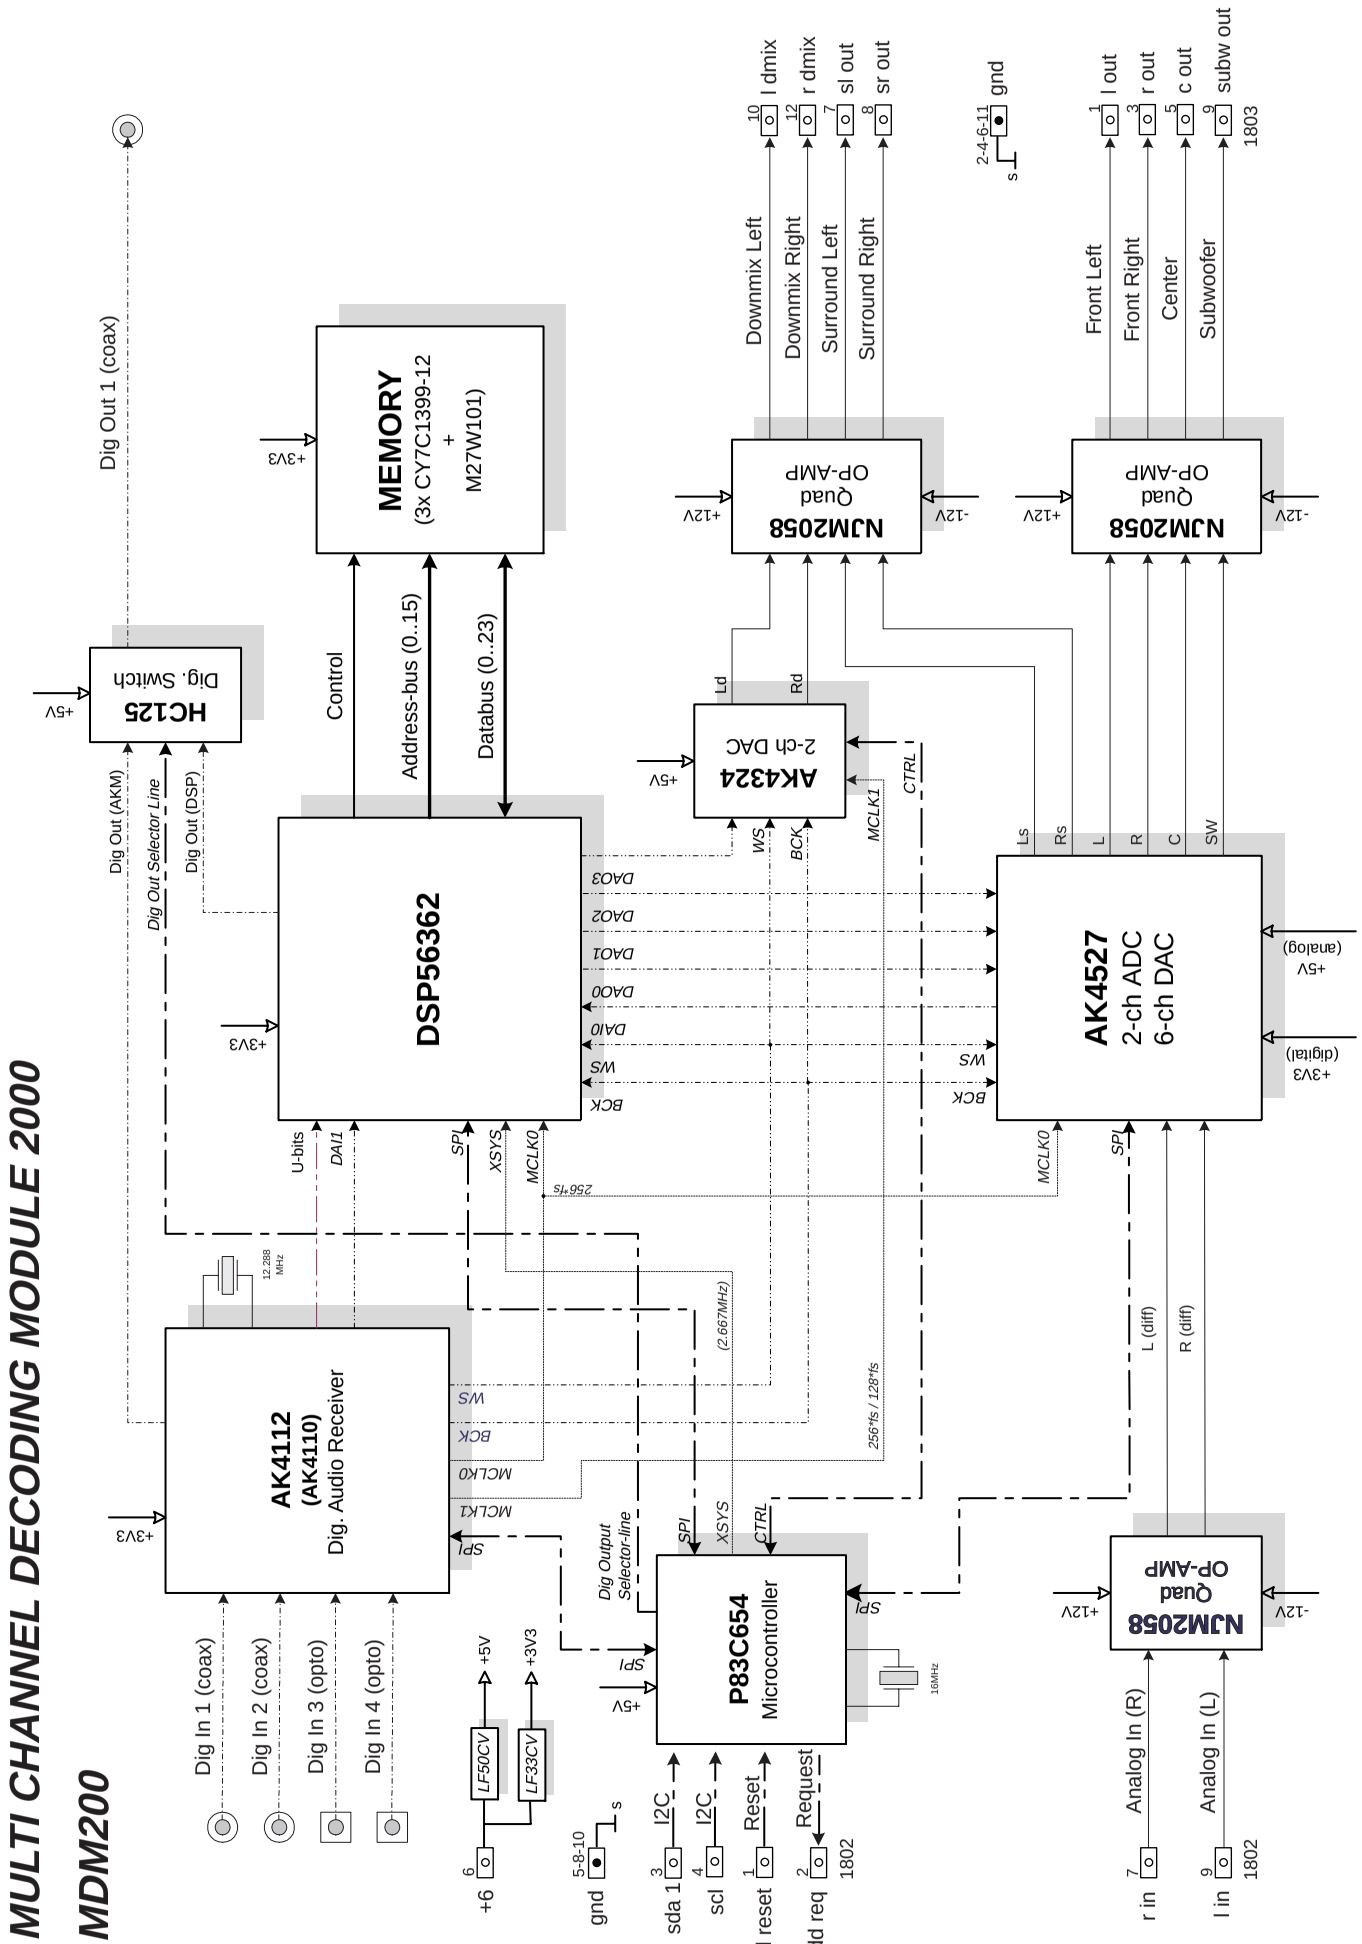

ELECTRICAL PARTSLIST - MDM MODULE

1003	3104 217 06390	MDM 2000 MODULE
1701	4822 252 51172	FUSE 0,315A
1702	4822 252 51172	FUSE 0,315A
1704	2422 543 01118	CRYSTAL 16MHZ
1705	2422 543 01132	CRYSTAL 12MH28
1800	4822 267 31729	COAX OUT CONN.
1801	4822 267 31448	COAX IN CONNECTOR
1802	2422 025 10253	CON 12P. MALE
1803	2422 025 10253	CON 12P. MALE
2702	4822 123 14025	16V 2200U 20%
6800	4822 218 11487	CONN. FIBER-GLASS GP1F32R
6801	4822 218 11487	CONN. FIBER-GLASS GP1F32R
7701	9322 146 09687	LF50CV
7702	4822 209 16978	LF33CV

Note: Only the parts mentioned in this list are normal service parts.

Component side view

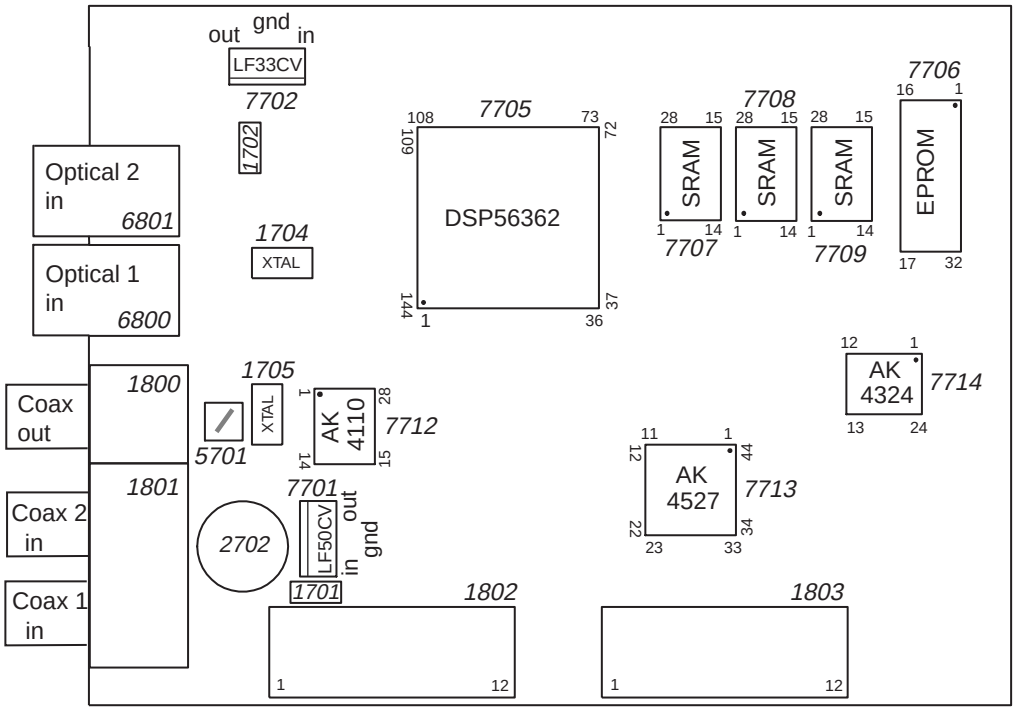

Copper side view

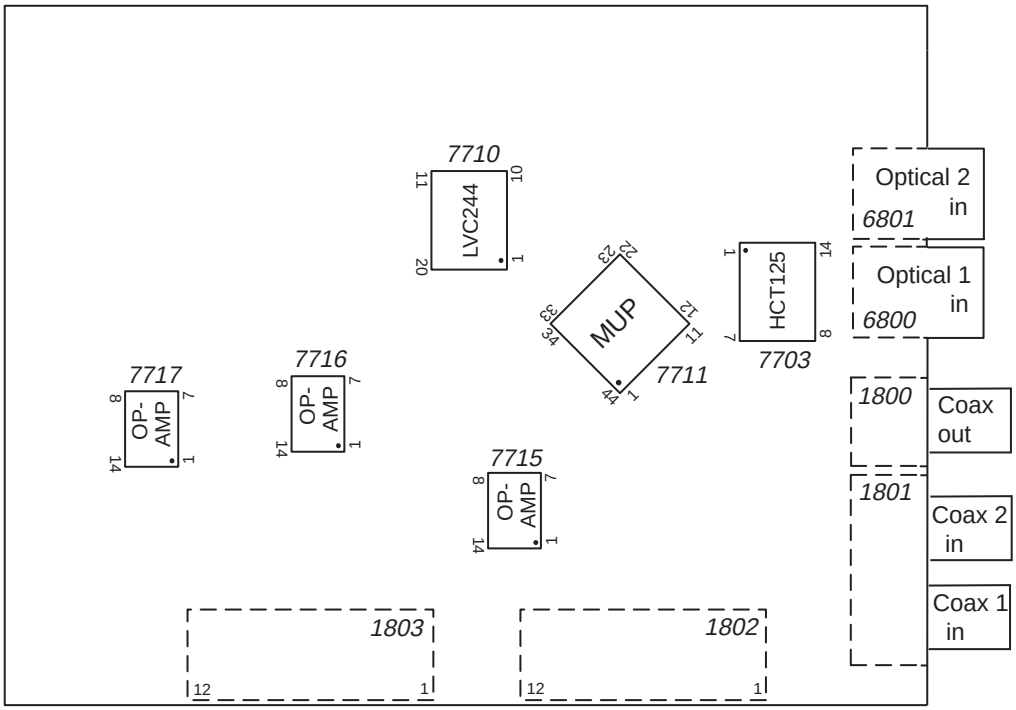

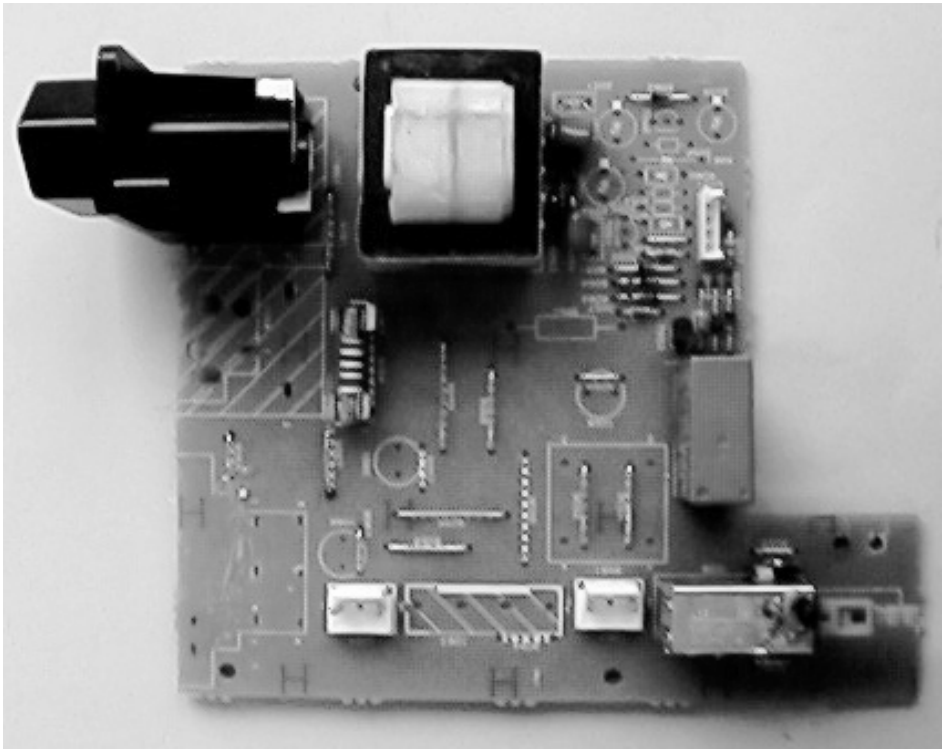

MAINS BOARD

TABLE OF CONTENTS

Circuit diagram 9-2
Component layout 9-3
Partslist 9-5

9-2

MAINS BOARD - CIRCUIT DIAGRAM

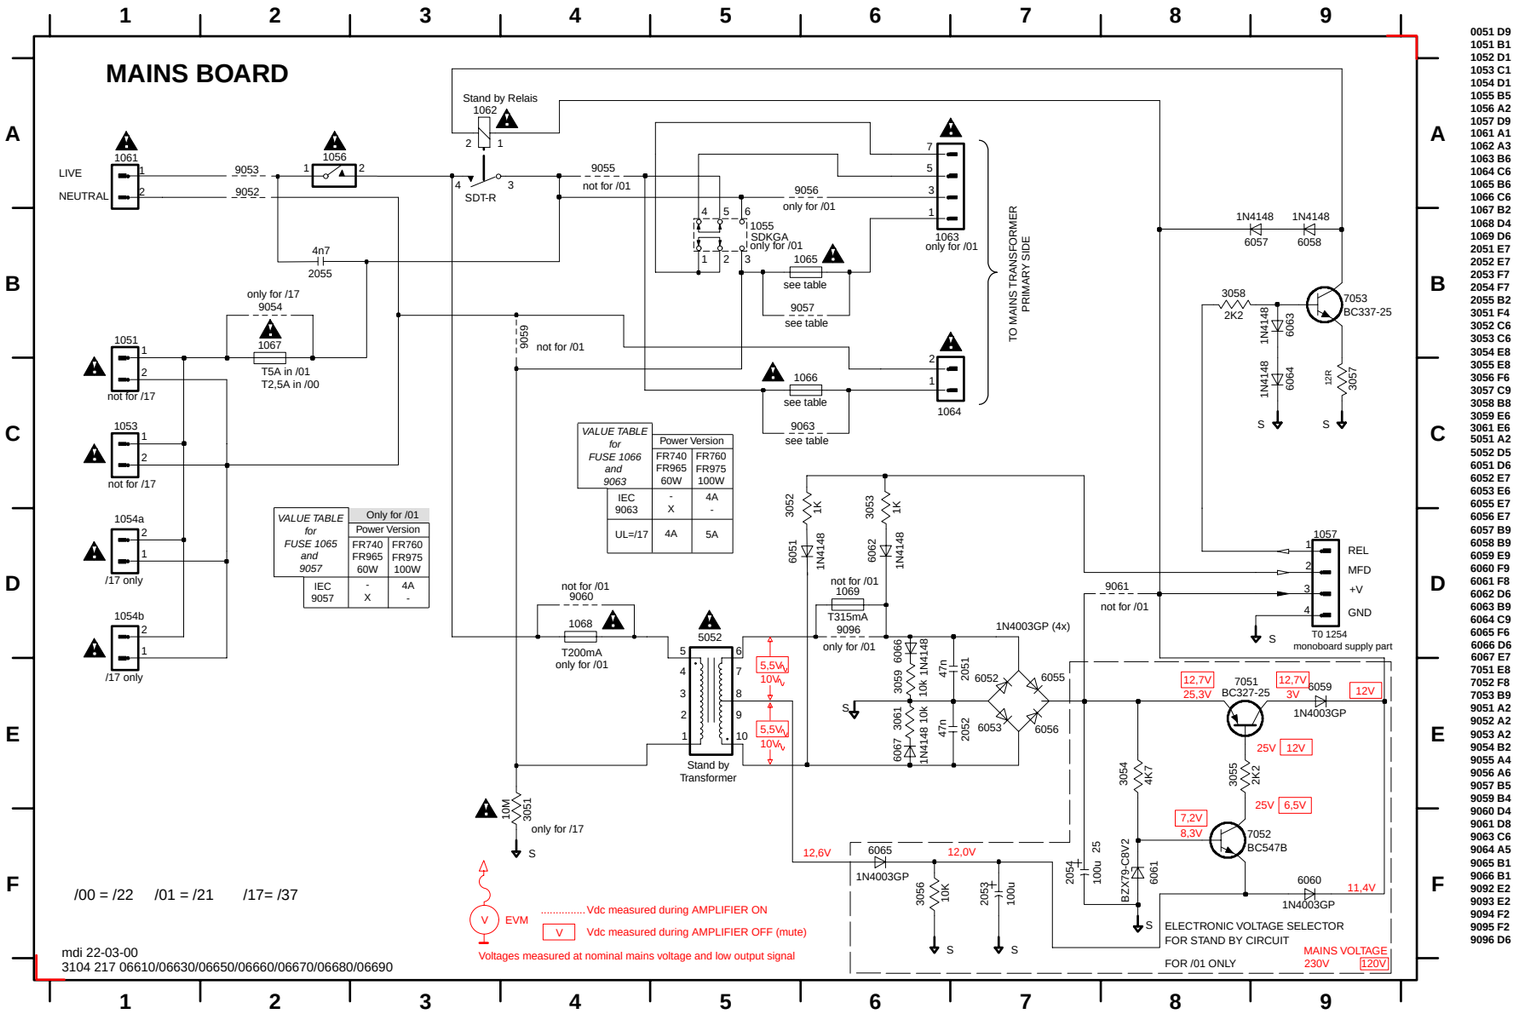

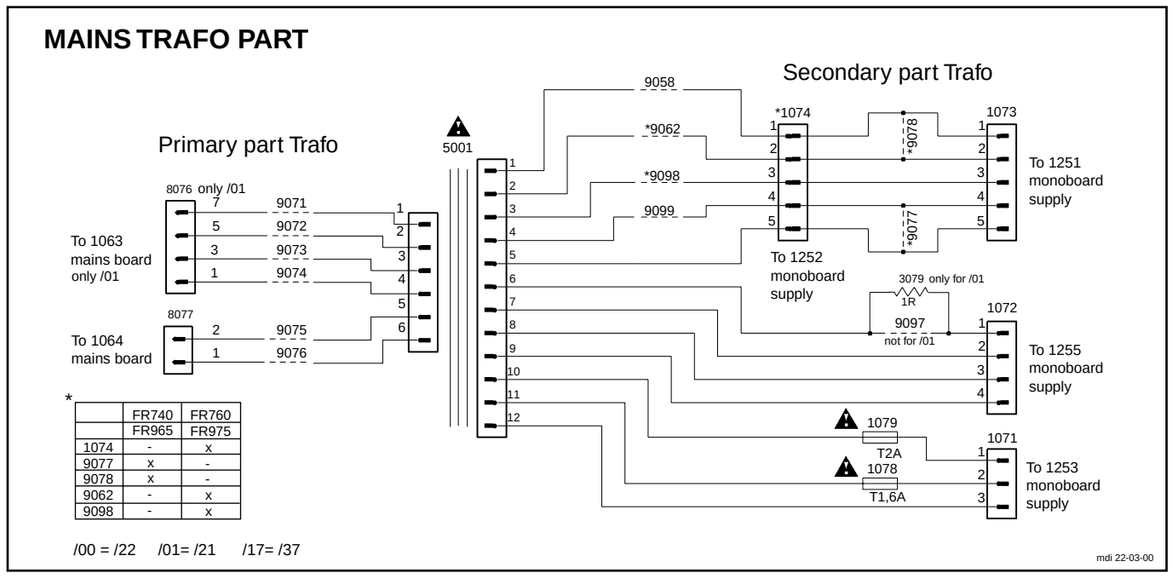

0051 D9
1051 B1
1052 D1
1053 C1
1054 D1
1055 B5
1056 A2
1057 D9
1061 A1
1062 A3
1063 B6
1064 C6
1065 B6
1066 C6
1067 B2
1068 D4
1069 D6
2051 E7
2052 E7
2053 F7
2054 F7
2055 B2
3051 F4
3052 C6
3053 C6
3054 E8
3055 E8
3056 F6
3057 C9
3058 B8
3059 E6
3061 E6
5051 A2
5052 D5
6051 D6
6052 E7
6053 E6
6055 E7
6056 E7
6057 B9
6058 B9
6059 E9
6060 F9
6061 F8
6062 D6
6063 B9
6064 C9
6065 F6
6066 D6
6067 E7
7051 E8
7052 F8
7053 B9
9051 A2
9052 A2
9053 A2
9054 B2
9055 A4
9056 A6
9057 B5
9059 B4
9060 D4
9061 D8
9063 C6
9064 A5
9065 B1
9066 B1
9092 E2
9093 E2
9094 F2
9095 F2
9096 D6

9-3

MAINS BOARD - COMPONENTSIDE VIEW & COPPERSIDE VIEW

Mainsboard Componentside view

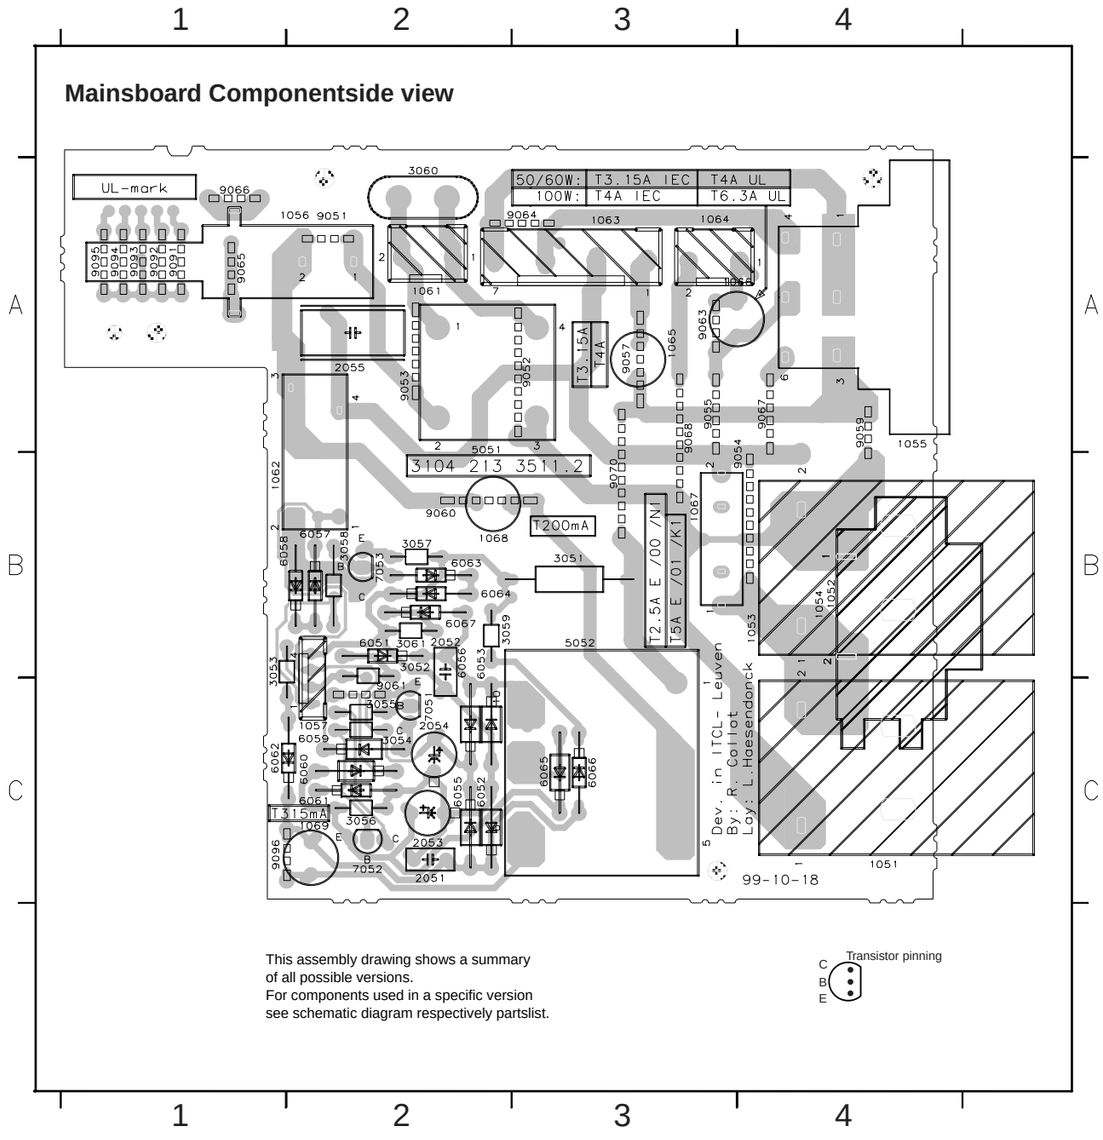

This assembly drawing shows a summary
of all possible versions.
For components used in a specific version
see schematic diagram respectively partslist.

Transistor pinning



1051 C4
1052 B4
1053 B4
1054 B4
1055 A4
1056 A2
1057 C2
1061 A2
1062 A2
1063 A3
1064 A3
1065 A3
1066 A3
1067 B3
1068 B2
1069 C2
2051 C2
2052 B2
2053 C2
2054 C2
2055 A2
3051 B3
3052 B2
3053 B2
3054 C2
3055 C2
3056 C2
3057 B2
3058 B2
3059 B2
3060 A2
3061 B2
5051 A2
5052 C3
6051 B2
6052 C2
6053 C2
6055 C2
6056 C2
6057 B2
6058 B2
6059 C2
6060 C2
6061 C2
6062 C2
6063 B2
6064 B2
6065 C3
6066 C3
6067 B2
7051 C2
7052 C2
7053 B2
9051 A2
9052 A3
9053 A2
9054 B4
9055 A3
9057 A3
9059 A4
9060 B2
9061 C2
9063 A3
9064 A3
9065 A1
9066 A1
9067 A4
9068 A3
9070 B3
9091 A1
9092 A1
9093 A1
9094 A1
9095 A1
9096 C2

Mainsboard Copperside view

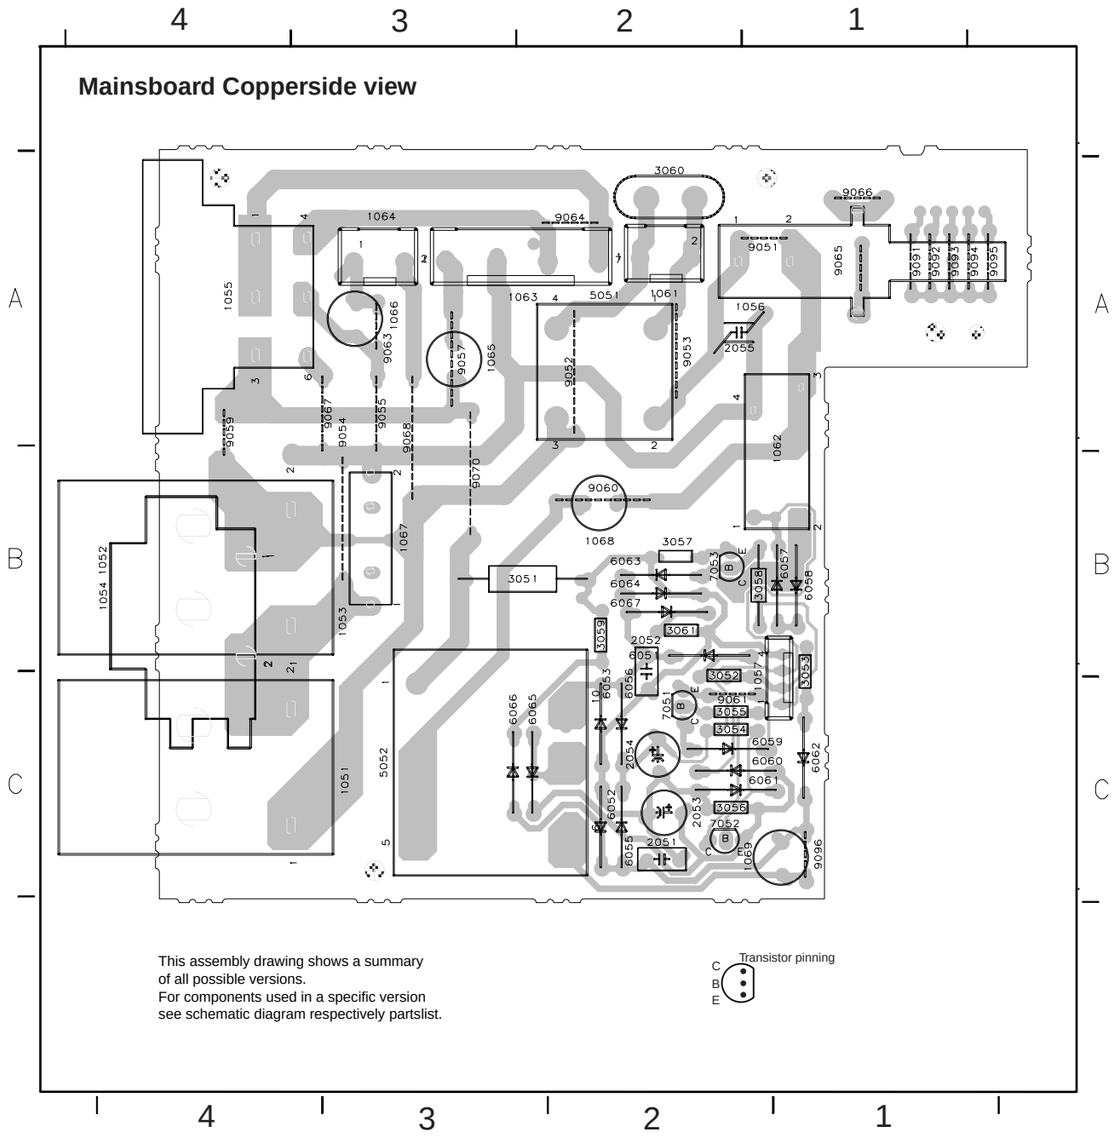

This assembly drawing shows a summary
of all possible versions.
For components used in a specific version
see schematic diagram respectively partslist.

Transistor pinning

TRAFO BOARD

Copperside view

Componentside view

Interconnection Board
Transformer secondary

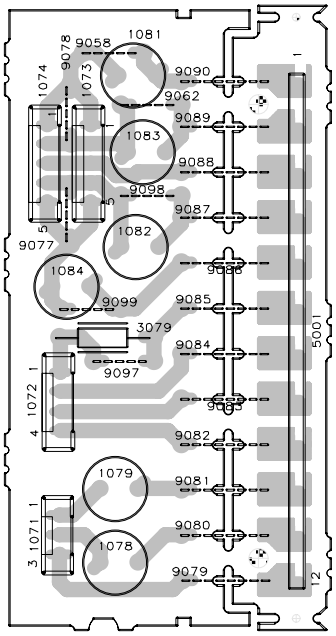

Interconnection Board
Transformer secondary

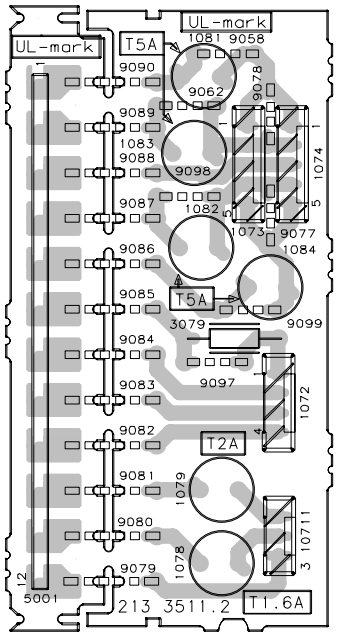

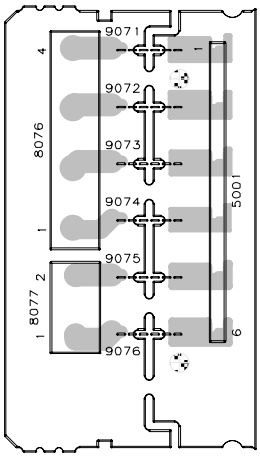

Interconnection Board
Transformer primary

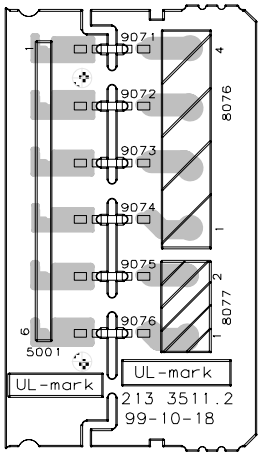

Interconnection Board
Transformer primary

ELECTRICAL PARTSLIST - MAINS BOARD

MISCELLANEOUS

1051	⚠	4822 267 31994	MAINS OUTLET only in /00/01C
1053	⚠	4822 267 31994	MAINS OUTLET only in /00/01C
1054	⚠	2422 030 00301	MAINS OUTLET only in /17
1055	⚠	4822 272 10269	VOLTAGE SEL. only in /01C
1056	⚠	4822 276 13224	MAINS SWITCH
1061	⚠	4822 265 20723	MAINS INLET
1062	⚠	4822 280 10391	RELAY
1063	⚠	4822 267 10728	B4P7-VH only in /01C
1064	⚠	4822 265 20723	B2P3-VH
1065	⚠	4822 071 54002	FUSE 4A only in /01C
1066	⚠	4822 071 54002	FUSE 4A only in /00/01C
1066	⚠	4822 071 55002	FUSE 5A only in /17
1067	⚠	2422 086 10912	FUSE 2,5A only in /00
1067	⚠	2422 086 10915	FUSE 5A only in /01C
1068	⚠	4822 071 52001	FUSE 200MA only in /01C
1069	⚠	4822 071 53151	FUSE 315MA only in /00/17
1078	⚠	4822 071 51602	FUSE 1.6A
1079	⚠	4822 071 52002	FUSE 2A

CAPACITORS

2051	4822 121 43526	47NF 5% 250V
2052	4822 121 43526	47NF 5% 250V
2053	4822 124 40207	100UF20% 25V only in /01C
2054	4822 124 40207	100UF20% 25V only in /01C
2055	4822 126 14084	4,7NF 20% 250V

RESISTORS

3051	⚠	4822 053 21106	10M only in /17
3052		4822 050 11002	1K00 1% 0,4W
3053		4822 050 11002	1K00 1% 0,4W
3054		4822 116 52283	4K7 5% 0,5W only in /01C
3055		4822 116 52256	2K2 5% 0,5W only in /01C
3056		4822 050 21003	10K 1% 0,6W only in /01C
3057		4822 052 10129	12R00 5% 0,33W
3058		4822 116 52256	2K2 5% 0,5W
3059		4822 050 21003	10K00 1% 0,6W
3061		4822 050 21003	10K00 1% 0,6W
3079		4822 052 10108	1R 5% 0,33W only in /01C

TRAFO

5052	⚠	4822 146 11143	STBY TRAFO for /00
5052	⚠	4822 146 11144	STBY TRAFO for /01C
5052	⚠	4822 146 11142	STBY TRAFO for /17

DIODES

6051	4822 130 30621	1N4148
6052	4822 130 31878	1N4003G
6053	4822 130 31878	1N4003G
6055	4822 130 31878	1N4003G
6056	4822 130 31878	1N4003G
6057	4822 130 30621	1N4148
6058	4822 130 30621	1N4148
6059	4822 130 31878	1N4003G only in /01C
6060	4822 130 31878	1N4003G only in /01C
6061	4822 130 34382	BZX79-B8V2 only in /01C
6062	4822 130 30621	1N4148
6063	4822 130 30621	1N4148
6064	4822 130 30621	1N4148
6065	4822 130 31878	1N4003G only in /01C

DIODES

6066	4822 130 30621	1N4148
6067	4822 130 30621	1N4148

TRANSISTORS

7051	4822 130 41246	BC327-25 only in /01C
7052	4822 130 40959	BC547B only in /01C
7053	4822 130 40981	BC337-25

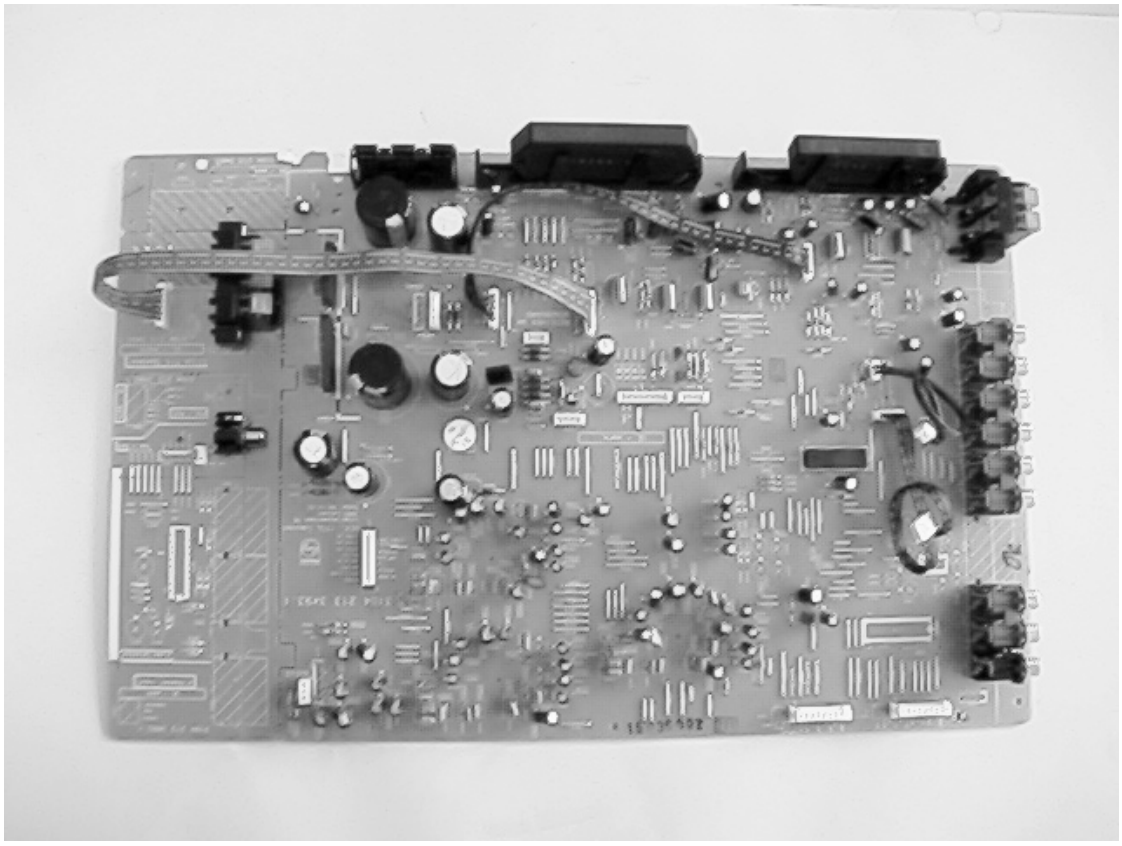

MONO2 BOARD

TABLE OF CONTENTS

Measurement hint 10-2
P50/Speaker/Video Selector layout 10-3
Circuit diagram Source selector 10-4
Circuit diagram Volume controle 10-5
Circuit diagram Supply 10-6
Circuit diagram Amplifier 10-7
Component layout 10-8
Mappings Components & Chips side..... 10-9
Component layout copper side view 10-10

MEASUREMENT REFERENCES TO LAYOUT ON PAGE 10-8

IC7643

IC 7643 Pin	Can be measure via Test point on component side monoboard	Funtionality
17	TP 47	MDM Surround L in
18	TP 48	6 CH Surround L in
9	TP 50	MDM Surround R in
10	TP 51	6 CH Surround R in
3	TP 52	4,7V
2	TP 53	4,7V
4	TP 54	4,7V
26	TP 55	4,7V
27	TP 56	4,7V
33	TP 57	Surround Right out
36/40/43	TP 58	Ground
41/42	TP 59	9,4V
39	TP 60	4,7V
19	TP 61	8,7V
34	TP 63	Surround Left out
25	TP 64	4,7V
24	TP 65	4,7V
12	TP 66	4,7V
20	TP 67	4,7V
21	TP 68	4,7V

IC7504

IC 7504 Pin	Can be measure via Test point on component side monoboard	Funtionality
5 via R3614	TP 77	Rec - in Right
4	TP 78	-13,5V
7 via R3616	TP 79	Rec - out Right
8	TP 80	12V
3 via R3613	TP 81	Rec - in Left
1 via R3615	TP 82	Rec - out Left

MEASUREMENT REFERENCES TO LAYOUT ON PAGE 10-8

IC7641

IC 7641 Pin	Can be measure via Test point on component side monoboard	Funtionality
16	TP 1	Left in
17	TP 2	MDM Left in
18	TP 3	6 CH Front left in
8	TP 4	Right in
9	TP 5	MDM Right in
10	TP 6	6 CH Front Right in
3	TP 7	4,7V
2	TP 8	4,7V
4	TP 9	4,7V
26	TP 10	4,7V
27	TP 11	4,7V
33	TP 12	Right out
36/40/43	TP 13	Ground
41/42	TP 14	9,4V
39	TP 15	4,7V
19	TP 16	8,7V
34	TP 18	Left out
25	TP 19	4,7V
24	TP 20	4,7V
12	TP 21	4,7V
20	TP 22	4,7V
21	TP 23	4,7V

IC7642

IC 7642 Pin	Can be measure via Test point on component side monoboard	Funtionality
16	TP 24	4,7V
17	TP 25	MDM Center in
18	TP 26	6 CH Center in
8	TP 27	MDM Subwoofer in
9	TP 28	MDM Subwoofer in
10	TP 29	6 CH Subwoofer in
3	TP 30	4,7V
2	TP 31	4,7V
4	TP 32	4,7V
26	TP 33	4,7V
27	TP 34	4,7V
33	TP 35	Subwoofer out
36/43	TP 36	Ground
40/41/42	TP 37	9,4V
39	TP 38	4,7V
19	TP 39	8,7V
34	TP 40	Center out
25	TP 41	4,7V
24	TP 42	4,7V
12	TP 43	4,7V
20	TP 44	4,7V
21	TP 45	4,7V

IC7601

IC 7601 Pin	Can be measure via Test point on component side monoboard	Funtionality
5	TP 69	Headphone Amp L in
4	TP 70	-13,5V
8	TP 71	12V
3	TP 72	Headphone Amp R in

Tr 7622

Tr7622	Can be measure via Test point on component side monoboard	Funtionality
B	TP 99	-0,5V
C	TP 100	Ground
E	TP 101	Headphone Amp R out

IC7503

IC 7503 Pin	Can be measure via Test point on component side monoboard	Funtionality
5	TP 73	Right in
4	TP 74	-12V
8	TP 75	11V
3	TP 76	Left in

Tr 7653

Tr7653	Can be measure via Test point on component side monoboard	Funtionality
B	TP 86	-1,8V
E	TP 88	Center mute

Tr 7621

Tr7621	Can be measure via Test point on component side monoboard	Funtionality
B	TP 96	-1,5V
C	TP 97	Ground
E	TP 98	Headphone Amp L out

Tr 7658

Tr7658	Can be measure via Test point on component side monoboard	Funtionality
B	TP 83	5V
C	TP 84	-13V
E	TP 85	5V

SCREW TERMINAL BOARD - COMPONENT VIEW & COPPER SIDE VIEW

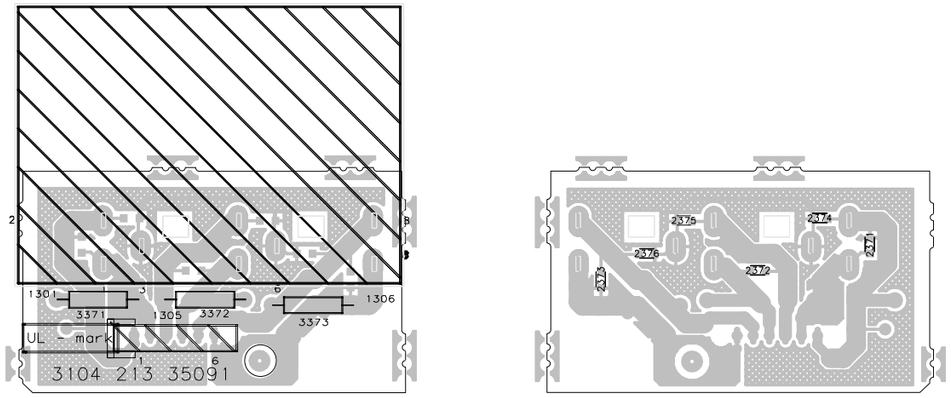

P50/RC5 VIDEO SELECTOR BOARD - COMPONENT VIEW & COPPER SIDE VIEW

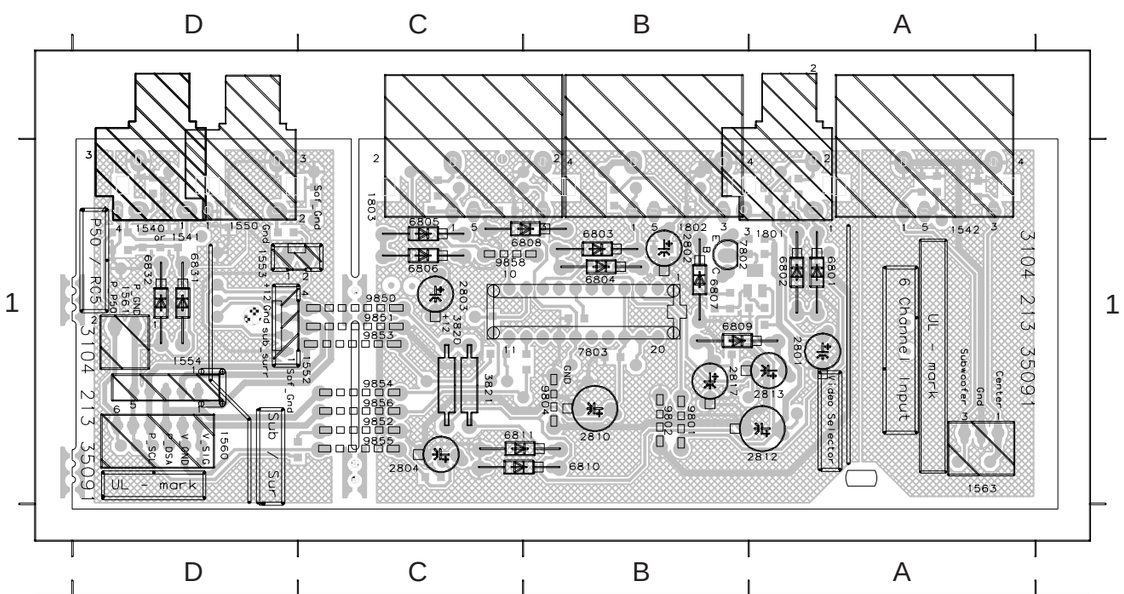

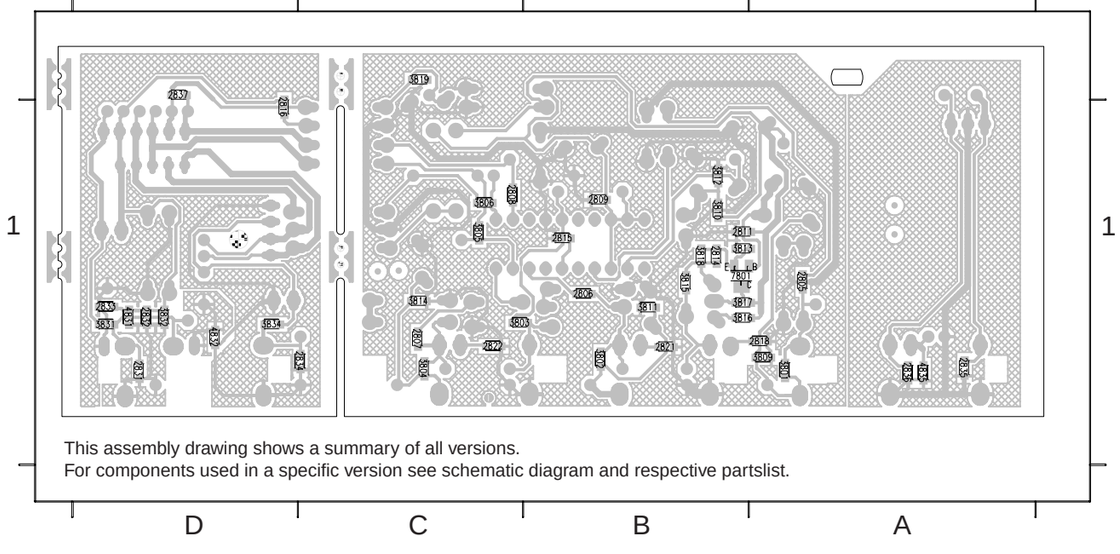

This assembly drawing shows a summary of all versions.
For components used in a specific version see schematic diagram and respective partslist.

10-4

SOURCE SELECTOR PART FR965 - FR975

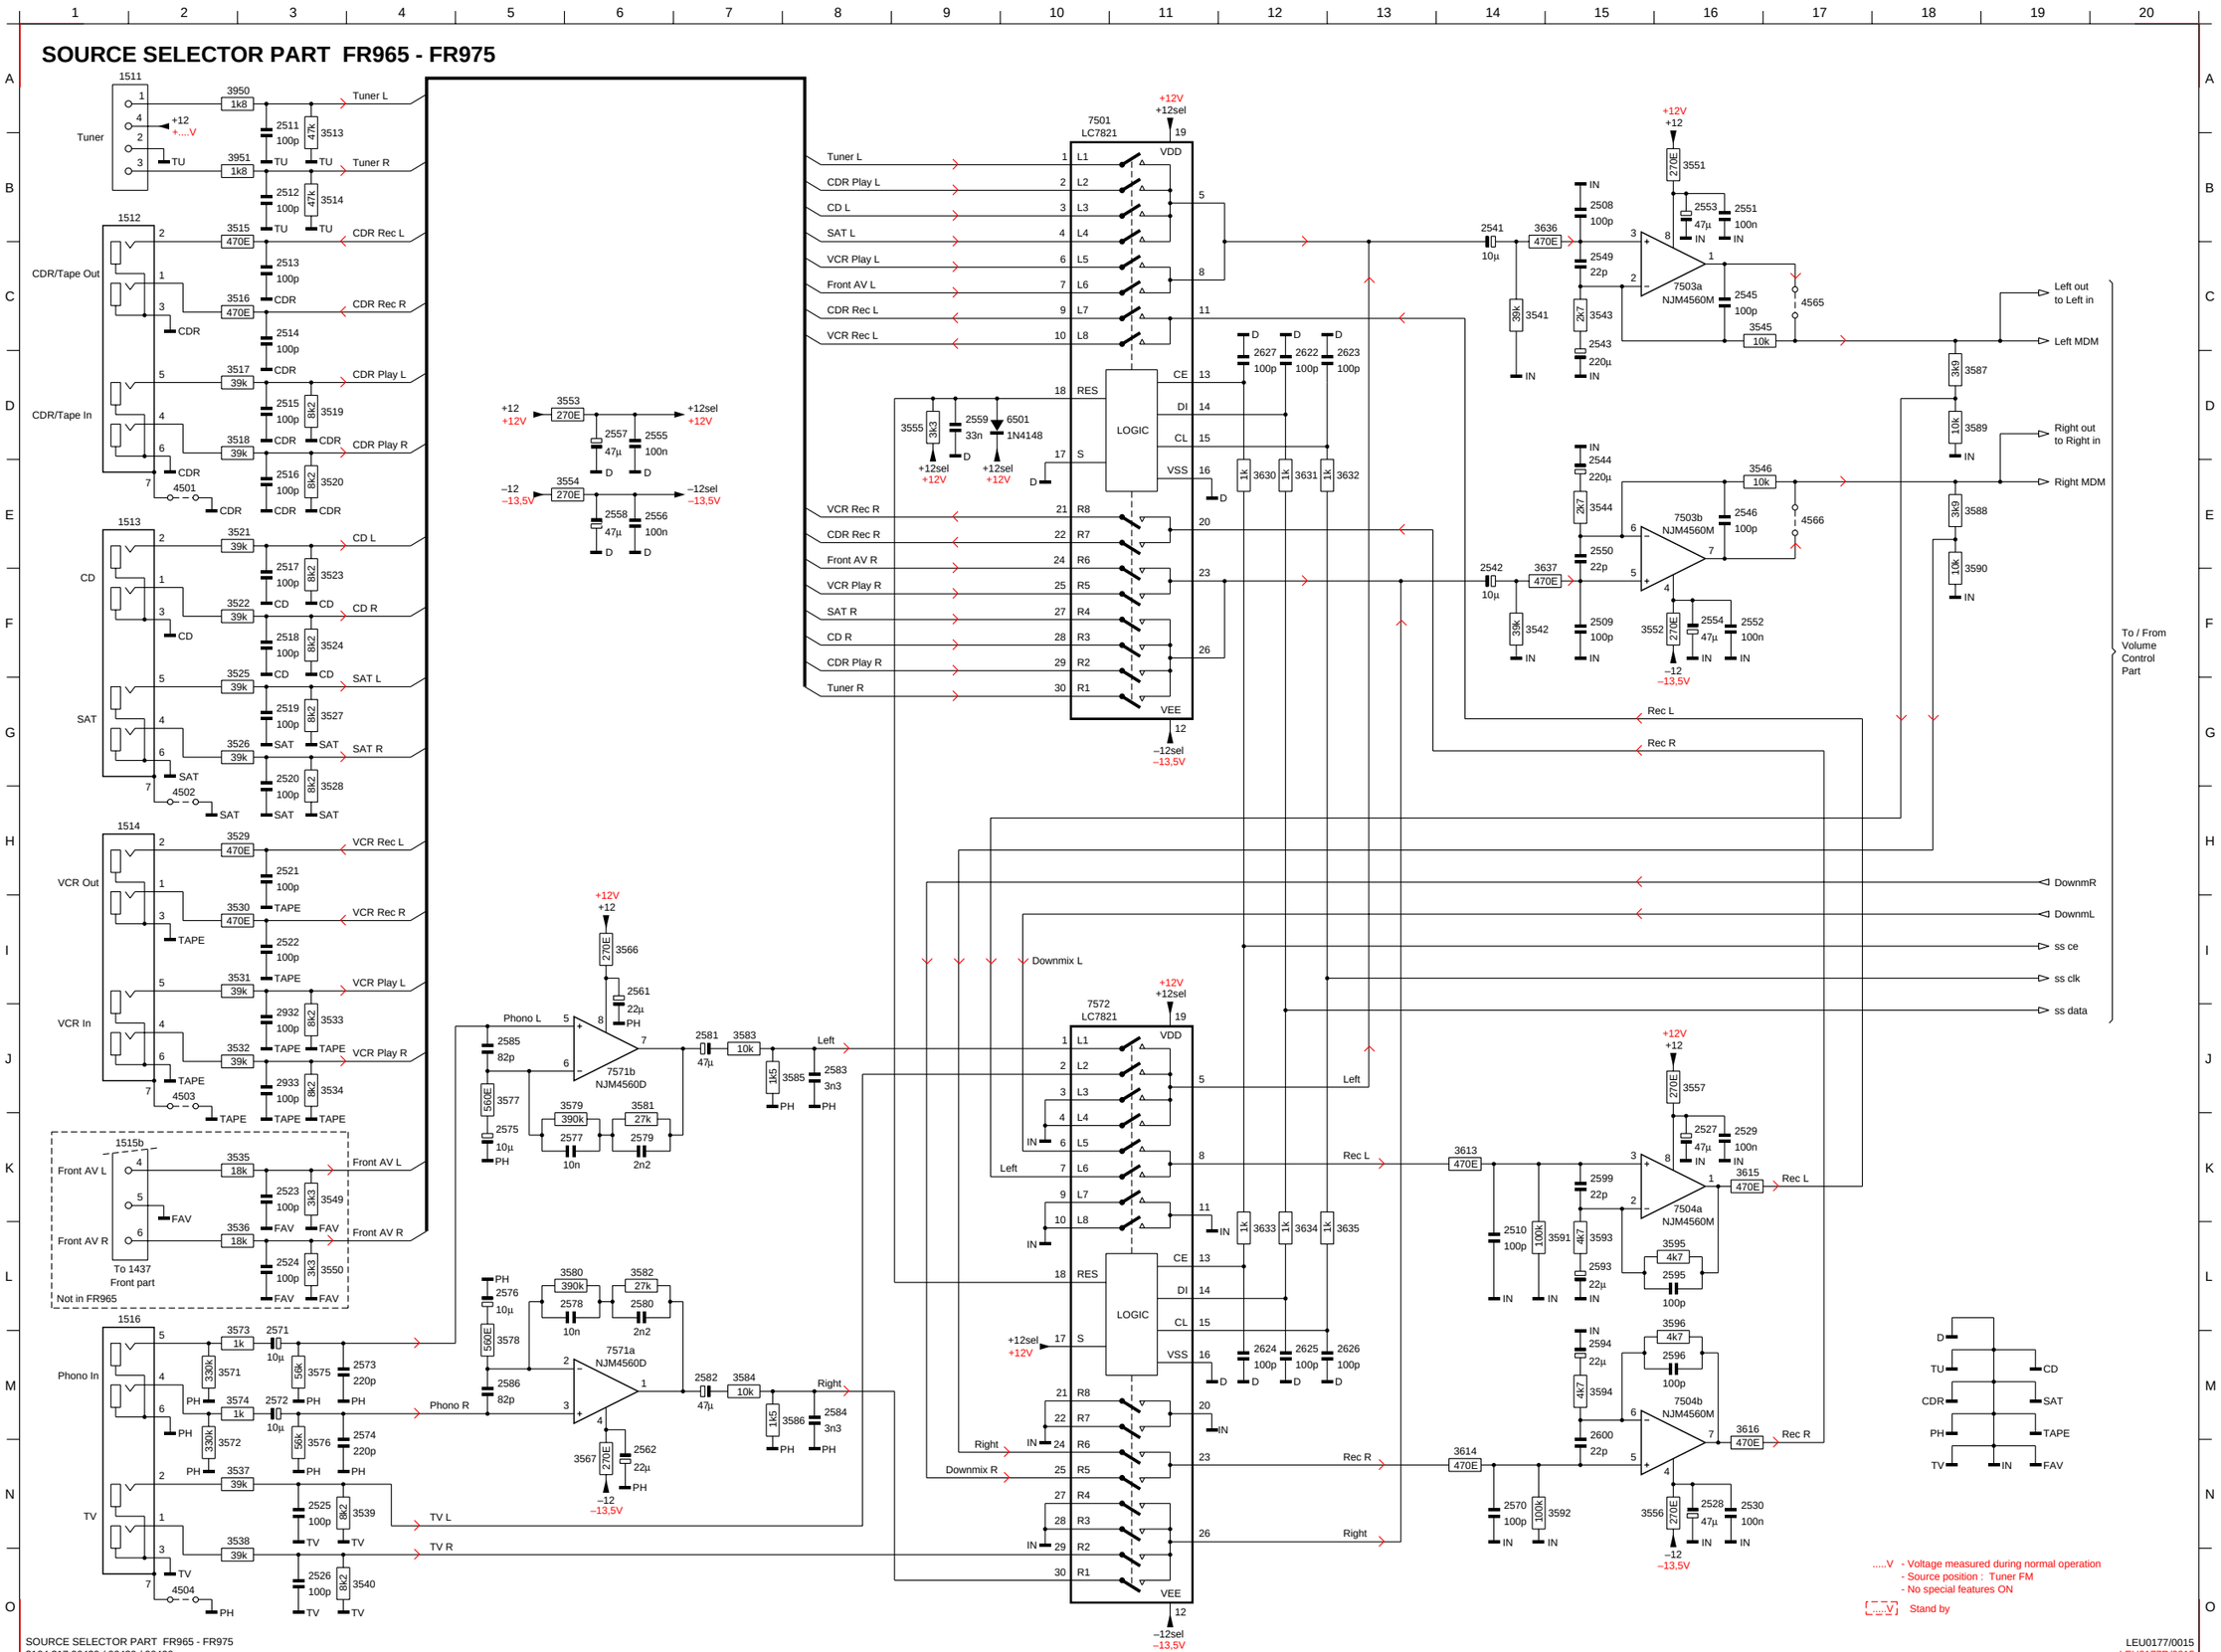

SOURCE SELECTOR PART FR965 - FR975
3104 217 06420 / 06430 / 06490

LEU0177/0015
LEU0177R/0015

1511	A1	3557	J16
1512	B1	3566	I6
1513	E1	3567	N6
1514	H1	3571	M2
1515b	K1	3572	N2
1516	L1	3573	M2
2508	B15	3574	M2
2509	F15	3575	M3
2510	L14	3576	N3
2511	A3	3577	J5
2512	B3	3578	M5
2513	C3	3579	J5
2514	C3	3580	L5
2515	D3	3581	J6
2516	E3	3582	L6
2517	F3	3583	J7
2518	F3	3584	M7
2519	G3	3585	J8
2520	G3	3586	M8
2521	H3	3587	D18
2522	I3	3588	E18
2523	K3	3589	D18
2524	L3	3590	F18
2525	N3	3591	L15
2526	O3	3592	N15
2527	K16	3593	L15
2528	N16	3594	M15
2529	K16	3595	L16
2530	N16	3596	L16
2541	B14	3613	K14
2542	F14	3614	N14
2543	C15	3615	K16
2544	E15	3616	M16
2545	C16	3630	E12
2546	E16	3631	E12
2549	C15	3632	E13
2550	E15	3633	L12
2551	B16	3634	L12
2552	F16	3635	L13
2553	B16	3636	B14
2554	F16	3637	F14
2555	D6	3950	A2
2556	E6	3951	B2
2557	D6	4501	E2
2558	E6	4502	H2
2559	D9	4503	J2
2561	I6	4504	O2
2562	N6	4565	C17
2570	N14	4566	E17
2571	M3	6501	D10
2572	M3	7501	A10
2573	M4	7503a	C16
2574	M4	7503b	E16
2575	K5	7504a	K16
2576	L5	7504b	M16
2577	K5	7571a	M6
2578	L5	7571b	J6
2579	K6	7572	J10
2580	L6		
2581	J7		
2582	M7		
2583	J8		
2584	M8		
2585	J5		
2586	M5		
2593	L15		
2594	M15		
2595	L16		
2596	M16		
2599	K15		
2600	M15		
2622	D12		
2623	D13		
2624	M12		
2625	M12		
2626	M13		
2627	D12		
2932	J3		
2933	J3		
3513	B3		
3514	B3		
3515	B2		
3516	C2		
3517	D2		
3518	D2		
3519	D3		
3520	E3		
3521	E2		
3522	F2		
3523	F3		
3524	F3		
3525	F2		
3526	G2		
3527	G3		
3528	H3		
3529	H2		
3530	I2		
3531	I2		
3532	J2		
3533	J3		
3534	J3		
3535	K2		
3536	L2		
3537	N2		
3538	N2		
3539	N4		
3540	O4		
3541	C14		
3542	F14		
3543	C15		
3544	E15		
3545	C16		
3546	E16		
3549	K3		
3550	L3		
3551	B16		
3552	F15		
3553	D5		
3554	E5		
3555	D9		
3556	N15		

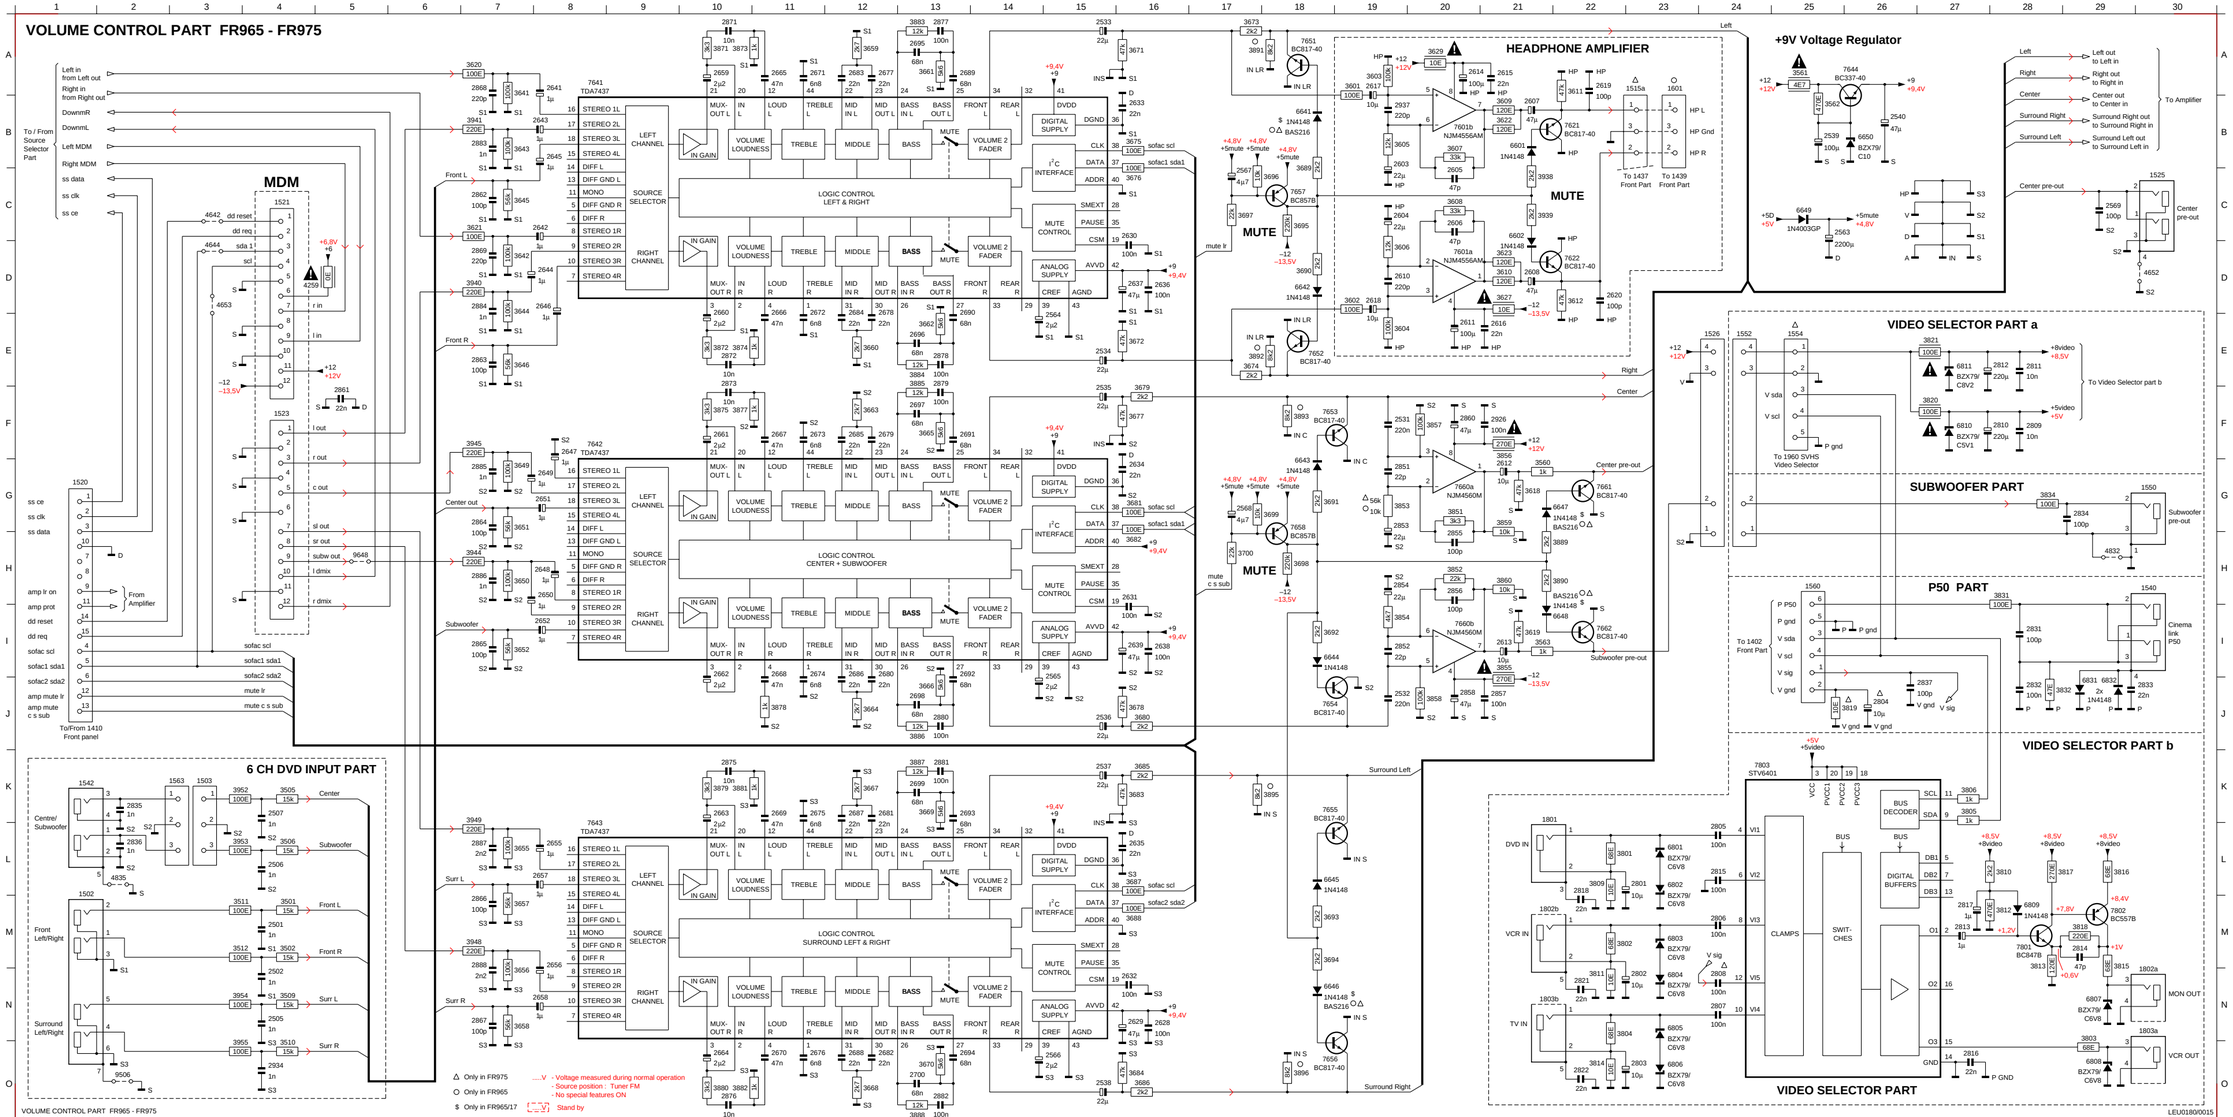

1502	M1	2694	O13	3664	J12	6650	B26
1503	K3	2695	A13	3665	F13	6801	L23
1515a	A23	2696	E13	3666	J13	6802	L23
1520	G1	2697	F13	3667	K12	6803	M23
1521	C4	2698	J13	3668	O12	6804	N23
1523	F4	2699	K13	3669	K13	6805	N23
1525	C30	2700	O13	3670	O13	6806	O23
1526	E24	2801	L23	3671	A16	6807	N29
1540	H30	2802	N23	3672	E16	6808	O29
1542	K1	2803	O23	3673	A17	6809	M28
1550	G30	2804	J26	3674	E17	6810	F27
1552	E24	2805	L24	3675	B16	6811	E27
1554	E25	2806	M24	3676	C16	6831	J29
1560	H25	2807	N24	3677	F16	6832	J29
1563	K2	2808	N24	3678	J16	7601a	D20
1601	A23	2809	F28	3679	F16	7601b	B20
1801	K21	2810	F28	3680	J16	7621	B22
1802a	N30	2811	E28	3681	G16	7622	D22
1802b	M21	2812	E28	3682	H16	7641	A8
1803a	N20	2813	M27	3683	K16	7642	F8
1803b	N21	2814	M29	3684	O16	7643	L8
2501	M4	2815	L24	3685	K16	7644	A25
2502	N4	2816	O27	3686	O16	7651	A18
2505	N4	2817	M27	3687	L16	7652	E18
2506	L4	2818	L22	3688	M16	7653	F18
2507	K4	2821	N22	3689	C18	7654	J18
2531	F19	2822	O22	3690	D18	7655	K18
2532	J19	2831	I28	3691	G18	7656	O18
2533	A15	2832	J28	3692	I18	7657	C18
2534	E15	2833	J30	3693	M18	7658	G18
2535	F15	2834	J29	3694	M18	7660a	G20
2536	J15	2835	K2	3695	C18	7660b	I20
2537	K15	2836	L2	3696	C18	7661	G22
2538	O15	2837	J27	3697	C17	7662	I22
2539	B25	2851	G19	3698	H18	7801	M28
2540	B26	2852	I19	3699	G18	7802	M29
2563	C25	2853	G19	3700	H17	7803	K24
2564	E15	2854	H19	3801	L22	9506	O2
2565	J15	2855	H20	3802	M22	9648	H5
2566	O15	2856	H20	3803	N29		
2567	C17	2857	J21	3804	N22		
2568	G17	2858	J20	3805	K27		
2569	C29	2860	F20	3806	K27		
2603	B19	2861	F5	3809	L22		
2604	C19	2862	C7	3810	L28		
2605	C20	2863	E7	3811	N22		
2606	C20	2864	G7	3812	M28		
2607	B21	2865	I7	3813	N28		
2608	D21	2866	M7	3814	O22		
2610	D19	2867	N7	3815	N29		
2611	E20	2868	A7	3816	L29		
2612	G21	2869	D7	3817	L28		
2613	I21	2871	A10	3818	M29		
2614	A20	2872	E10	3819	J25		
2615	A21	2873	E10	3820	F27		
2616	E21	2875	K10	3821	E27		
2617	A19	2876	O10	3831	M28		
2618	D19	2877	A13	3832	J28		
2619	A22	2878	E13	3834	G28		
2620	D22	2879	E13	3851	G20		
2628	N16	2880	J13	3852	H20		
2629	N16	2881	K13	3853	G19		
2630	C16	2882	O13	3854	I19		
2631	H16	2883	B7	3855	I21		
2632	N16	2884	D7	3856	F21		
2633	B16	2885	G7	3857	F20		
2634	G16	2886	H7	3858	J20		
2635	L16	2887	L7	3859	G21		
2636	D16	2888	M7	3860	H21		
2637	D16	2926	F21	3871	A10		
2638	I16	2934	O4	3872	E10		
2639	I16	2937	B19	3873	A10		
2641	A8	3501	M4	3874	E10		
2642	C7	3502	M4	3875	F10		
2643	B7	3505	K4	3877	F10		
2644	D8	3506	L4	3878	J11		
2645	B8	3509	N4	3879	K10		
2646	D8	3510	O4	3880	O10		
2647	F8	3511	M3	3881	K10		
2648	H8	3512	M3	3882	O10		
2649	G8	3560	G21	3883	A13		
2650	H8	3561	A25	3884	E13		
2651	G8	3562	B25	3885	E13		
2652	I8	3563	I21	3886	J13		
2655	L8	3601	A19	3887	K13		
2656	M8	3602	D19	3888	O13		
2657	L7	3603	A19	3889	H22		
2658	N7	3604	E19	3890	H22		
2659	A10	3605	B19	3891	A17		
2660	E10	3606	D19	3892	E17		
2661	F10	3607	B20	3893	F18		
2662	I10	3608	C20	3895	K18		
2663	K10	3609	B21	3896	O18		
2664	O10	3610	D21	3938	C21		
2665	A11	3611	A22	3939	C21		
2666	E11	3612	D22	3940	D7		
2667	F11	3618	G21	3941	B7		
2668	I11	3619	I21	3944	H7		
2669	K11	3620	A7	3945	F7		
2670	O11	3621	C7	3948	M7		
2671	A12	3622	B21	3949	C7		
2672	E11	3623	D21	3952	K3		
2673	F11	3627	D21	3953	L3		
2674	I11	3628	A20	3954	N3		
2675	K11	3641	B7	3955	O3		
2676	O11	3642	D7	4259	D4		
2677	A12	3643	B7	4642	C3		
2678	E12	3644	E7	4644	D3		
2679	F12	3645	C7	4652	D30		
2680	I12	3646	E7	4653	O3		
2681	K12	3649	G7	4832	H29		
2682	O12	3650	H7	4835	L2		
2683	A12	3651	G7	6601	B21		
2684	E12	3652	I7	6602	C21		
2685	F12	3655	L7	6641	B18		
2686	I12	3656	N7	6642	D18		
2687	K12	3657	M7	6643	G18		
2688	O12	3658	O7	6644	G18		
2689	A13	3659	A12	6645	L18		
2690	E13	3660	E12	6646	N18		
2691	F13	3661	A13	6647	C22		
2692	I13	3662	E13	6648	I22		
2693	K13	3663	F12	6649	C25		

1251	A1	1260	B3	2256	C6	2266	H3	2273	K4	2279	K5	3254	J3	3265	E5	3273	K6	3294	H6	6256	J7	6262	I3	6280	F6	7257	E5
1252	A1	1261	C3	2257	J5	2267	J6	2274	J7	2281	H5	3256	M3	3266	F7	3274	K7	3295	I7	6257	H3	6263	I4	6281	F6	7258	E6
1253	H1	1266	G9	2259	D7	2268	I4	2275	K4	2282	H7	3257	L3	3268	E5	3275	L7	4253	D5	6258	H3	6264	J7	7251	J5	7908	H6
1254	L1	2251	B3	2260	B7	2269	I4	2276	M5	2287	K4	3258	M3	3269	E6	3291	G4	6251	B4	6259	H4	6267	L6	7252	K5	7910	G6
1255	F1	2253	B4	2262	C7	2270	I5	2277	M7	2290	H5	3261	K5	3270	F7	3292	H7	6253	B5	6260	H6	6268	K2	7253	M3	9260	E5
1257	K9	2254	C4	2264	C7	2271	I7	2278	M2	2295	H6	3262	K6	3271	F8	3293	H6	6255	J7	6261	I3	6276	E7	7254	L6		

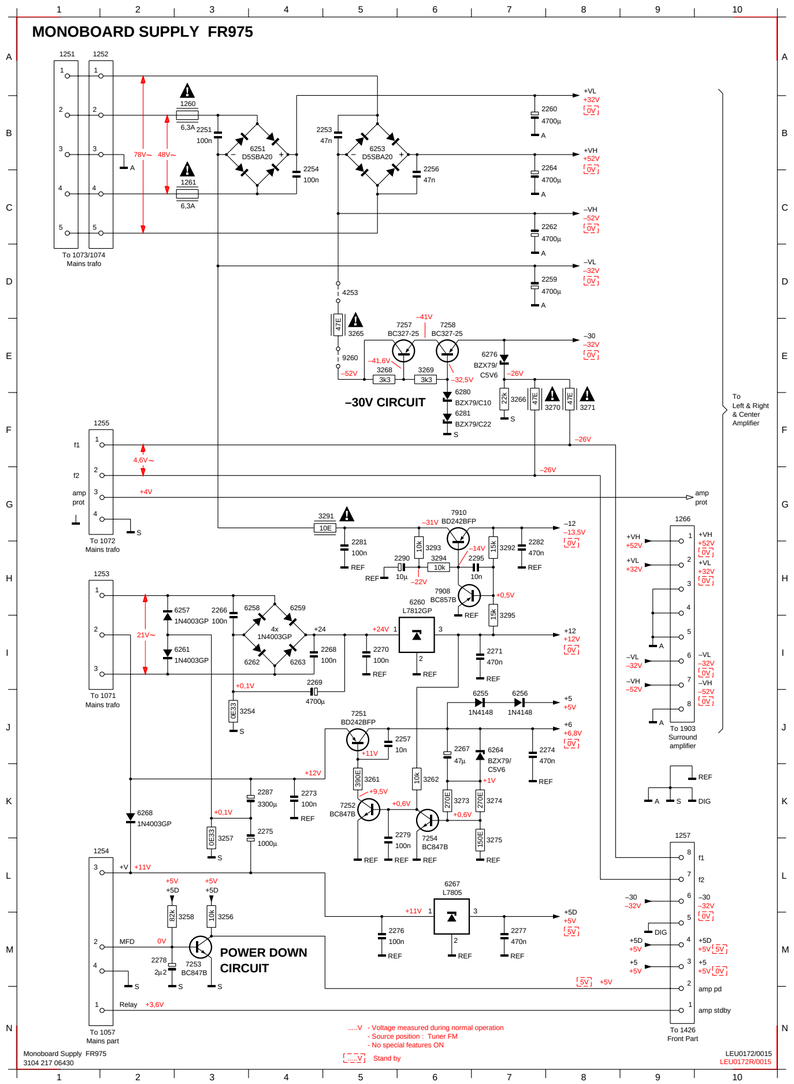

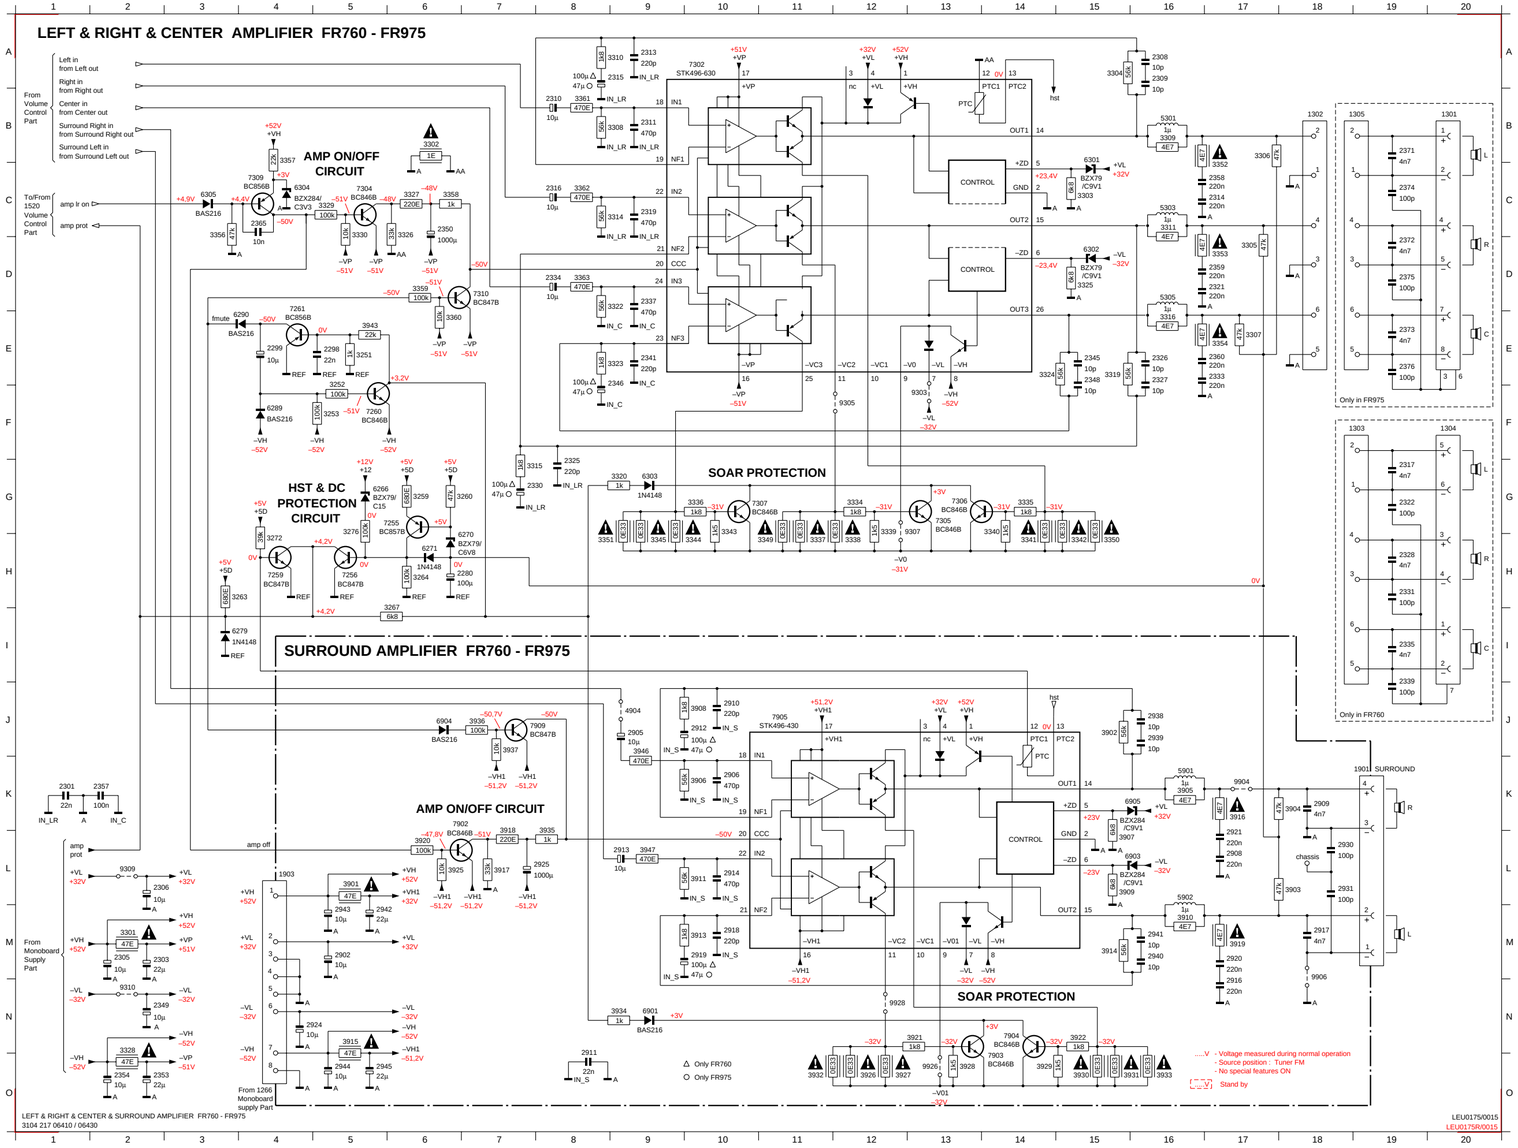

1301	B20	3336	G10																						
1302	B18	3337	H11																						
1303	F18	3338	H12																						
1304	F20	3339	H12																						
1305	B18	3340	H14																						
1901	K19	3341	H14																						
1903	L4	3342	H15																						
2280	H6	3343	H10																						
2298	E5	3344	H10																						
2299	E4	3345	H9																						
2301	K1	3349	H10																						
2303	M2	3350	H15																						
2305	M2	3351	H8																						
2306	L2	3352	C17																						
2308	A16	3353	D17																						
2309	A16	3354	E17																						
2310	B8	3356	D3																						
2311	B9	3357	C4																						
2313	A9	3358	C6																						
2314	C17	3359	D6																						
2315	A8	3360	E6																						
2316	C8	3361	B8																						
2317	G19	3362	C8																						
2319	C9	3363	D8																						
2321	D17	3901	L5																						
2322	G19	3902	J15																						
2325	G8	3903	L18																						
2326	E16	3904	K18																						
2327	E16	3905	K16																						
2328	H19	3906	K10																						
2330	G7	3907	L15																						
2331	H19	3908	J10																						
2333	E17	3909	L15																						
2334	D8	3910	M16																						
2335	I19	3911	L10																						
2337	D9	3913	M10																						
2339	J19	3914	M15																						
2341	E9	3915	N5																						
2345	E15	3916	K17																						
2346	F8	3917	L7																						
2348	E15	3918	L7																						
2349	N2	3919	M17																						
2350	C6	3920	L6																						
2353	O2	3921	N11																						
2354	O2	3922	N15																						
2357	K2	3925	L6																						
2358	C17	3926	O12																						
2359	D17	3927	O12																						
2360	E17	3928	O13																						
2365	C4	3929	O14																						
2371	B19	3930	O15																						
2372	D19	3931	O15																						
2373	E19	3932	O11																						
2374	C19	3933	O16																						
2375	D19	3934	N9																						
2376	E19	3935	L8																						
2902	M5	3936	J7																						
2905	J9	3937	J7																						
2906	K10	3943	E5																						
2908	L17	3946	J9																						
2909	K18	3947	L9																						
2910	J10	4904	J9																						
2911	O8	5301	B16																						
2912	J10	5303	C16																						
2913	L9	5305	D16																						
2914	L10	5901	K16																						
2916	N17	5902	L16																						
2917	M18	6266	G5																						
2918	M10	6270	H6																						
2919	M10	6271	H6																						
2920	M17	6279	I3																						
2921	L17	6289	F4																						
2924	N4	6290	E3																						
2925	L7	6301	B15																						
2930	L18	6302	D15																						
2931	L18	6303	G9																						
2938	J16	6304	C4																						
2939	J16	6305	C3																						
2940	M16	6901	N9																						
2941	M16	6903	L15																						
2942	M5	6904	J6																						
2943	M5	6905	K15																						
2944	O5	7255	G5																						
2945	O5	7256	H5																						
3251	E5	7259	H4																						
3252	F5	7260	F5																						
3253	F5	7261	E4																						
3259	G6	7302	C5																						
3260	G6	7304	C5																						
3263	H3	7305	G13																						
3264	H6	7306	G13																						
3267	I5	7307	G10																						
3272	H4	7309	C4																						
3274	E5	7310	D7																						
3301	M2	7902	K6																						
3302	B6	7903	O14																						
3303	C15	7904	N14																						
3304	A15	7905	J11																						
3305	D17	7909	J7																						
3306	B17	9303	F13																						
3307	E17	9305	F12																						
3308	B8	9307	H12																						
3309	B16	9309	L2																						
3310	A8	9310	N2																						
3311	C16	9904	K17																						
3314	C8	9906	N18																						
3315	G7	9926	O13																						
3316	E16	9928	N12																						
3319	E15																								
3320	G9																								
3322	D8																								
3323	E8																								
3324	E14																								
3325	D15																								
3326	D6																								
3327	C6																								
3328	N2																								
3329	C5																								
3330	D5																								
3334	G12																								
3335	G14																								

MONO2 BOARD - COMPONENT SIDE VIEW

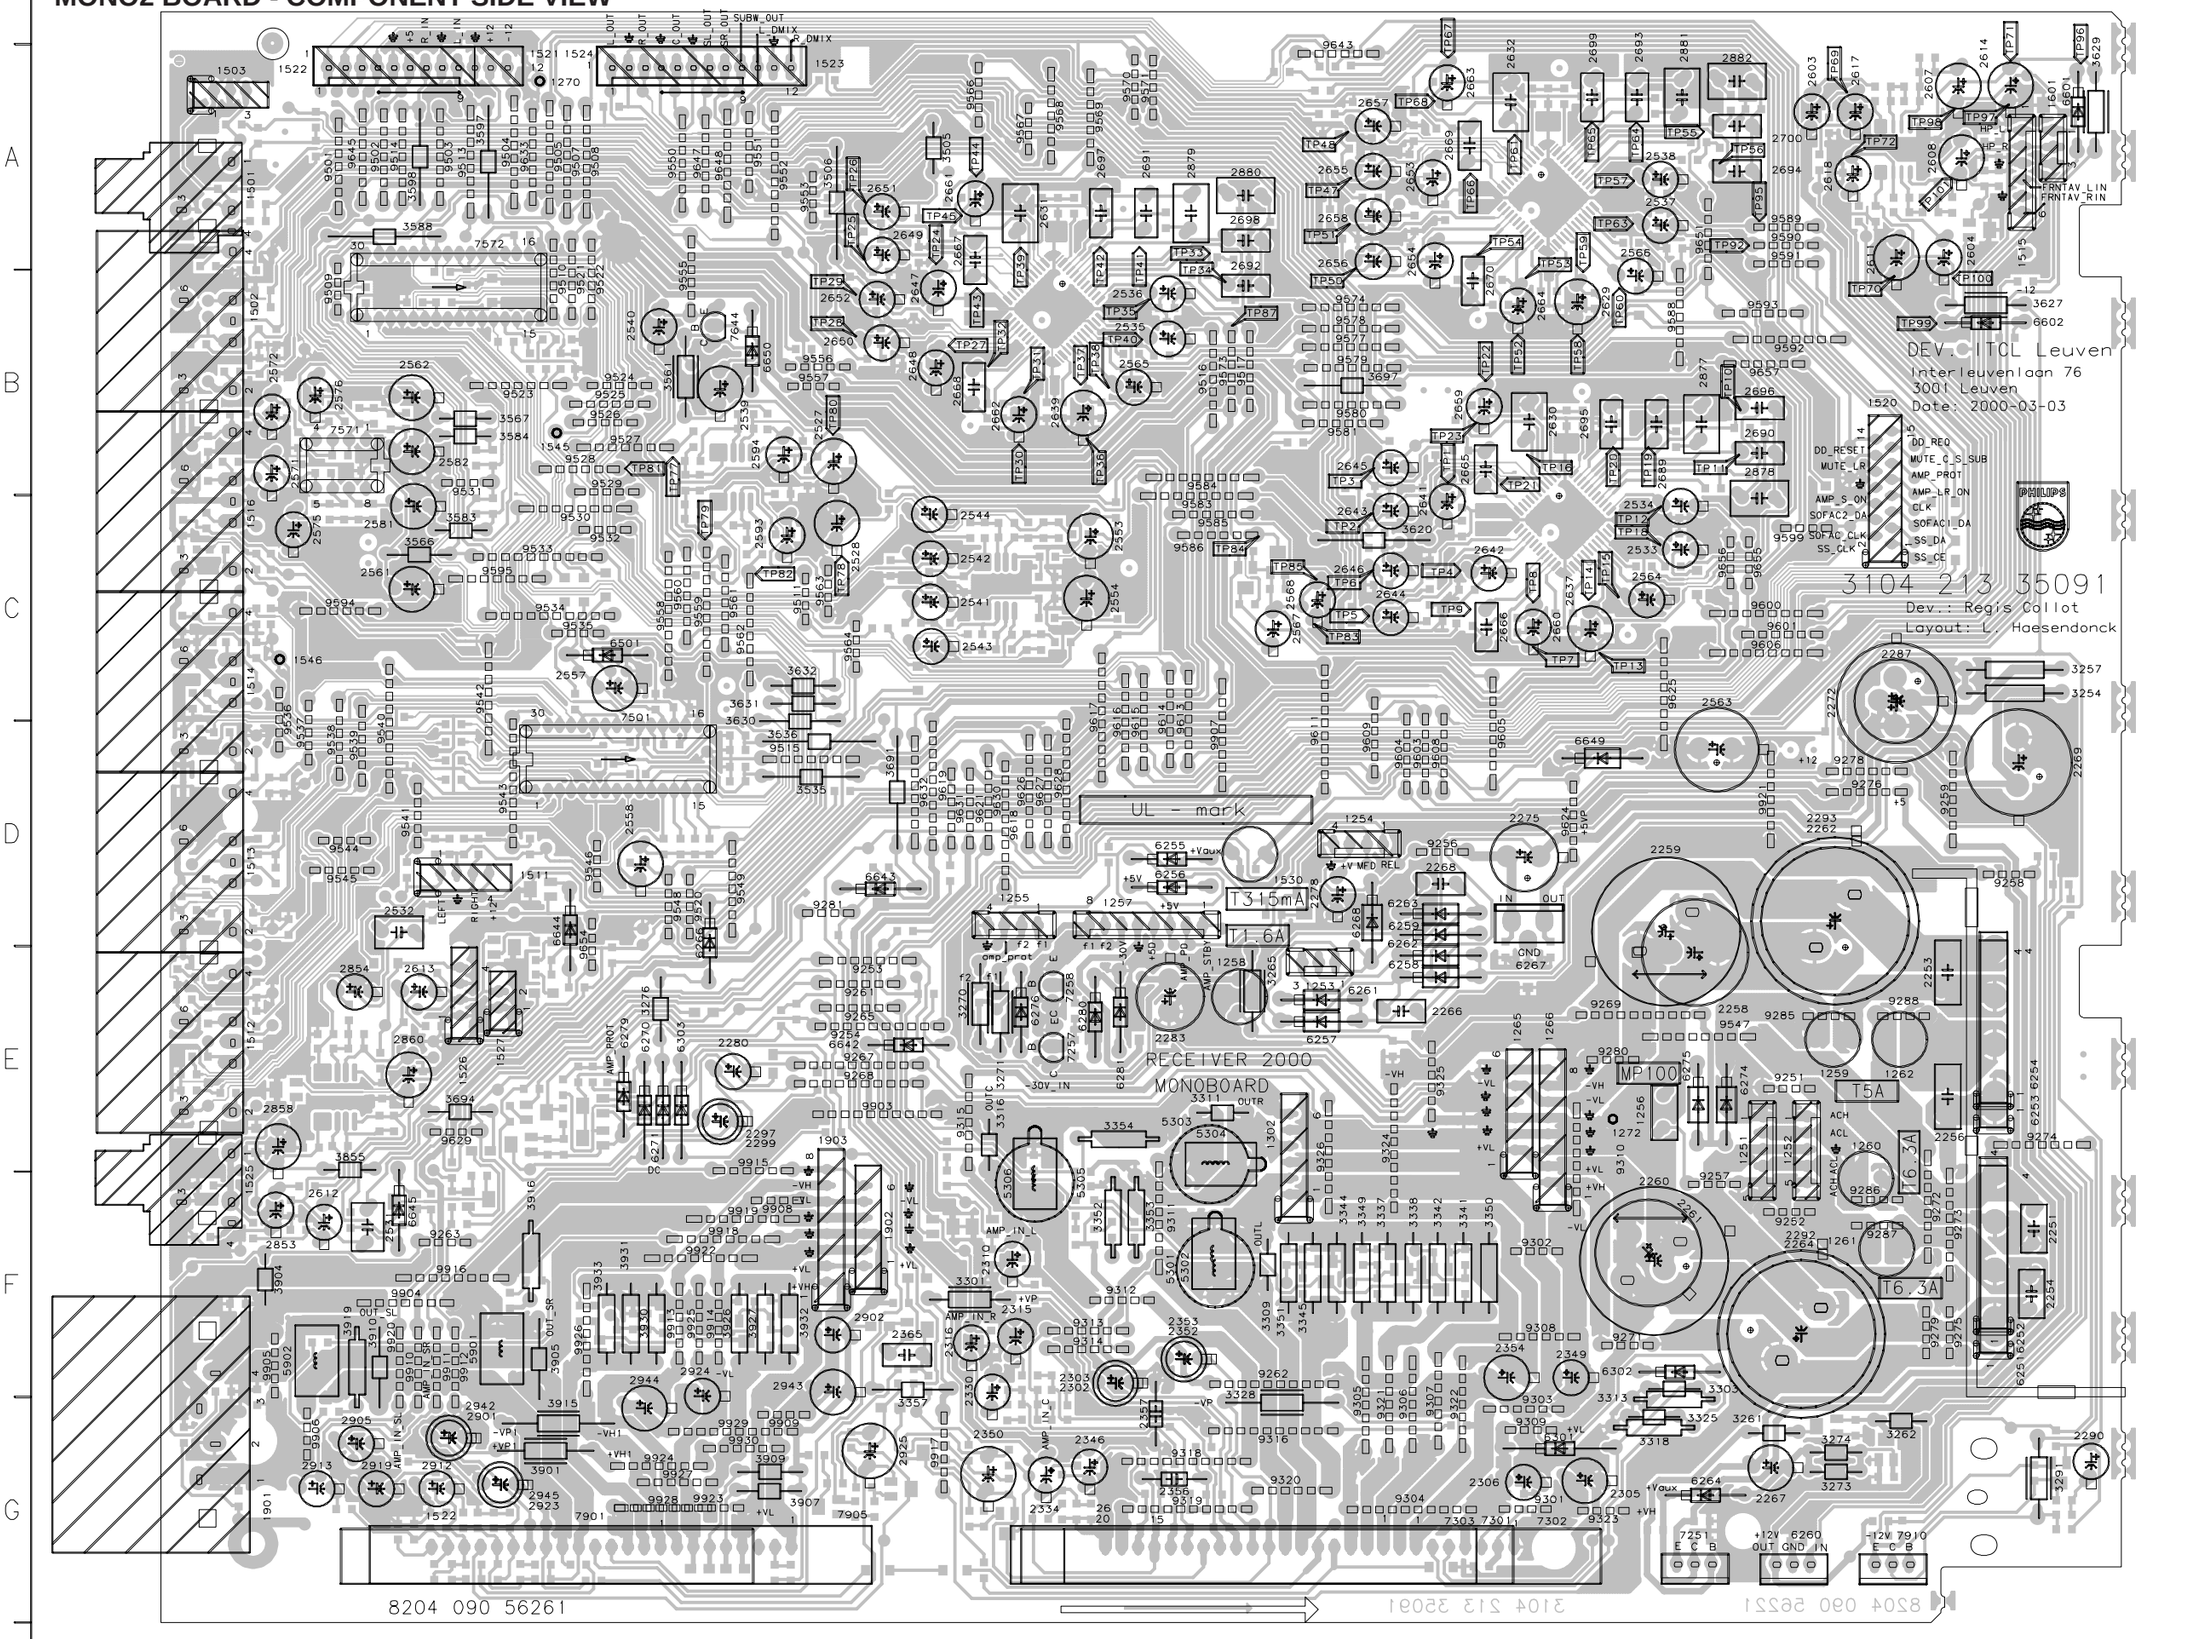

This assembly drawing shows a summary of all versions. For components used in a specific version see shematic diagram and respective partslist.

MONO2 BOARD - MAPPING COMPONENT SIDE VIEW

1251	E8	2306	G7	2643	C6	3271	E4	5306	F4	9272	F8	9536	C1	9619	D4
1252	E8	2310	F4	2644	C6	3273	G8	5901	F2	9273	F8	9537	D1	9621	D4
1253	E6	2315	F4	2645	B6	3274	G8	5902	F1	9274	E9	9538	D1	9624	D7
1254	D6	2316	F4	2646	C6	3276	E3	6251	F9	9275	F8	9539	D1	9625	C7
1255	D4	2330	F4	2647	B4	3291	G9	6252	F9	9276	D8	9540	D2	9626	D4
1256	E7	2334	G4	2648	B4	3301	F4	6253	E9	9278	D8	9541	D2	9627	D4
1257	D5	2346	G5	2649	A4	3303	F7	6254	E9	9279	F8	9542	C2	9628	D5
1258	E5	2349	F7	2650	B4	3309	F5	6255	D5	9280	E7	9543	D2	9629	E2
1259	E8	2350	G4	2651	A4	3311	E5	6256	D5	9281	D3	9544	D1	9630	D4
1260	F8	2352	F5	2652	B4	3313	G7	6257	E6	9285	E8	9545	D1	9631	D4
1261	F8	2353	F5	2653	A6	3316	E4	6258	E6	9286	F8	9546	D2	9632	D4
1262	E8	2354	F6	2654	A6	3318	G7	6259	D6	9287	F8	9547	E7	9633	A2
1265	E7	2356	G5	2655	A6	3325	G7	6260	G8	9288	E8	9548	D3	9643	A6
1266	E7	2357	G5	2656	A6	3328	G5	6261	E6	9301	G7	9549	D3	9645	A1
1270	A2	2365	F4	2657	A6	3337	F6	6262	E6	9302	F7	9550	A3	9647	A3
1272	E7	2527	B3	2658	A6	3338	F6	6263	D6	9303	G7	9551	A3	9648	A3
1302	E6	2528	C3	2659	B6	3341	F6	6264	G7	9304	G6	9552	A3	9651	A7
1501	A1	2531	F1	2660	C7	3342	F6	6266	D3	9305	G6	9553	A3	9654	D2
1502	B1	2532	D2	2661	A4	3344	F6	6267	D7	9306	G6	9555	B3	9655	C8
1503	A1	2533	C7	2662	B4	3345	F6	6268	D6	9307	G6	9556	B3	9656	C7
1511	D2	2534	C7	2663	A6	3349	F6	6270	E3	9308	F7	9557	B3	9657	B8
1512	E1	2535	B5	2664	B7	3350	F6	6271	E3	9309	G7	9558	C3	9903	E4
1513	D1	2536	B5	2665	B6	3351	F6	6274	E7	9310	E7	9559	C3	9904	F2
1514	C1	2537	A7	2666	C6	3352	F5	6275	E7	9311	F5	9560	C3	9905	F1
1515	A9	2538	A7	2667	A4	3353	F5	6276	E4	9312	F5	9561	C3	9906	G1
1516	C1	2539	B3	2668	B4	3354	E5	6279	E3	9313	F5	9562	C3	9907	D5
1520	B8	2540	B3	2669	A6	3357	F4	6280	E5	9314	F5	9563	C3	9908	F3
1521	A2	2541	C4	2670	B6	3505	A4	6281	E5	9315	E4	9564	C4	9909	G3
1522	A2	2542	C4	2689	B7	3506	A3	6301	G7	9316	G5	9566	A4	9910	F2
1523	A3	2543	C4	2690	B8	3535	D3	6302	F7	9318	G5	9567	A4	9911	F2
1524	A3	2544	C4	2691	A5	3536	D3	6303	E3	9319	G5	9568	A4	9912	F2
1525	F1	2553	C5	2692	B5	3561	B3	6501	C2	9320	G6	9569	A5	9913	F3
1526	E2	2554	C5	2693	A7	3566	C2	6601	A9	9321	G6	9570	A5	9914	F3
1527	E2	2557	C3	2694	A7	3567	B2	6602	B9	9322	G6	9571	A5	9915	E3
1530	D5	2558	D3	2695	B7	3583	C2	6642	E4	9323	G7	9573	B5	9916	F2
1545	B2	2561	C2	2696	B8	3584	B2	6643	D4	9324	E6	9574	B6	9917	G4
1546	C1	2562	B2	2697	A5	3588	A1	6644	D2	9325	E6	9577	B6	9918	F3
1601	A9	2563	D7	2698	A5	3597	A2	6645	F2	9326	E6	9578	B6	9919	F3
1901	G1	2564	C7	2699	A7	3598	A2	6649	D7	9501	A1	9579	B6	9920	F2
1902	F4	2565	B5	2700	A7	3620	C6	6650	B3	9502	A1	9580	B6	9921	D8
1903	F3	2566	B7	2853	F1	3627	B9	7251	G7	9503	A2	9581	B6	9922	F3
2251	F9	2567	C5	2854	E1	3629	A9	7257	E4	9504	A2	9583	C5	9923	G3
2253	E8	2568	C6	2858	E1	3630	D3	7258	E4	9505	A2	9584	B5	9924	G3
2254	F9	2571	B1	2860	E2	3631	C3	7301	G5	9507	A2	9585	C5	9925	F3
2256	E8	2572	B1	2877	B7	3632	C3	7302	G6	9508	A2	9586	C5	9926	F2
2258	E7	2575	C1	2878	C8	3691	D4	7303	G5	9509	B1	9588	B7	9927	G3
2259	D7	2576	B1	2879	A5	3694	E2	7501	D3	9510	B2	9589	A8	9928	G3
2260	F7	2581	C2	2880	A5	3697	B6	7571	B1	9511	C3	9590	A8	9929	G3
2261	F7	2582	B2	2881	A7	3855	E1	7572	B2	9513	A2	9591	A8	9930	G3
2262	D8	2593	C3	2882	A7	3901	G2	7644	B3	9514	A2	9592	B8		
2264	F8	2594	B3	2901	G2	3904	F1	7901	G2	9515	D3	9593	B8		
2266	E6	2603	A8	2902	F3	3905	F2	7905	G3	9516	B5	9594	C1		
2267	G8	2604	A8	2905	G1	3907	G3	7910	G8	9517	B5	9595	C2		
2268	D6	2607	A8	2912	G2	3909	G3	9251	E8	9520	D3	9599	C8		
2269	D9	2608	A8	2913	G1	3910	F1	9252	F8	9521	B2	9600	C8		
2272	C8	2611	A8	2919	G1	3915	G2	9253	E4	9522	B2	9601	C8		
2275	D7	2612	F1	2923	G2	3916	F2	9254	E4	9523	B2	9603	D6		
2278	D6	2613	E2	2924	F3	3919	F1	9256	D6	9524	B3	9604	D6		
2280	E3	2614	A9	2925	G4	3926	F3	9257	F7	9525	B2	9605	D6		
2283	E5	2617	A8	2942	G2	3927	F3	9258	D9	9526	B2	9606	C8		
2287	C8	2618	A8	2943	F3	3930	F3	9259	D8	9527	B3	9608	D6		
2290	G9	2629	B7	2944	G3	3931	F3	9261	E4	9528	B2	9609	D6		
2292	F8	2630	B7	2945	G2	3932	F3	9262	F5	9529	B2	9611	D6		
2293	D8	2631	A4	3254	C9	3933	F2	9263	F2	9530	C2	9613	C5		
2297	E3	2632	A6	3257	C9	5301	F5	9265	E4	9531	B2	9614	C5		
2299	E3	2637	C7	3261	G8	5302	F5	9267	E4	9532	C2	9615	D5		
2302	F5	2639	B5	3262	G8	5303	E5	9268	E4	9533	C2	9616	D5		
2303	F5	2641	C6	3265	E5	5304	E5	9269	E7	9534	C2	9617	C5		
2305	G7	2642	C6	3270	E4	5305	F4	9271	F7	9535	C2	9618	D4		

PCS 102 467

10-9

MONO2 BOARD - MAPPING COPPER SIDE VIEW

2257	G2	2550	C5	2862	B3	3295	G1	3546	C5	3644	C3	3879	A3	4513	A8	4925	F5
2270	G1	2551	C5	2863	C3	3302	G3	3547	C5	3645	B3	3880	B3	4514	B8	6289	E6
2271	G1	2552	C5	2864	A5	3304	F5	3548	C5	3646	C3	3881	A3	4515	B8	6290	E6
2273	G2	2555	D6	2865	B5	3305	F4	3549	D6	3649	A5	3882	B3	4516	B8	6304	F5
2274	G2	2556	D6	2866	A3	3306	F4	3550	D6	3650	B5	3883	B2	4517	B7	6305	F5
2276	E3	2559	C6	2867	A3	3307	E5	3551	C4	3651	A5	3884	B1	4518	B7	6641	F5
2277	E2	2569	F8	2868	C3	3308	G4	3552	C4	3652	B5	3885	A4	4519	C8	6646	E7
2279	G1	2570	B6	2869	C3	3310	F5	3553	C7	3653	A3	3886	A4	4520	C7	6647	E7
2281	G1	2573	B8	2871	B3	3314	G4	3554	D6	3654	A3	3887	A2	4521	D7	6648	D7
2282	G1	2574	B8	2872	C3	3315	F5	3555	C6	3655	A3	3888	A2	4522	D7	6901	F7
2295	G1	2577	C8	2873	A5	3319	F5	3556	C5	3656	A3	3889	E7	4523	D7	6903	G6
2298	E7	2578	B8	2874	B5	3320	E6	3557	B6	3657	A3	3890	E7	4524	D7	6904	G5
2301	F5	2579	C8	2875	A3	3322	G4	3560	F8	3658	A3	3891	F5	4526	E7	6905	G6
2304	G3	2580	B7	2876	B3	3323	G4	3562	B6	3659	B2	3892	F5	4528	D6	7252	G1
2307	F5	2583	C7	2883	B3	3324	G4	3563	E7	3660	B1	3893	D5	4529	D6	7253	D3
2308	G5	2584	B7	2884	C3	3326	G5	3571	B8	3661	B2	3894	D7	4530	C7	7254	G1
2309	G5	2585	B8	2885	B5	3327	G5	3572	B8	3662	B1	3895	F7	4531	C7	7255	E6
2311	G4	2586	B8	2886	B5	3329	G5	3573	B8	3663	A5	3896	F7	4532	C7	7256	E7
2312	G4	2595	C6	2887	A3	3330	G5	3574	B8	3664	A4	3902	G7	4533	C7	7259	E7
2313	G4	2596	B6	2888	A3	3334	F3	3575	B8	3665	A4	3903	F8	4537	A6	7260	E7
2314	F4	2599	C6	2904	G7	3335	F3	3576	B8	3666	A4	3906	G7	4538	A5	7261	E7
2319	G4	2600	B6	2906	G7	3336	F3	3577	C8	3667	A2	3908	G7	4539	B5	7304	G5
2320	G4	2601	A7	2907	G7	3339	F3	3578	B8	3668	A2	3911	G7	4540	A6	7305	F3
2321	F4	2602	B7	2908	F7	3340	F3	3579	C8	3669	A2	3913	G7	4541	A3	7306	F3
2324	G5	2605	A1	2909	F8	3343	F3	3580	B8	3670	A1	3914	G7	4542	A3	7307	F3
2325	G4	2606	A1	2910	G7	3356	F5	3581	C8	3671	C2	3917	G6	4543	A3	7309	F5
2326	G5	2609	B8	2911	G7	3358	G5	3582	B7	3672	C2	3918	G6	4544	A3	7310	G5
2327	G5	2610	A1	2914	G7	3359	G5	3585	C7	3673	D5	3920	F5	4545	B1	7503	C5
2333	F4	2615	A1	2915	G7	3360	G5	3586	B7	3674	D5	3921	F6	4548	C1	7504	B6
2337	G4	2616	A1	2916	F8	3361	F5	3587	B7	3675	C2	3922	F6	4550	C3	7601	A1
2338	G4	2619	A1	2917	G8	3362	G4	3589	B7	3676	C2	3925	G5	4551	C3	7621	A1
2341	G4	2620	A1	2918	G7	3363	G4	3590	B7	3677	B4	3928	F6	4552	C3	7622	A1
2345	G4	2621	B8	2920	G8	3501	B3	3591	C6	3678	B4	3929	F6	4553	C4	7641	C2
2347	G4	2622	D6	2921	F7	3502	C3	3592	B6	3679	D5	3934	F7	4555	C5	7642	B5
2348	G5	2623	D6	2926	E8	3509	A3	3593	C6	3680	D5	3935	G5	4556	C4	7643	A2
2351	G3	2624	B7	2927	F6	3510	A3	3594	B6	3681	B4	3936	G5	4557	C5	7651	F5
2358	F4	2625	B7	2929	F6	3511	B8	3595	C6	3682	B4	3937	G5	4558	C5	7652	F5
2359	F4	2626	B7	2930	G8	3512	B8	3596	B6	3683	A2	3938	B1	4559	C4	7653	D5
2360	F4	2627	D6	2931	G8	3513	D7	3601	A1	3684	A2	3939	B1	4560	E8	7654	D7
2363	F3	2628	B2	2932	C8	3514	D7	3602	A1	3685	F7	3940	C3	4564	A8	7655	F7
2501	B8	2633	C2	2933	C8	3515	E8	3603	A1	3686	E7	3941	B3	4565	C5	7656	F7
2502	B8	2634	B4	2934	B8	3516	E8	3604	A1	3687	A2	3943	E7	4566	C5	7657	C4
2505	B8	2635	A2	2935	F3	3517	E8	3605	A1	3688	A2	3944	B5	4641	A3	7658	C4
2506	A8	2636	C2	2936	F3	3518	E8	3606	A1	3689	E5	3945	A5	4642	A4	7660	E8
2507	A8	2638	B4	2937	A1	3519	E8	3607	A1	3690	E5	3946	G7	4644	A3	7661	E8
2508	C5	2671	C2	2938	G7	3520	E8	3608	A1	3692	E7	3947	G8	4649	B1	7662	E7
2509	C5	2672	C2	2939	G7	3521	D8	3609	A1	3693	F8	3948	A3	4650	B4	7902	G6
2510	C6	2673	B4	2940	G7	3522	D8	3610	A1	3695	D1	3949	A3	4651	C2	7903	F6
2511	D7	2674	B5	2941	G7	3523	D8	3611	A1	3696	C4	3950	D7	4652	F8	7904	F6
2512	D7	2675	B2	2946	G6	3524	D8	3612	A1	3698	E6	3951	D7	4653	A3	7908	G1
2513	E8	2676	B2	3251	E7	3525	D8	3613	C6	3699	C4	3952	A8	4901	G6	7909	G5
2514	E8	2677	B2	3252	E7	3526	D8	3614	B6	3700	B3	3953	A8	4902	G7		
2515	E8	2678	B2	3253	E7	3527	D8	3615	C6	3851	E7	3954	B8	4903	G7		
2516	E8	2679	A4	3255	G1	3528	D8	3616	B6	3852	E8	3955	A8	4904	F7		
2517	D8	2680	A4	3256	D4	3529	D8	3618	F8	3853	F8	4251	E2	4905	B6		
2518	D8	2681	A2	3258	D4	3530	C8	3619	E7	3854	E8	4252	E6	4908	E6		
2519	D8	2682	A2	3259	E7	3531	C8	3621	C3	3856	E8	4253	E3	4909	F7		
2520	D8	2683	B2	3260	E7	3532	C8	3622	A1	3857	F8	4256	D7	4910	F5		
2521	D8	2684	B2	3263	E7	3533	C8	3623	A1	3858	E8	4258	E4	4913	G2		
2522	C8	2685	A5	3264	E6	3534	C8	3633	B7	3859	E7	4259	D4	4914	D4		
2523	D6	2686	B4	3266	E5	3537	C8	3634	B7	3860	E7	4260	C1	4915	C4		
2524	D6	2687	A2	3267	E6	3538	C8	3635	B7	3871	B3	4283	D1	4916	F7		
2525	C8	2688	A2	3268	E4	3539	C8	3636	C5	3872	C3	4284	D1	4917	C1		
2526	C8	2851	E8	3269	E4	3540	C8	3637	C5	3873	B3	4285	D1	4918	B2		
2529	B6	2852	E8	3272	E7	3541	C5	3638	C5	3874	C3	4287	D4	4920	C1		
2530	B6	2855	E8	3275	G1	3542	C5	3639	C5	3875	A5	4320	G4	4921	C1		
2545	C5	2856	E8	3292	G1	3543	C5	3641	C3	3876	B5	4505	A8	4922	E6		
2546	C5	2857	E8	3293	G1	3544	C5	3642	C3	3877	A5	4506	A6	4923	G5		
2549	C5	2861	A7	3294	G1	3545	C5	3643	C3	3878	B5	4512	B5	4924	G5		

MONO2 BOARD - COPPER SIDE VIEW

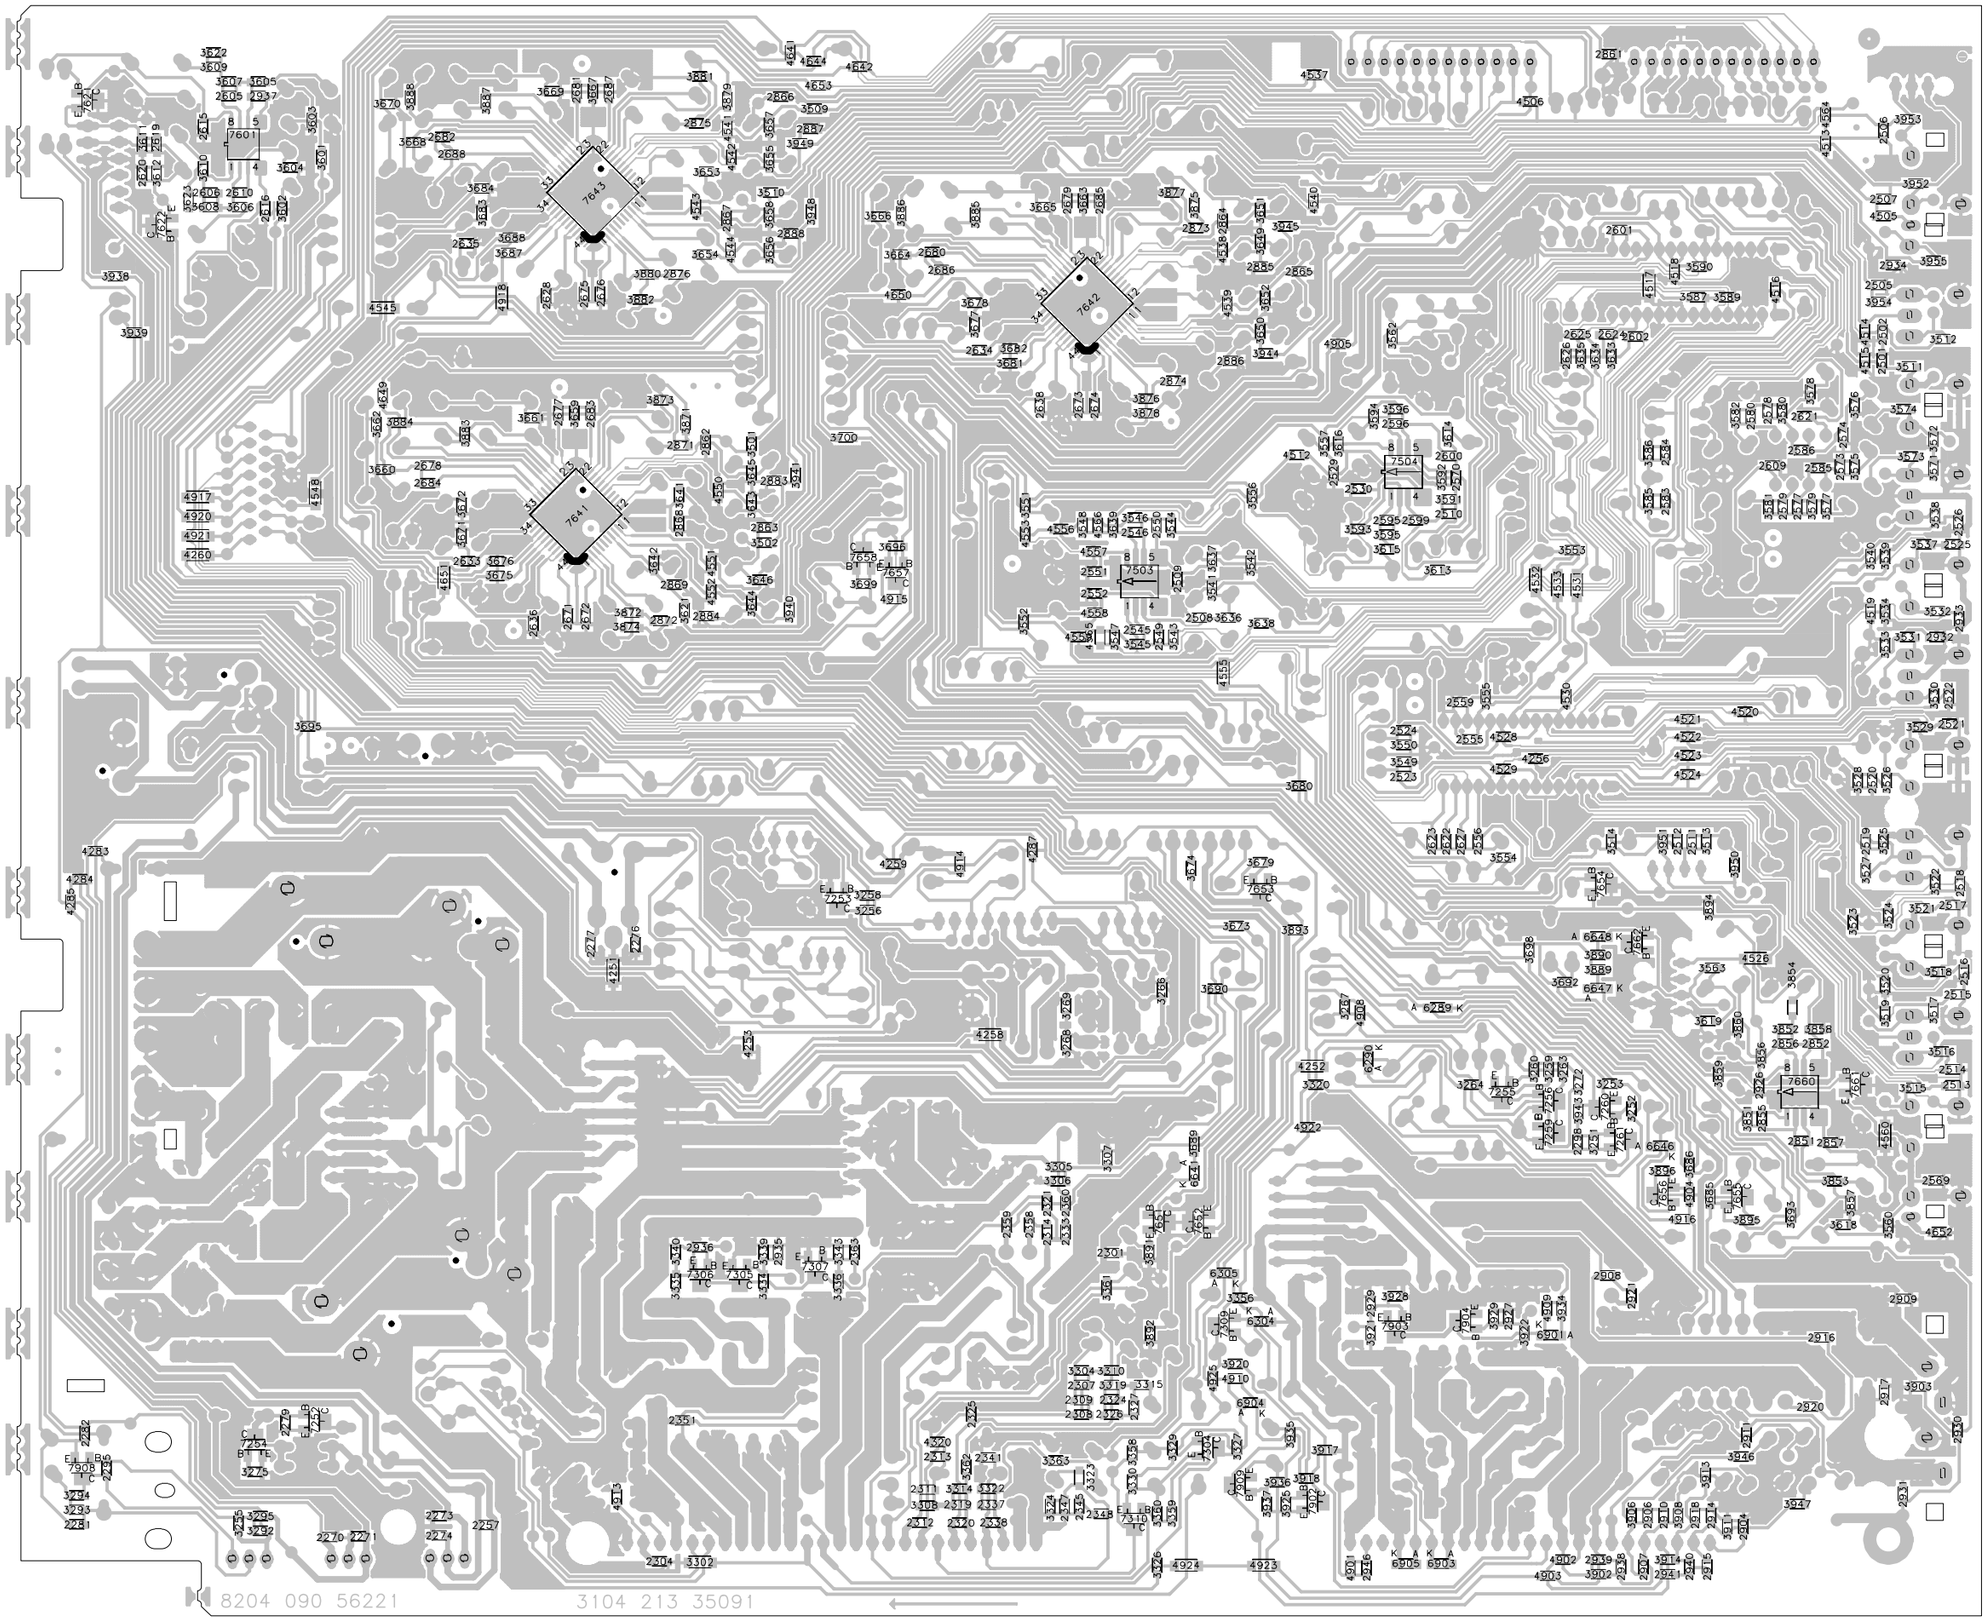

This assembly drawing shows a summary of all versions. For components used in a specific version see shematic diagram and respective partslist.

11

EXPLODED VIEW

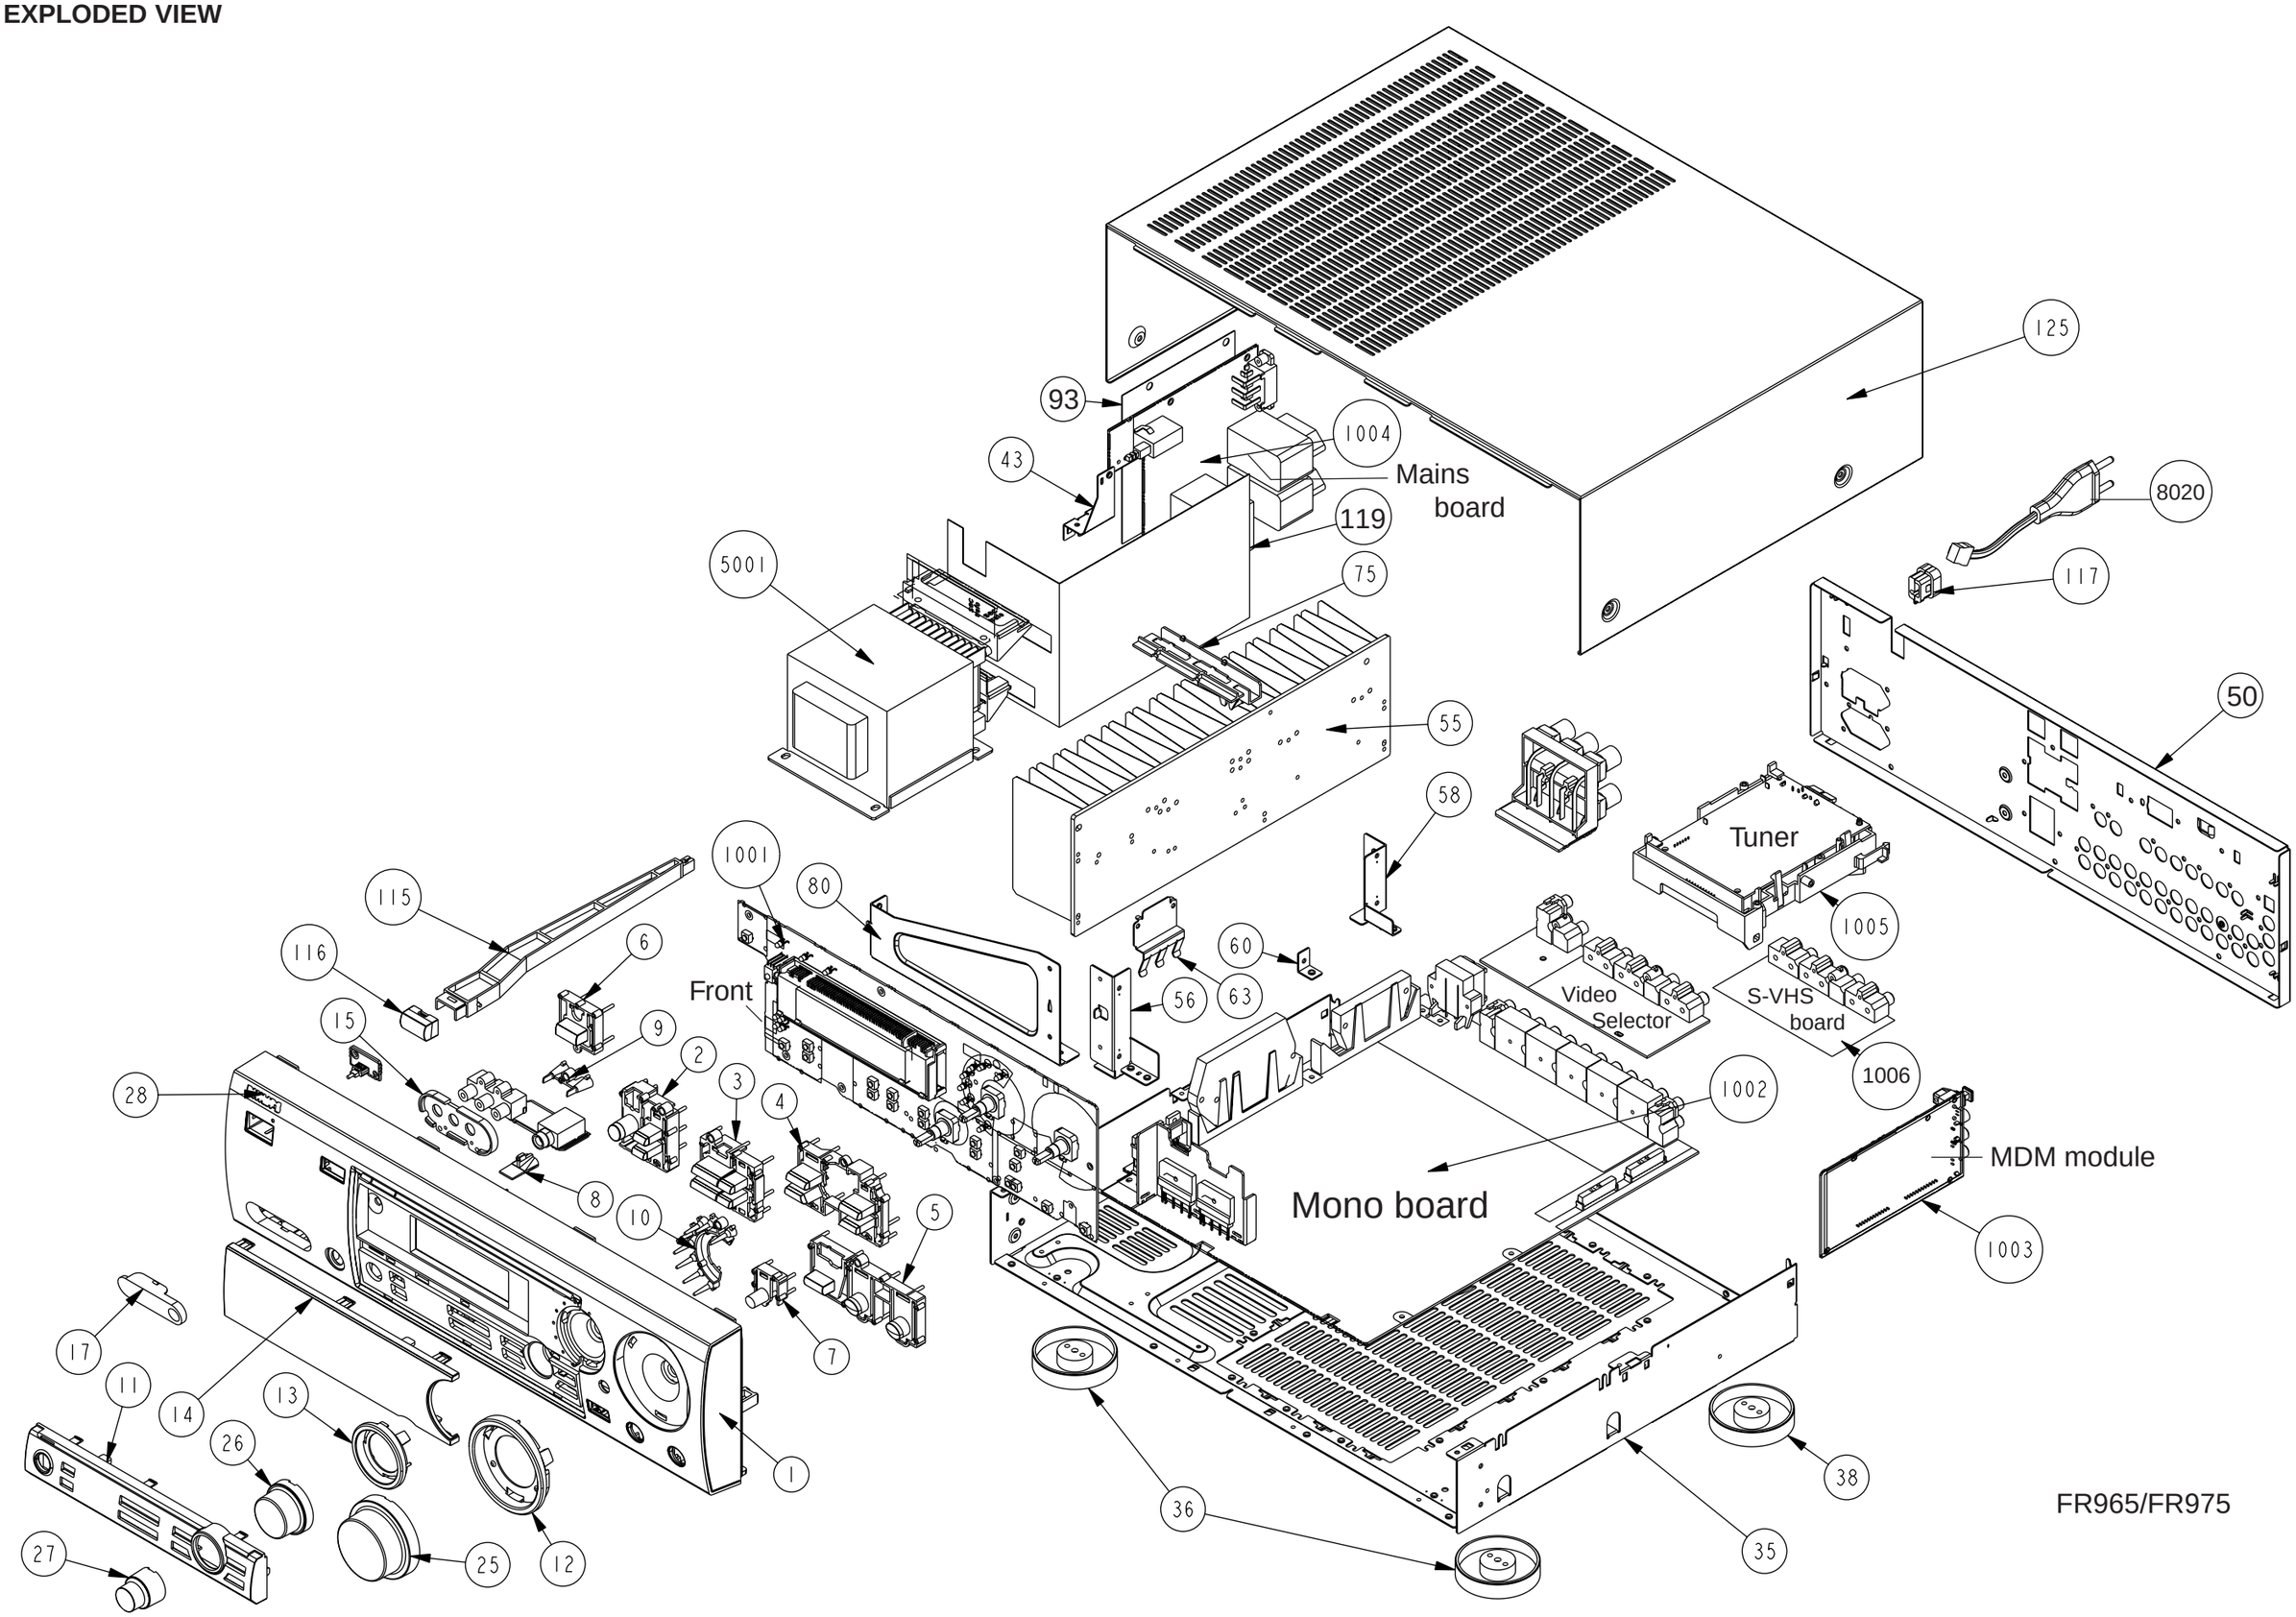

SCALE 0.250

S-VHS VIDEO BOARD

TABLE OF CONTENTS

Circuit diagram 12-2
Component layout 12-3
Partslist 12-4

12-2

SVHS VIDEO SELECTOR

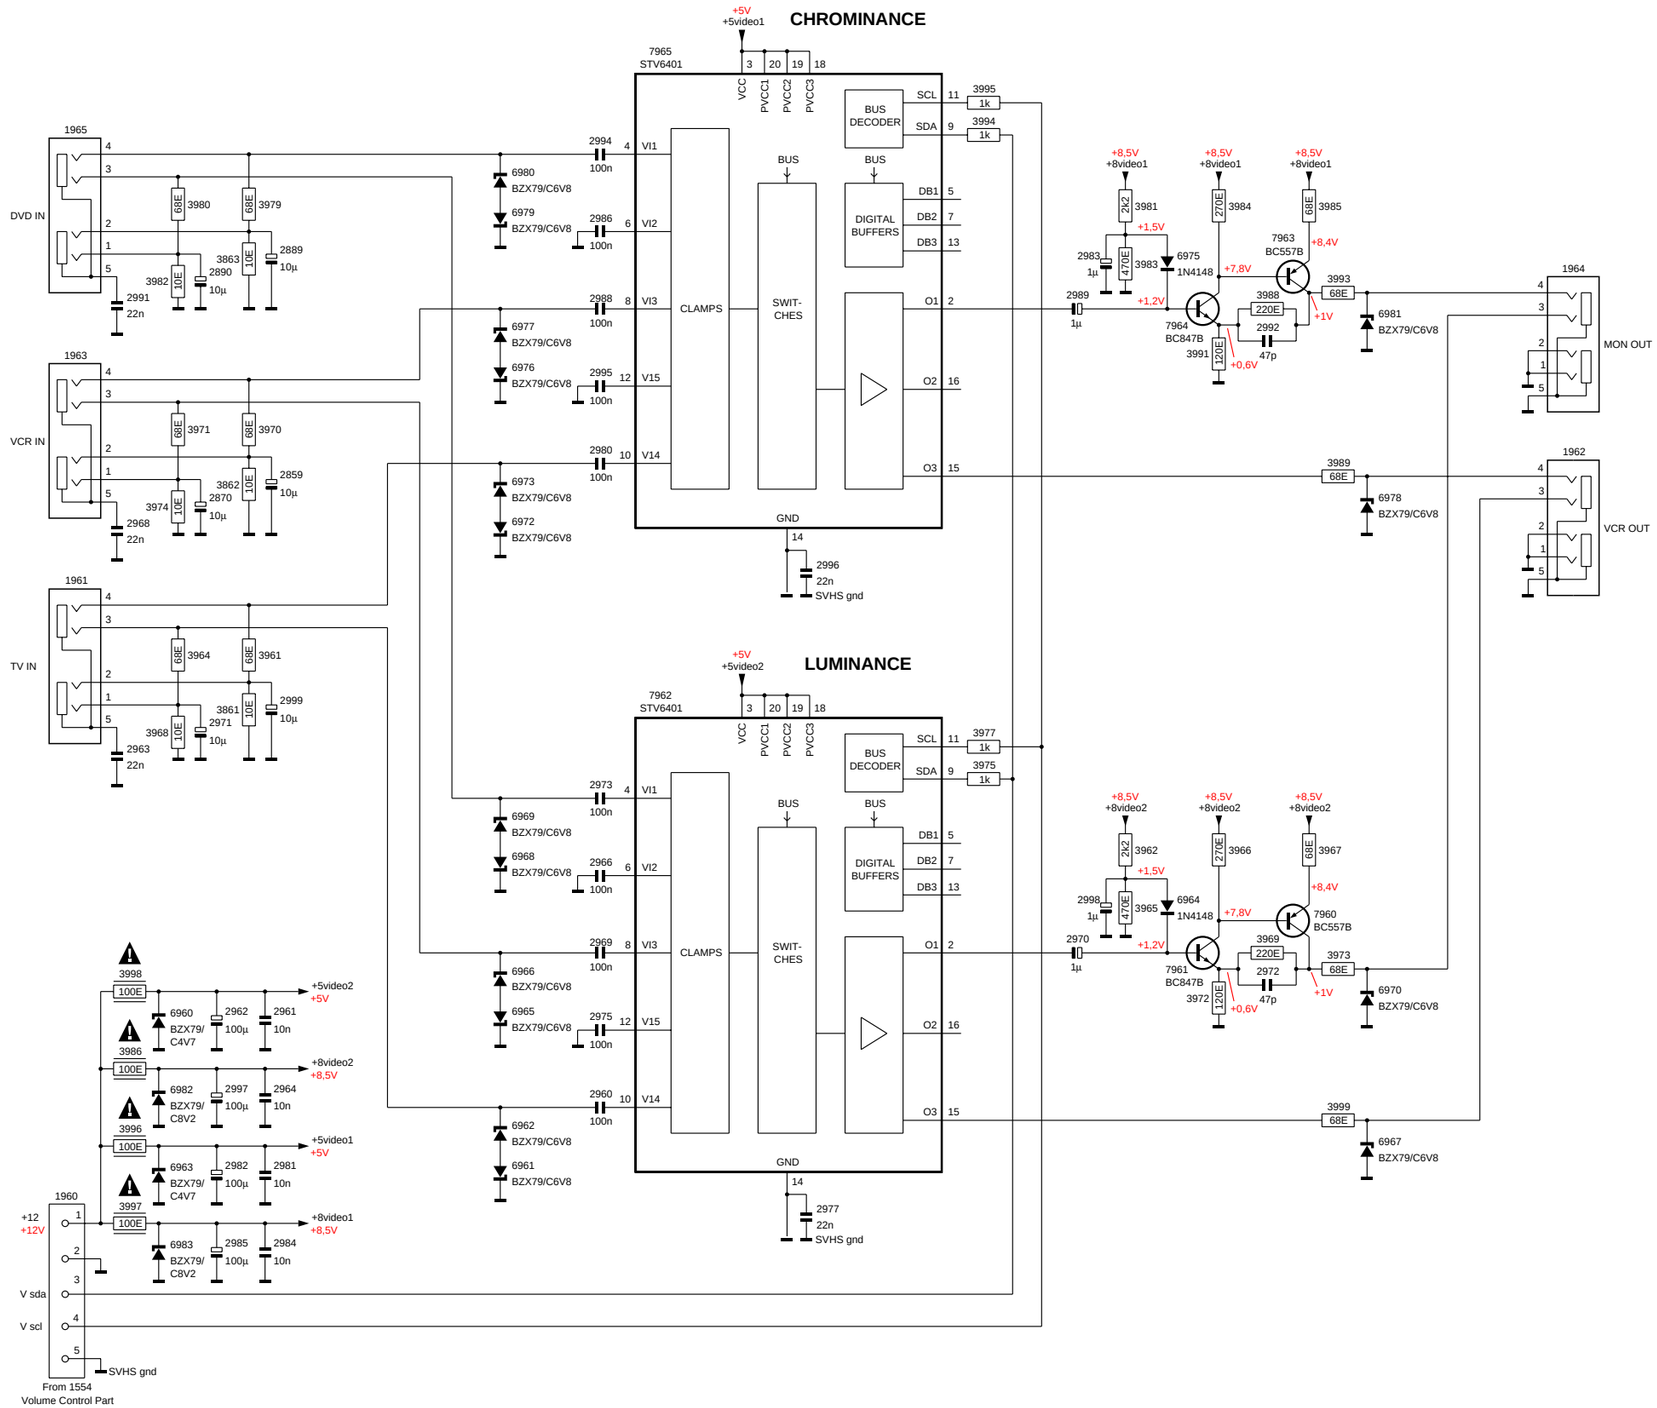

SVHS Video Selector
3104 217 06770

LEU0182/0015
LEU0182R/0015

1960	M3
1961	G3
1962	F17
1963	E3
1964	D17
1965	C3
2859	F5
2870	F5
2889	D5
2890	D5
2960	L8
2961	K5
2962	K5
2963	I4
2964	L5
2966	J8
2968	F4
2969	J8
2970	J13
2971	H5
2972	K14
2973	I8
2975	K8
2977	M10
2980	F8
2981	L5
2982	L5
2983	D13
2984	M5
2985	M5
2986	D8
2988	D8
2989	D13
2991	D4
2992	E14
2994	C8
2995	E8
2996	G10
2997	L5
2998	J13
2999	H5
3861	H5
3862	F5
3863	D5
3961	H5
3962	I13
3964	H5
3965	J13
3966	I14
3967	I15
3968	H4
3969	J14
3970	F5
3971	F5
3972	K14
3973	J15
3974	F4
3975	I12
3977	H12
3979	D5
3980	D5
3981	D13
3982	D4
3983	D13
3984	D14
3985	D15
3986	K4
3988	D14
3989	F15
3991	E14
3993	D15
3994	C12
3995	C12
3996	L4
3997	M4
3998	K4
3999	L15
6960	K4
6961	L8
6962	L8
6963	L4
6964	J14
6965	K8
6966	K8
6967	L15
6968	J8
6969	I8
6970	K15
6972	F8
6973	F8
6975	D14
6976	E8
6977	E8
6978	F15
6979	D8
6980	C8
6981	E15
6982	L4
6983	M4
7960	J15
7961	K14
7962	H9
7963	D14
7964	E14
7965	B9

S-VHS VIDEO SELECTOR BOARD

Component side view

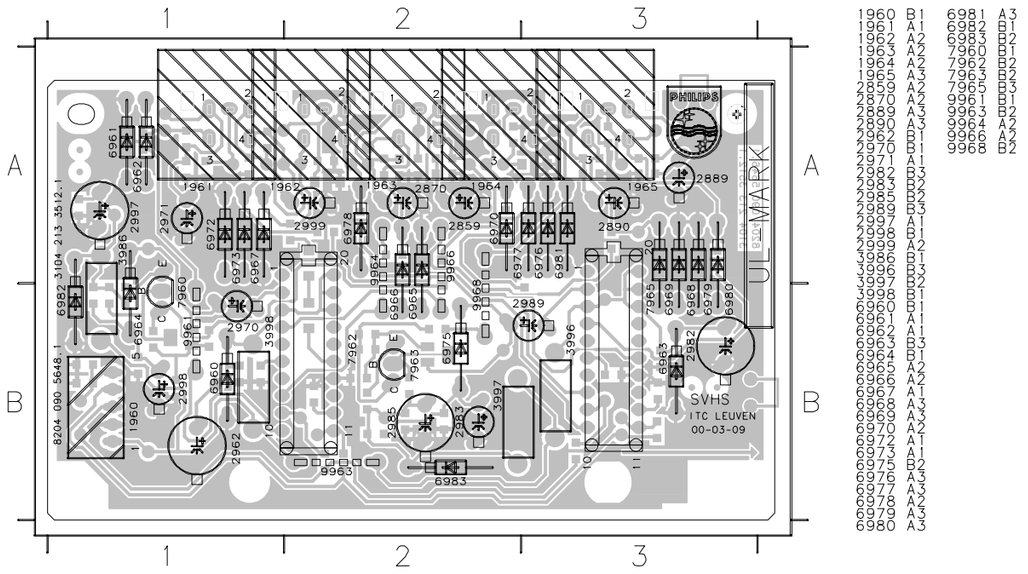

Copperside view

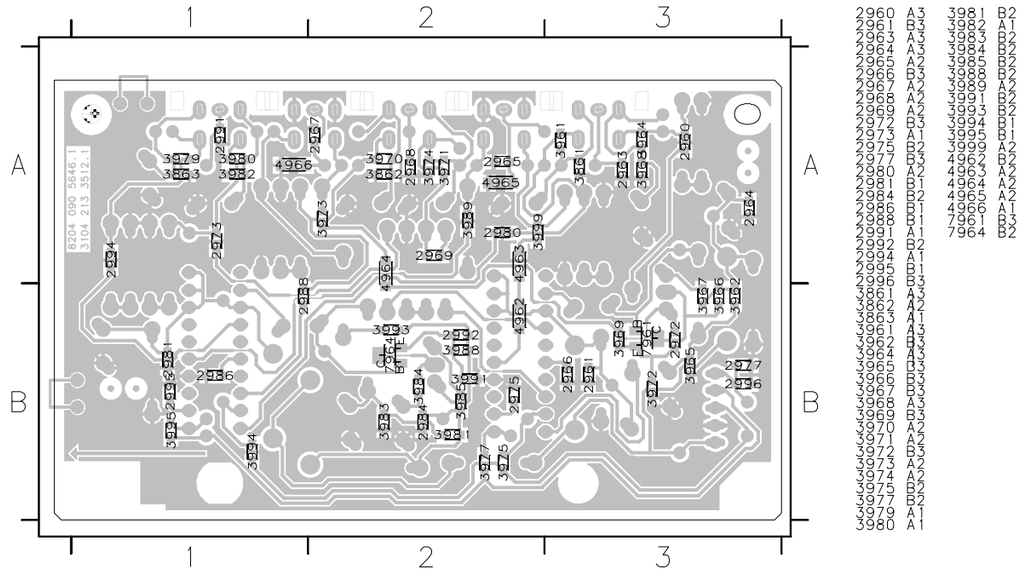

ELECTRICAL PARTSLIST - S-VHS VIDEO SELECTOR BOARD

MISCELLANEOUS

1961	2422 026 05158	SOC MDIN H 4P
1962	2422 026 05158	SOC MDIN H 4P
1963	2422 026 05158	SOC MDIN H 4P
1964	2422 026 05158	SOC MDIN H 4P
1965	2422 026 05158	SOC MDIN H 4P

CAPACITORS

2859	4822 124 11947	10UF 20% 16V
2870	4822 124 11947	10UF 20% 16V
2889	4822 124 11947	10UF 20% 16V
2890	4822 124 11947	10UF 20% 16V
2960	4822 126 14585	100NF 10% 50V
2961	5322 122 34098	10NF10% 63V
2962	4822 124 41643	100UF 20% 16V
2963	5322 122 32654	22NF10% 63V
2964	5322 122 34098	10NF10% 63V
2966	4822 126 14585	100NF 10% 50V
2968	5322 122 32654	22NF10% 63V
2969	4822 126 14585	100NF 10% 50V
2970	4822 124 22651	1UF20% 50V
2971	4822 124 11947	10UF 20% 16V
2972	4822 126 13692	47PF 1% NP0 63V
2973	4822 126 14585	100NF 10% 50V
2975	4822 126 14585	100NF 10% 50V
2977	5322 122 32654	22NF10% 63V
2980	4822 126 14585	100NF 10% 50V
2981	5322 122 34098	10NF10% 63V
2982	4822 124 41643	100UF 20% 16V
2983	4822 124 22651	1UF20% 50V
2984	5322 122 34098	10NF10% 63V
2985	4822 124 41643	100UF 20% 16V
2986	4822 126 14585	100NF 10% 50V
2988	4822 126 14585	100NF 10% 50V
2989	4822 124 22651	1UF20% 50V
2991	5322 122 32654	22NF10% 63V
2992	4822 126 13692	47PF 1% NP0 63V
2994	4822 126 14585	100NF 10% 50V
2995	4822 126 14585	100NF 10% 50V
2996	5322 122 32654	22NF10% 63V
2997	4822 124 41643	100UF 20% 16V
2998	4822 124 22651	1UF20% 50V
2999	4822 124 11947	10UF 20% 16V

RESISTORS

3861	4822 051 20109	10R00 5% 0,1W
3862	4822 051 20109	10R00 5% 0,1W
3863	4822 051 20109	10R00 5% 0,1W
3961	4822 117 12521	68R 1% 0,1W
3962	4822 117 11449	2K2 1% 0,1W
3964	4822 117 12521	68R 1% 0,1W
3965	4822 051 20471	470R00 5% 0,1W
3966	4822 117 11504	270R 1% 0.1W
3967	4822 117 12521	68R 1% 0,1W
3968	4822 051 20109	10R00 5% 0,1W
3969	4822 117 11503	220R 1% 0.1W
3970	4822 117 12521	68R 1% 0,1W
3971	4822 117 12521	68R 1% 0,1W
3972	4822 051 20121	120R00 5% 0,1W
3973	4822 117 12521	68R 1% 0,1W
3974	4822 051 20109	10R00 5% 0,1W
3975	4822 051 10102	1K00 2% 0,25W
3977	4822 051 10102	1K00 2% 0,25W
3979	4822 117 12521	68R 1% 0,1W
3980	4822 117 12521	68R 1% 0,1W
3981	4822 117 11449	2K2 1% 0,1W
3982	4822 051 20109	10R00 5% 0,1W
3983	4822 051 20471	470R00 5% 0,1W
3984	4822 117 11504	270R 1% 0.1W
3985	4822 117 12521	68R 1% 0,1W
3986	4822 053 10101	100R00 5% 1W
3988	4822 117 11503	220R 1% 0.1W
3989	4822 117 12521	68R 1% 0,1W
3991	4822 051 20121	120R00 5% 0,1W
3993	4822 117 12521	68R 1% 0,1W
3994	4822 051 10102	1K00 2% 0,25W
3995	4822 051 10102	1K00 2% 0,25W
3996	4822 053 10101	100R00 5% 1W
3997	4822 053 10101	100R00 5% 1W
3998	4822 053 10101	100R00 5% 1W
3999	4822 117 12521	68R 1% 0,1W
4962	4822 051 20008	0R00 JUMP. (0805)
4963	4822 051 20008	0R00 JUMP. (0805)
4964	4822 051 20008	0R00 JUMP. (0805)
4965	4822 051 20008	0R00 JUMP. (0805)
4966	4822 051 20008	0R00 JUMP. (0805)

DIODES

6960	4822 130 34174	BZX79-B4V7
6961	4822 130 34278	BZX79-B6V8
6962	4822 130 34278	BZX79-B6V8
6963	4822 130 34174	BZX79-B4V7
6964	4822 130 30621	1N4148
6965	4822 130 34278	BZX79-B6V8
6966	4822 130 34278	BZX79-B6V8
6967	4822 130 34278	BZX79-B6V8
6968	4822 130 34278	BZX79-B6V8
6969	4822 130 34278	BZX79-B6V8
6970	4822 130 34278	BZX79-B6V8
6972	4822 130 34278	BZX79-B6V8
6973	4822 130 34278	BZX79-B6V8
6975	4822 130 30621	1N4148
6976	4822 130 34278	BZX79-B6V8
6977	4822 130 34278	BZX79-B6V8
6978	4822 130 34278	BZX79-B6V8
6979	4822 130 34278	BZX79-B6V8
6980	4822 130 34278	BZX79-B6V8
6981	4822 130 34278	BZX79-B6V8
6982	4822 130 34382	BZX79-B8V2
6983	4822 130 34382	BZX79-B8V2

TRANSISTORS

7960	4822 130 44568	BC557B
7961	4822 130 60511	BC847B
7962	4822 209 16886	STV6401
7963	4822 130 44568	BC557B
7964	4822 130 60511	BC847B
7965	4822 209 16886	STV6401

PARTSLIST - EXPLODED VIEW

MECHANICAL PARTS FR975/00/17

1	3104 217 52810	FRONT CABINET ASSY
2	4822 410 12442	BUTTON HINGE ASSY SURR.
3	4822 410 12435	BUTTONS HINGE TUNER
4	4822 410 12443	BUTTON HINGE ASSY MENU
5	4822 410 12436	BUTTONS HINGE BASS TREBLE
6	4822 410 12437	BUTTONS EASY LINK
7	4822 410 12478	BUTTON HINGE A/V
8	4822 380 10274	LIGHT GUIDE SURROUND
9	3104 214 38460	LIGHT GUIDE VIRTUAL/HALL
10	4822 380 10277	LIGHT GUIDE SELECTOR
11	3104 217 52760	ORNAMENTAL PLATE FR975/00
11	3104 217 52800	ORNAMENTAL PLATE FR975/17
12	3104 217 52130	RING KNOB VOLUME
13	3104 217 52140	RING KNOB SOURCE SELECTOR
14	3104 217 52910	WINDOW DISPLAY FR975/00
14	3104 217 52900	WINDOW DISPLAY FR975/17
15	4822 426 10895	BACKPLATE A/V
17	4822 442 01879	COVER PLATE ASSY
25	4822 410 12438	KNOB VOLUME
26	4822 410 12439	KNOB SOURCE SELECTOR
27	4822 410 12441	KNOB MENU NAV
28	4822 459 10887	BADGE PHILIPS
36	4822 691 10773	LEG SILVER
38	4822 691 10773	LEG SILVER
115	4822 535 10638	POWER ROD
116	4822 462 11176	POWER CAP
117	4822 532 60948	BUSCH, PLASTIC
125	4822 442 01817	COVERPLATE

MECHANICAL PARTS FR975/01C

1	3104 217 52820	FRONT ASSY
2	3104 217 52570	BUTTON SURROUND
3	3104 217 52620	BUTTON TUNER
4	3104 217 52560	BUTTON MENU
5	3104 217 52630	BUTTON BASS TREBLE
6	3104 217 52550	BUTTON EASY LINK
7	3104 217 52640	BUTTON A/V ASSY
8	4822 380 10274	LIGHT GUIDE SURROUND
9	3104 214 38460	LIGHT GUIDE VIRTUAL/HALL
10	4822 380 10277	LIGHT GUIDE SELECTOR
11	3104 217 52780	ORNAMENTAL PLATE ASSY
12	3104 217 52410	RING KNOB VOL.ASSY
13	3104 217 52420	RING KNOB
14	3104 217 52920	WINDOW DISPLAY ASSY
15	3104 214 38930	BACKPLATE A/V
17	3104 217 52540	COVER PLATE ASSY
25	3104 217 52380	KNOB VOLUME ASSY
26	3104 217 52390	KNOB SOURCE
27	3104 217 52400	KNOB MENU NAV.
28	4822 459 10887	BADGE PHILIPS
36	3104 217 52530	LEG CHAMPAGNE
38	3104 217 52530	LEG CHAMPAGNE
115	4822 535 10638	POWER ROD
116	3104 217 52650	POWER CAP ASSY
117	4822 532 60948	BUSH, PLASTIC
125	4822 442 01817	COVERPLATE

ELECTRICAL PARTS

1003	3104 217 06390	MDM2000 Module
5001 ⚠	4822 146 11165	MAINS TRAFO FR975/00
5001 ⚠	4822 146 11169	MAINSTRAFO FR975/01C
5001 ⚠	4822 146 21225	MAINS TRAFO FR975/17
8020 ⚠	4822 321 11139	MAINS CORD FR975/00/01C
8020 ⚠	3139 118 77230	MAINSCORD UL FR975/17

MISCELLANEOUS PARTS MX980D/37

3104 219 04231	FRONT SPEAKER 100W
3104 219 04241	CENTER SPEAKR 100W
3104 219 04231	SURROUND SPEAKER 100W
3104 219 03730	SUBWOOFER FB201V/1
4822 320 12719	CORD SET FRONT SPEAKER
4822 320 12721	CORD SET CENTER SPEAKER
4822 320 12722	CORD SET SURR. SPEAKER

MISCELLANEOUS PARTS FR975/00/01C/17

4822 303 50063	FM AERIAL 75R only in /00/01C
4822 320 11094	FM AERIAL 300R only in /17
4822 303 50082	AM FRAME
2422 076 00314	COMB/CINCH only in /00
4822 263 21206	CINCH/CINCH only in /01C/17
4822 321 61452	CABLE ASSY CINCH/CINCH
3104 219 04310	REMOTE CONTROL
3103 306 17010	INSTR.FOR.USE
3103 306 17020	INSTR.FOR.USE /01C

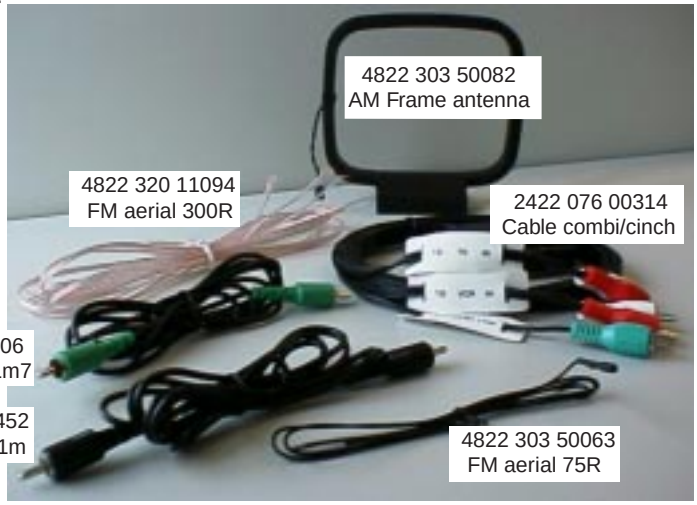

note: Only the parts mentioned in this list are normal service parts

ELECTRICAL PARTSLIST - MONO2 BOARD

MISCELLANEOUS

1260	⚠	4822 252 51123	FUSE6,3A
1261	⚠	4822 252 51123	FUSE 6,3A
1301		2422 015 19403	SCREW 6P LS
1502		4822 267 31823	CINCH
1512		4822 267 31823	CINCH
1513		4822 267 31823	CINCH
1514		4822 267 31823	CINCH
1516		4822 267 31823	CINCH
1520		4822 265 10981	CINCH 1P
1521		2422 025 11067	CON BM V 12P
1523		2422 025 11067	CON BM V 12P
1525		4822 265 11608	CINCH 2P
1540		4822 265 20542	CINCH 2P
1542		2422 026 05134	CINCH 2P
1550		4822 267 31729	CINCH 1P
1801		4822 267 31996	CONN. 1P
1802		4822 265 11619	CINCH 2P
1803		4822 265 11619	CINCH 2P
1901		4822 265 11609	CON. CLICK 4P

CAPACITORS

2251	5322 121 42578	100NF 5% 250V
2253	4822 121 43526	47NF 5% 250V
2254	5322 121 42578	100NF 5% 250V
2256	4822 121 43526	47NF 5% 250V
2257	4822 122 33177	10NF 20% X7R 50V
2259	4822 124 80415	4700UF20% 50V
2260	4822 124 80415	4700UF20% 50V
2262	4822 124 12423	4700UF 20% 63V
2264	4822 124 12423	4700UF 20% 63V
2266	5322 121 42386	100NF 5% 63V
2267	4822 124 41751	47UF 20% 50V
2268	5322 121 42386	100NF 5% 63V
2269	4822 124 80563	4700UF 35V
2270	4822 126 13838	100NF 50V P80M20
2271	4822 126 14583	470NF 10% 16V
2272	4822 124 12328	6800UF 16V
2273	4822 126 14585	100NF 10% 50V
2274	4822 126 14583	470NF 10% 16V
2275	4822 124 81144	1000U 16V
2276	4822 126 14585	100NF 10% 50V
2277	4822 126 14583	470NF 10%
2278	4822 124 22652	2,2UF20% 50V
2279	4822 126 14585	100NF 10% 50V
2280	4822 124 41584	100UF 20% 10V
2281	4822 126 13838	100NF 50V P80M20
2282	4822 126 14583	470NF 10% 16V
2290	4822 124 40248	10UF20% 63V
2295	4822 122 33177	10NF 20% X7R 50V
2298	5322 122 32654	22NF10%X7R 63V
2299	5322 124 40641	10UF 20% 100V
2301	5322 122 32654	22NF10%X7R 63V
2303	4822 124 40764	22UF 100 V
2305	5322 124 40641	10UF 20% 100V
2306	4822 124 40248	10UF20% 63V
2308	5322 122 32448	10PF 5% NP0 63V
2309	5322 122 32448	10PF 5% NP0 63V
2310	4822 124 40248	10UF20% 63V
2311	5322 122 32268	470PF 10% 50V
2313	4822 122 33575	220PF 5% NP0 63V
2314	4822 126 13473	220NF80-20% 50V
2315	4822 124 40433	47UF 20% 10V
2316	4822 124 40248	10UF20% 63V
2319	5322 122 32268	470PF 10% 50V
2321	4822 126 13473	220NF80-20% 50V

CAPACITORS

2325	4822 122 33575	220PF 5% NP0 63V
2326	5322 122 32448	10PF 5% NP0 63V
2327	5322 122 32448	10PF 5% NP0 63V
2330	4822 124 40433	47UF 20% 10V
2333	4822 126 13473	220NF80-20% 50V
2334	4822 124 40248	10UF20% 63V
2337	5322 122 32268	470PF 10% 50V
2341	4822 122 33575	220PF 5% NP0 63V
2345	5322 122 32448	10PF 5% NP0 63V
2346	4822 124 40433	47UF 20% 10V
2348	5322 122 32448	10PF 5% NP0 63V
2349	4822 124 40248	10UF20% 63V
2350	4822 124 40181	220UF20% 10V
2353	4822 124 40764	22UF 100 V
2354	5322 124 40641	10UF 20% 100V
2357	4822 126 12882	100NF+80-20% 50V
2358	4822 126 13473	220NF80-20% 50V
2359	4822 126 13473	220NF80-20% 50V
2360	4822 126 13473	220NF80-20% 50V
2365	4822 121 41857	10NF 5% 250V
2371	5322 126 10223	4,7NF10%X7R 63V
2372	5322 126 10223	4,7NF10%X7R 63V
2373	5322 126 10223	4,7NF10%X7R 63V
2374	5322 122 32531	100PF 5%NP0 50V
2375	5322 122 32531	100PF 5%NP0 50V
2376	5322 122 32531	100PF 5%NP0 50V
2501	5322 126 10511	1NF 5%NP0 50V
2502	5322 126 10511	1NF 5%NP0 50V
2505	5322 126 10511	1NF 5%NP0 50V
2506	5322 126 10511	1NF 5%NP0 50V
2507	5322 126 10511	1NF 5%NP0 50V
2508	5322 122 32531	100PF 5%NP0 50V
2509	5322 122 32531	100PF 5%NP0 50V
2510	5322 122 32531	100PF 5%NP0 50V
2511	5322 122 32531	100PF 5%NP0 50V
2512	5322 122 32531	100PF 5%NP0 50V
2513	5322 122 32531	100PF 5%NP0 50V
2514	5322 122 32531	100PF 5%NP0 50V
2515	5322 122 32531	100PF 5%NP0 50V
2516	5322 122 32531	100PF 5%NP0 50V
2517	5322 122 32531	100PF 5%NP0 50V
2518	5322 122 32531	100PF 5%NP0 50V
2519	5322 122 32531	100PF 5%NP0 50V
2520	5322 122 32531	100PF 5%NP0 50V
2521	5322 122 32531	100PF 5%NP0 50V
2522	5322 122 32531	100PF 5%NP0 50V
2523	5322 122 32531	100PF 5%NP0 50V
2524	5322 122 32531	100PF 5%NP0 50V
2525	5322 122 32531	100PF 5%NP0 50V
2526	5322 122 32531	100PF 5%NP0 50V
2527	4822 124 41751	47UF 20% 50V
2528	4822 124 41751	47UF 20% 50V
2529	4822 126 13838	100NF 50V P80M20
2530	4822 126 13838	100NF 50V P80M20
2531	4822 121 42408	220NF 5% 63V
2532	4822 121 42408	220NF 5% 63V
2533	4822 124 81151	22UF 50V
2534	4822 124 81151	22UF 50V
2535	4822 124 81151	22UF 50V
2536	4822 124 81151	22UF 50V
2537	4822 124 81151	22UF 50V
2538	4822 124 81151	22UF 50V
2539	4822 124 40207	100UF20% 25V
2540	4822 124 40433	47UF20% 25V
2541	4822 124 40248	10UF20% 63V

ELECTRICAL PARTSLIST - MONO2 BOARD

CAPASITORS

2542	4822 124 40248	10UF20% 63V
2543	4822 124 11912	220UF 20% 6,3V
2544	4822 124 11912	220UF 20% 6,3V
2545	5322 122 32531	100PF 5%NP0 50V
2546	5322 122 32531	100PF 5%NP0 50V
2549	5322 122 32658	22PF 5% 50V
2550	5322 122 32658	22PF 5% 50V
2551	4822 126 13838	100NF 50V P80M20
2552	4822 126 13838	100NF 50V P80M20
2553	4822 124 41751	47UF 20% 50V
2554	4822 124 41751	47UF 20% 50V
2555	4822 126 13838	100NF 50V P80M20
2556	4822 126 13838	100NF 50V P80M20
2557	4822 124 41751	47UF 20% 50V
2558	4822 124 41751	47UF 20% 50V
2559	4822 126 12105	CER2 50V 33NF PM5
2561	4822 124 40764	22UF 100 V
2562	4822 124 40764	22UF 100 V
2563	4822 123 14025	16V 2200U 20%
2564	4822 124 22652	2,2UF20% 50V
2565	4822 124 22652	2,2UF20% 50V
2566	4822 124 22652	2,2UF20% 50V
2567	4822 124 40769	4,7UF20% 100V
2568	4822 124 40769	4,7UF20% 100V
2569	5322 122 32531	100PF 5%NP0 50V
2570	5322 122 32531	100PF 5%NP0 50V
2571	4822 124 40248	10UF20% 63V
2572	4822 124 40248	10UF20% 63V
2573	4822 122 33575	220PF 5% NP0 63V
2574	4822 122 33575	220PF 5% NP0 63V
2575	4822 124 40248	10UF20% 63V
2576	4822 124 40248	10UF20% 63V
2577	4822 122 33177	10NF 20% X7R 50V
2578	4822 122 33177	10NF 20% X7R 50V
2579	4822 122 33127	2,2NF10%X7R 63V
2580	4822 122 33127	2,2NF10%X7R 63V
2581	4822 124 41751	47UF 20% 50V
2582	4822 124 41751	47UF 20% 50V
2583	4822 122 33891	3,3NF10%X7R 63V
2584	4822 122 33891	3,3NF10%X7R 63V
2585	4822 126 13695	82PF 1% NP0 63V
2586	4822 126 13695	82PF 1% NP0 63V
2593	4822 124 81151	22UF 50V
2594	4822 124 81151	22UF 50V
2595	5322 122 32531	100PF 5%NP0 50V
2596	5322 122 32531	100PF 5%NP0 50V
2599	5322 122 32658	22PF 5% 50V
2600	5322 122 32658	22PF 5% 50V
2603	4822 124 81151	22UF 50V
2604	4822 124 81151	22UF 50V
2605	4822 126 13692	47PF 1% NP0 63V
2606	4822 126 13692	47PF 1% NP0 63V
2607	4822 124 41751	47UF 20% 50V
2608	4822 124 41751	47UF 20% 50V
2610	4822 122 33575	220PF 5% NP0 63V
2611	4822 124 40207	100UF20% 25V
2612	4822 124 40248	10UF20% 63V
2613	4822 124 40248	10UF20% 63V
2614	4822 124 40207	100UF20% 25V
2615	5322 122 32654	22NF10%X7R 63V
2616	5322 122 32654	22NF10%X7R 63V
2617	4822 124 40248	10UF20% 63V
2618	4822 124 40248	10UF20% 63V
2619	5322 122 32531	100PF 5%NP0 50V
2620	5322 122 32531	100PF 5%NP0 50V

CAPACITORS

2622	5322 122 32531	100PF 5%NP0 50V
2623	5322 122 32531	100PF 5%NP0 50V
2624	5322 122 32531	100PF 5%NP0 50V
2625	5322 122 32531	100PF 5%NP0 50V
2626	5322 122 32531	100PF 5%NP0 50V
2627	5322 122 32531	100PF 5%NP0 50V
2628	4822 126 14585	100NF 10% 50V
2629	4822 124 41751	47UF 20% 50V
2630	5322 121 42386	100NF 5% 63V
2631	5322 121 42386	100NF 5% 63V
2632	5322 121 42386	100NF 5% 63V
2633	5322 122 32654	22NF10%X7R 63V
2634	5322 122 32654	22NF10%X7R 63V
2635	5322 122 32654	22NF10%X7R 63V
2636	4822 126 14585	100NF 10% 50V
2637	4822 124 41751	47UF 20% 50V
2638	4822 126 14585	100NF 10% 50V
2639	4822 124 41751	47UF 20% 50V
2641	4822 124 21913	1UF20% 63V
2642	4822 124 21913	1UF20% 63V
2643	4822 124 21913	1UF20% 63V
2644	4822 124 21913	1UF20% 63V
2645	4822 124 21913	1UF20% 63V
2646	4822 124 21913	1UF20% 63V
2647	4822 124 21913	1UF20% 63V
2648	4822 124 21913	1UF20% 63V
2649	4822 124 21913	1UF20% 63V
2650	4822 124 21913	1UF20% 63V
2651	4822 124 21913	1UF20% 63V
2652	4822 124 21913	1UF20% 63V
2655	4822 124 21913	1UF20% 63V
2656	4822 124 21913	1UF20% 63V
2657	4822 124 21913	1UF20% 63V
2658	4822 124 21913	1UF20% 63V
2659	4822 124 22652	2,2UF20% 50V
2660	4822 124 22652	2,2UF20% 50V
2661	4822 124 22652	2,2UF20% 50V
2662	4822 124 22652	2,2UF20% 50V
2663	4822 124 22652	2,2UF20% 50V
2664	4822 124 22652	2,2UF20% 50V
2665	4822 121 43526	47NF 5% 250V
2666	4822 121 43526	47NF 5% 250V
2667	4822 121 43526	47NF 5% 250V
2668	4822 121 43526	47NF 5% 250V
2669	4822 121 43526	47NF 5% 250V
2670	4822 121 43526	47NF 5% 250V
2671	5322 122 31866	6,8NF10%X7R 63V
2672	5322 122 31866	6,8NF10%X7R 63V
2673	5322 122 31866	6,8NF10%X7R 63V
2674	5322 122 31866	6,8NF10%X7R 63V
2675	5322 122 31866	6,8NF10%X7R 63V
2676	5322 122 31866	6,8NF10%X7R 63V
2677	5322 122 32654	22NF10%X7R 63V
2678	5322 122 32654	22NF10%X7R 63V
2679	5322 122 32654	22NF10%X7R 63V
2680	5322 122 32654	22NF10%X7R 63V
2681	5322 122 32654	22NF10%X7R 63V
2682	5322 122 32654	22NF10%X7R 63V
2683	5322 122 32654	22NF10%X7R 63V
2684	5322 122 32654	22NF10%X7R 63V
2685	5322 122 32654	22NF10%X7R 63V
2686	5322 122 32654	22NF10%X7R 63V
2687	5322 122 32654	22NF10%X7R 63V
2688	5322 122 32654	22NF10%X7R 63V
2689	5322 121 42465	68NF 5% 63V

ELECTRICAL PARTSLIST - MONO2 BOARD

CAPACITORS

2690	5322 121 42465	68NF 5% 63V
2691	5322 121 42465	68NF 5% 63V
2692	5322 121 42465	68NF 5% 63V
2693	5322 121 42465	68NF 5% 63V
2694	5322 121 42465	68NF 5% 63V
2695	5322 121 42465	68NF 5% 63V
2696	5322 121 42465	68NF 5% 63V
2697	5322 121 42465	68NF 5% 63V
2698	5322 121 42465	68NF 5% 63V
2699	5322 121 42465	68NF 5% 63V
2700	5322 121 42465	68NF 5% 63V
2801	4822 124 22833	10UF 50V
2802	4822 124 22833	10UF 50V
2803	4822 124 22833	10UF 50V
2804	4822 124 22833	10UF 50V
2805	4822 126 14585	100NF 10% 50V
2806	4822 126 14585	100NF 10% 50V
2807	4822 126 14585	100NF 10% 50V
2808	4822 126 14585	100NF 10% 50V
2809	5322 122 34098	10NF10%X7R 63V
2810	4822 124 40196	220UF20% 16V
2811	5322 122 34098	10NF10% 63V
2812	4822 124 40196	220UF20% 16V
2813	4822 124 21913	1UF20% 63V
2814	4822 126 13692	47PF 1% NP0 63V
2815	4822 126 14585	100NF 10% 50V
2816	5322 122 32654	22NF10% 63V
2817	4822 124 21913	1UF20% 63V
2818	5322 122 32654	22NF10%X7R 63V
2821	5322 122 32654	22NF10%X7R 63V
2822	5322 122 32654	22NF10%X7R 63V
2831	5322 122 32531	100PF 5%NP0 50V
2832	4822 126 14585	100NF 10% 50V
2833	5322 122 32654	22NF10%X7R 63V
2834	5322 122 32531	100PF 5%NP0 50V
2835	5322 122 32531	100PF 5%NP0 50V
2836	5322 122 32531	100PF 5%NP0 50V
2837	5322 122 32531	100PF 5%NP0 50V
2851	5322 122 32658	22PF 5% 50V
2852	5322 122 32658	22PF 5% 50V
2853	4822 124 81151	22UF 50V
2854	4822 124 81151	22UF 50V
2855	5322 122 32531	100PF 5%NP0 50V
2856	5322 122 32531	100PF 5%NP0 50V
2857	4822 126 14585	100NF 10% 50V
2858	4822 124 41751	47UF 20% 50V
2860	4822 124 41751	47UF 20% 50V
2861	5322 122 32654	22NF10%X7R 63V
2862	5322 122 32531	100PF 5%NP0 50V
2863	5322 122 32531	100PF 5%NP0 50V
2864	5322 122 32531	100PF 5%NP0 50V
2865	5322 122 32531	100PF 5%NP0 50V
2866	5322 122 32531	100PF 5%NP0 50V
2867	5322 122 32531	100PF 5%NP0 50V
2868	4822 122 33575	220PF 5% NP0 63V
2869	4822 122 33575	220PF 5% NP0 63V
2871	4822 122 33177	10NF 20% X7R 50V
2872	4822 122 33177	10NF 20% X7R 50V
2873	4822 122 33177	10NF 20% X7R 50V
2875	4822 122 33177	10NF 20% X7R 50V
2876	4822 122 33177	10NF 20% X7R 50V
2877	5322 121 42386	100NF 5% 63V
2878	5322 121 42386	100NF 5% 63V
2879	5322 121 42386	100NF 5% 63V

CAPACITORS

2880	5322 121 42386	100NF 5% 63V
2881	5322 121 42386	100NF 5% 63V
2882	5322 121 42386	100NF 5% 63V
2883	5322 126 10511	1NF 5%NP0 50V
2884	5322 126 10511	1NF 5%NP0 50V
2885	5322 126 10511	1NF 5%NP0 50V
2886	5322 126 10511	1NF 5%NP0 50V
2887	4822 122 33127	2,2NF10%X7R 63V
2888	4822 122 33127	2,2NF10%X7R 63V
2902	4822 124 40248	10UF20% 63V
2905	4822 124 40248	10UF20% 63V
2906	5322 122 32268	470PF 10% 50V
2908	4822 126 13473	220NF80-20% 50V
2909	5322 126 10223	4,7NF10%X7R 63V
2910	4822 122 33575	220PF 5% NP0 63V
2911	5322 122 32654	22NF10%X7R 63V
2912	4822 124 40433	47UF 20% 10V
2913	4822 124 40248	10UF20% 63V
2914	5322 122 32268	470PF 10% 50V
2916	4822 126 13473	220NF80-20% 50V
2917	5322 126 10223	4,7NF10%X7R 63V
2918	4822 122 33575	220PF 5% NP0 63V
2919	4822 124 40433	47UF 20% 10V
2920	4822 126 13473	220NF80-20% 50V
2921	4822 126 13473	220NF80-20% 50V
2924	4822 124 40248	10UF20% 63V
2925	4822 124 40181	220UF20% 10V
2926	4822 126 14585	100NF 10% 50V
2930	5322 122 32531	100PF 5%NP0 50V
2931	5322 122 32531	100PF 5%NP0 50V
2932	5322 122 32531	100PF 5%NP0 50V
2933	5322 122 32531	100PF 5%NP0 50V
2934	5322 126 10511	1NF 5%NP0 50V
2937	4822 122 33575	220PF 5% NP0 63V
2938	5322 122 32448	10PF 5% NP0 63V
2939	5322 122 32448	10PF 5% NP0 63V
2940	5322 122 32448	10PF 5% NP0 63V
2941	5322 122 32448	10PF 5% NP0 63V
2942	4822 124 40764	22UF 100 V
2943	5322 124 40641	10UF 20% 100V
2944	5322 124 40641	10UF 20% 100V
2945	4822 124 40764	22UF 100 V

RESISTORS

3251	4822 051 10102	1K 2% 0,25W
3252	4822 117 10837	100K 1% 0.1W
3253	4822 117 10837	100K 1% 0.1W
3254 ⚠	4822 117 11342	0R33 5% 2W
3256	4822 117 10833	10K 1% 0,1W
3257 ⚠	4822 117 11342	0R33 5% 2W
3258	4822 117 11149	82K 1% 0,1W
3259	4822 117 10361	680R 1% 0,1W
3260	4822 117 10834	47K 1% 0,1W
3261	4822 116 83881	390R 5% 0,5W
3262	4822 050 21003	10K 1% 0,6W
3263	4822 117 10361	680R 1% 0,1W
3264	4822 117 10837	100K 1% 0.1W
3265 ⚠	4822 052 10479	47R 5% 0,33W
3266	4822 051 20223	22K 5% 0,1W
3267	4822 117 11507	6K8 1% 0,1W
3268	4822 051 20332	3K3 5% 0,1W
3269	4822 051 20332	3K3 5% 0,1W
3270 ⚠	4822 052 10479	47R 5% 0,33W
3271 ⚠	4822 052 10479	47R 5% 0,33W
3272	4822 051 20393	39K00 5% 0,1W

ELECTRICAL PARTSLIST - MONO2 BOARD

RESISTORS

3273		4822 116 83872	220R	5%	0,5W	
3274		4822 116 83876	270R	5%	0,5W	
3275		4822 117 10353	150R	1%	0,1W	
3276		4822 116 52234	100K	5%	0,5W	
3291	⚠	4822 052 10109	10R	5%	0,33W	
3292		4822 116 83933	15K	1%	0,1W	
3293		4822 117 10833	10K	1%	0,1W	
3294		4822 117 10833	10K	1%	0,1W	
3295		4822 116 83933	15K	1%	0,1W	
3301	⚠	4822 052 10479	47R00	5%	0,33W	
3302	⚠	4822 117 11151	1R	5%		
3303		4822 116 83961	6K8	5%		
3304		4822 117 11148	56K	1%	0,1W	
3305		4822 117 10834	47K	1%	0,1W	
3306		4822 117 10834	47K	1%	0,1W	
3307		4822 117 10834	47K	1%	0,1W	
3308		4822 117 11148	56K	1%	0,1W	
3309		4822 050 24708	4R70	1%	0,6W	
3310		4822 051 20182	1K80	5%	0,1W	
3311		4822 050 24708	4R70	1%	0,6W	
3314		4822 117 11148	56K	1%	0,1W	
3315		4822 051 20182	1K80	5%	0,1W	
3316		4822 050 24708	4R70	1%	0,6W	
3319		4822 117 11148	56K	1%	0,1W	
3320		4822 051 10102	1K00	2%	0,25W	
3322		4822 117 11148	56K	1%	0,1W	
3323		4822 051 20182	1K80	5%	0,1W	
3324		4822 117 11148	56K	1%	0,1W	
3325		4822 116 83961	6K8	5%		
3326		4822 051 20333	33K00	5%	0,1W	
3327		4822 117 11503	220R	1%	0.1W	
3328	⚠	4822 052 10479	47R00	5%	0,33W	
3329		4822 117 10837	100K	1%	0.1W	
3330		4822 117 10833	10K	1%	0,1W	
3334		4822 051 20182	1K80	5%	0,1W	
3335		4822 051 20182	1K80	5%	0,1W	
3336		4822 051 20182	1K80	5%	0,1W	
3337	⚠	4822 117 11342	0R33	5%	2W	
3338	⚠	4822 117 11342	0R33	5%	2W	
3339		4822 117 11139	1K5	1%	0,1W	
3340		4822 117 11139	1K5	1%	0,1W	
3341	⚠	4822 117 11342	0R33	5%	2W	
3342	⚠	4822 117 11342	0R33	5%	2W	
3343		4822 117 11139	1K5	1%	0,1W	
3344	⚠	4822 117 11342	0R33	5%	2W	
3345	⚠	4822 117 11342	0R33	5%	2W	
3349	⚠	4822 117 11342	0R33	5%	2W	
3350	⚠	4822 117 11342	0R33	5%	2W	
3351	⚠	4822 117 11342	0R33	5%	2W	
3352	⚠	4822 053 10478	4R70	5%	1W	
3353	⚠	4822 053 10478	4R70	5%	1W	
3354	⚠	4822 053 10478	4R70	5%	1W	
3356		4822 117 10834	47K	1%	0,1W	
3357		4822 116 52257	22K	5%	0,5W	
3358		4822 051 10102	1K00	2%	0,25W	
3359		4822 117 10837	100K	1%	0.1W	
3360		4822 117 10833	10K	1%	0,1W	
3361		4822 051 20471	470R00	5%	0,1W	
3362		4822 051 20471	470R00	5%	0,1W	
3363		4822 051 20471	470R00	5%	0,1W	
3501		4822 116 83933	15K	1%	0,1W	
3502		4822 116 83933	15K	1%	0,1W	
3505		4822 116 52244	15K	5%	0,5W	
3506		4822 116 52244	15K	5%	0,5W	
3509		4822 116 83933	15K	1%	0,1W	

RESISTORS

3510		4822 116 83933	15K	1%	0,1W	
3511		4822 051 20101	100R	5%	0,1W	
3512		4822 051 20101	100R	5%	0,1W	
3513		4822 117 10834	47K	1%	0,1W	
3514		4822 117 10834	47K	1%	0,1W	
3515		4822 051 20471	470R	5%	0,1W	
3516		4822 051 20471	470R	5%	0,1W	
3517		4822 051 20393	39K	5%	0,1W	
3518		4822 051 20393	39K	5%	0,1W	
3519		4822 051 20822	8K2	5%	0,1W	
3520		4822 051 20822	8K2	5%	0,1W	
3521		4822 051 20393	39K00	5%	0,1W	
3522		4822 051 20393	39K00	5%	0,1W	
3523		4822 051 20822	8K20	5%	0,1W	
3524		4822 051 20822	8K20	5%	0,1W	
3525		4822 051 20393	39K00	5%	0,1W	
3526		4822 051 20393	39K00	5%	0,1W	
3527		4822 051 20822	8K20	5%	0,1W	
3528		4822 051 20822	8K20	5%	0,1W	
3529		4822 051 20471	470R00	5%	0,1W	
3530		4822 051 20471	470R00	5%	0,1W	
3531		4822 051 20393	39K00	5%	0,1W	
3532		4822 051 20393	39K00	5%	0,1W	
3533		4822 051 20822	8K20	5%	0,1W	
3534		4822 051 20822	8K20	5%	0,1W	
3535		4822 116 52251	18K	5%	0,5W	
3536		4822 116 52251	18K	5%	0,5W	
3537		4822 051 20393	39K00	5%	0,1W	
3538		4822 051 20393	39K00	5%	0,1W	
3539		4822 051 20822	8K2	5%	0,1W	
3540		4822 051 20822	8K2	5%	0,1W	
3541		4822 051 20393	39K00	5%	0,1W	
3542		4822 051 20393	39K00	5%	0,1W	
3543		4822 117 12955	2K7 1% 0,1W 0805			
3544		4822 117 12955	2K7 1% 0,1W 0805			
3545		4822 117 10833	10K	1%	0,1W	
3546		4822 117 10833	10K	1%	0,1W	
3549		4822 051 20332	3K3	5%	0,1W	
3550		4822 051 20332	3K3	5%	0,1W	
3551		4822 117 11504	270R	1%	0.1W	
3552		4822 117 11504	270R	1%	0.1W	
3553		4822 117 11504	270R	1%	0.1W	
3554		4822 117 11504	270R	1%	0.1W	
3555		4822 051 20332	3K30	5%	0,1W	
3556		4822 117 11504	270R	1%	0.1W	
3557		4822 117 11504	270R	1%	0.1W	
3560		4822 051 10102	1K00	2%	0,25W	
3561	⚠	4822 052 10478	4R70	5%	0,33W	
3562		4822 051 20471	470R00	5%	0,1W	
3563		4822 051 10102	1K00	2%	0,25W	
3566		4822 116 83876	270R	5%	0,5W	
3567		4822 116 83876	270R	5%	0,5W	
3571		4822 051 20334	330K00	5%	0,1W	
3572		4822 051 20334	330K00	5%	0,1W	
3573		4822 051 10102	1K00	2%	0,25W	
3574		4822 051 10102	1K00	2%	0,25W	
3575		4822 117 11148	56K	1%	0,1W	
3576		4822 117 11148	56K	1%	0,1W	
3577		4822 051 20561	560R00	5%	0,1W	
3578		4822 051 20561	560R00	5%	0,1W	
3579		4822 051 20394	390K00	5%	0,1W	
3580		4822 051 20394	390K00	5%	0,1W	
3581		4822 051 20273	27K00	5%	0,1W	
3582		4822 051 20273	27K00	5%	0,1W	
3583		4822 050 21003	10K00	1%	0,6W	

ELECTRICAL PARTSLIST - MONO2 BOARD

RESISTORS

3584	4822 050 21003	10K00	1% 0,6W
3585	4822 117 11139	1K5	1% 0,1W
3586	4822 117 11139	1K5	1% 0,1W
3587	4822 051 20392	3K9	5% 0,1W
3588	4822 116 52276	3K9	5% 0,5W
3589	4822 117 10833	10K	1% 0,1W
3590	4822 117 10833	10K	1% 0,1W
3591	4822 117 10837	100K	1% 0.1W
3592	4822 117 10837	100K	1% 0.1W
3593	4822 051 20472	4K70	5% 0,1W
3594	4822 051 20472	4K70	5% 0,1W
3595	4822 051 20472	4K70	5% 0,1W
3596	4822 051 20472	4K70	5% 0,1W
3601	4822 051 20101	100R00	5% 0,1W
3602	4822 051 20101	100R00	5% 0,1W
3603	4822 117 10837	100K	1% 0.1W
3604	4822 117 10837	100K	1% 0.1W
3605	4822 117 11383	12K	1% 0,1W
3606	4822 117 11383	12K	1% 0,1W
3607	4822 051 20333	33K00	5% 0,1W
3608	4822 051 20333	33K00	5% 0,1W
3609	4822 051 20121	120R00	5% 0,1W
3610	4822 051 20121	120R00	5% 0,1W
3611	4822 117 10834	47K	1% 0,1W
3612	4822 117 10834	47K	1% 0,1W
3613	4822 051 20471	470R00	5% 0,1W
3614	4822 051 20471	470R00	5% 0,1W
3615	4822 051 20471	470R00	5% 0,1W
3616	4822 051 20471	470R00	5% 0,1W
3618	4822 117 10834	47K	1% 0,1W
3619	4822 117 10834	47K	1% 0,1W
3620	4822 116 52175	100E	5% 0,5W
3621	4822 051 20101	100R00	5% 0,1W
3622	4822 051 20121	120R00	5% 0,1W
3623	4822 051 20121	120R00	5% 0,1W
3627 ⚠	4822 052 10109	10R	5% 0,33W
3629 ⚠	4822 052 10109	10R	5% 0,33W
3630	4822 050 11002	1K00	1% 0,4W
3631	4822 050 11002	1K00	1% 0,4W
3632	4822 050 11002	1K00	1% 0,4W
3633	4822 051 10102	1K00	2% 0,25W
3634	4822 051 10102	1K00	2% 0,25W
3635	4822 051 10102	1K00	2% 0,25W
3636	4822 051 20471	470R	5% 0,1W
3637	4822 051 20471	470R	5% 0,1W
3641	4822 117 10837	100K	1% 0.1W
3642	4822 117 10837	100K	1% 0.1W
3643	4822 117 10837	100K	1% 0.1W
3644	4822 117 10837	100K	1% 0.1W
3645	4822 117 11148	56K	1% 0,1W
3646	4822 117 11148	56K	1% 0,1W
3649	4822 117 10837	100K	1% 0.1W
3650	4822 117 10837	100K	1% 0.1W
3651	4822 117 11148	56K	1% 0,1W
3652	4822 117 11148	56K	1% 0,1W
3655	4822 117 10837	100K	1% 0.1W
3656	4822 117 10837	100K	1% 0.1W
3657	4822 117 11148	56K	1% 0,1W
3658	4822 117 11148	56K	1% 0,1W
3659	4822 117 12955	2K7 1% 0,1W 0805	
3660	4822 117 12955	2K7 1% 0,1W 0805	
3661	4822 051 20562	5K6 5% 0,1W 0805	
3662	4822 051 20562	5K6 5% 0,1W 0805	
3663	4822 117 12955	2K7 1% 0,1W 0805	

RESISTORS

3664	4822 117 12955	2K7 1% 0,1W 0805	
3665	4822 051 20562	5K6 5% 0,1W 0805	
3666	4822 051 20562	5K6 5% 0,1W 0805	
3667	4822 117 12955	2K7 1% 0,1W 0805	
3668	4822 117 12955	2K7 1% 0,1W 0805	
3669	4822 051 20562	5K6 5% 0,1W 0805	
3670	4822 051 20562	5K6 5% 0,1W 0805	
3671	4822 117 10834	47K	1% 0,1W
3672	4822 117 10834	47K	1% 0,1W
3673	4822 117 11449	2K2	1% 0,1W
3674	4822 117 11449	2K2	1% 0,1W
3675	4822 051 20101	100R	5% 0,1W
3676	4822 051 20101	100R	5% 0,1W
3677	4822 117 10834	47K	1% 0,1W
3678	4822 117 10834	47K	1% 0,1W
3679	4822 117 11449	2K2	1% 0,1W
3680	4822 117 11449	2K2	1% 0,1W
3681	4822 051 20101	100R	5% 0,1W
3682	4822 051 20101	100R	5% 0,1W
3683	4822 117 10834	47K	1% 0,1W
3684	4822 117 10834	47K	1% 0,1W
3685	4822 117 11449	2K2	1% 0,1W
3686	4822 117 11449	2K2	1% 0,1W
3687	4822 051 20101	100R	5% 0,1W
3688	4822 051 20101	100R	5% 0,1W
3689	4822 117 11449	2K2	1% 0,1W
3690	4822 117 11449	2K2	1% 0,1W
3691	4822 116 52256	2K2	5% 0,5W
3692	4822 117 11449	2K2	1% 0,1W
3693	4822 117 11449	2K2	1% 0,1W
3694	4822 116 52256	2K2	5% 0,5W
3695	4822 117 13579	220K 1% 0.1W	
3696	4822 117 10833	10K	1% 0,1W
3697	4822 116 52257	22K	5% 0,5W
3698	4822 117 13579	220K 1% 0.1W	
3699	4822 117 10833	10K	1% 0,1W
3700	4822 051 20223	22K	5% 0,1W
3801	4822 117 12521	68R 1% 0,1W	
3802	4822 117 12521	68R 1% 0,1W	
3803	4822 117 12521	68R 1% 0,1W	
3804	4822 117 12521	68R 1% 0,1W	
3805	4822 051 10102	1K	2% 0,25W
3806	4822 051 10102	1K	2% 0,25W
3809	4822 051 20109	10R	5% 0,1W
3810	4822 117 11449	2K2	1% 0,1W
3811	4822 051 20109	10R	5% 0,1W
3812	4822 051 20471	470R	5% 0,1W
3813	4822 051 20121	120R	5% 0,1W
3814	4822 051 20109	10R	5% 0,1W
3815	4822 117 12521	68R 1% 0,1W	
3816	4822 117 12521	68R 1% 0,1W	
3817	4822 117 11504	270R	1% 0.1W
3818	4822 117 11503	220R	1% 0.1W
3819	4822 051 20109	10R	5% 0,1W
3820	4822 053 10101	100R	5% 1W
3821	4822 053 10101	100R	5% 1W
3831	4822 051 20101	100R	5% 0,1W
3832	4822 051 20479	47R	5% 0,1W
3834	4822 051 20101	100R	5% 0,1W
3851	4822 051 20332	3K3	5% 0,1W
3852	4822 051 20223	22K	5% 0,1W
3853	4822 117 11148	56K	1% 0,1W
3854	4822 051 20472	4K70	5% 0,1W
3855	4822 116 83876	270R	5% 0,5W
3856	4822 117 11504	270R	1% 0.1W

ELECTRICAL PARTSLIST - MONO2 BOARD

RESISTORS

3857		4822 117 10837	100K	1%	0.1W
3858		4822 117 10837	100K	1%	0.1W
3859		4822 117 10833	10K	1%	0,1W
3860		4822 117 10833	10K	1%	0,1W
3871		4822 051 20332	3K30	5%	0,1W
3872		4822 051 20332	3K30	5%	0,1W
3873		4822 051 10102	1K00	2%	0,25W
3874		4822 051 10102	1K00	2%	0,25W
3875		4822 051 20332	3K30	5%	0,1W
3877		4822 051 10102	1K00	2%	0,25W
3878		4822 051 10102	1K00	2%	0,25W
3879		4822 051 20332	3K30	5%	0,1W
3880		4822 051 20332	3K30	5%	0,1W
3881		4822 051 10102	1K00	2%	0,25W
3882		4822 051 10102	1K00	2%	0,25W
3883		4822 117 11383	12K	1%	0,1W
3884		4822 117 11383	12K	1%	0,1W
3885		4822 117 11383	12K	1%	0,1W
3886		4822 117 11383	12K	1%	0,1W
3887		4822 117 11383	12K	1%	0,1W
3888		4822 117 11383	12K	1%	0,1W
3889		4822 117 11449	2K2	1%	0,1W
3890		4822 117 11449	2K2	1%	0,1W
3901	⚠	4822 052 10479	47R00	5%	0,33W
3902		4822 117 11148	56K	1%	0,1W
3903		4822 117 10834	47K	1%	0,1W
3904		4822 116 83884	47K	5%	0,5W
3905		4822 050 24708	4R70	1%	0,6W
3906		4822 117 11148	56K	1%	0,1W
3907		4822 116 83961	6K8	5%	
3908		4822 051 20182	1K80	5%	0,1W
3909		4822 116 83961	6K8	5%	
3910		4822 050 24708	4R70	1%	0,6W
3911		4822 117 11148	56K	1%	0,1W
3913		4822 051 20182	1K80	5%	0,1W
3914		4822 117 11148	56K	1%	0,1W
3915	⚠	4822 052 10479	47R00	5%	0,33W
3916	⚠	4822 053 10478	4R70	5%	1W
3917		4822 051 20333	33K00	5%	0,1W
3918		4822 117 11503	220R	1%	0.1W
3919	⚠	4822 053 10478	4R70	5%	1W
3920		4822 117 10837	100K	1%	0.1W
3921		4822 051 20182	1K80	5%	0,1W
3922		4822 051 20182	1K80	5%	0,1W
3925		4822 117 10833	10K	1%	0,1W
3926	⚠	4822 117 11342	0R33	5%	2W
3927	⚠	4822 117 11342	0R33	5%	2W
3928		4822 117 11139	1K5	1%	0,1W
3929		4822 117 11139	1K5	1%	0,1W
3930	⚠	4822 117 11342	0R33	5%	2W
3931	⚠	4822 117 11342	0R33	5%	2W
3932	⚠	4822 117 11342	0R33	5%	2W
3933	⚠	4822 117 11342	0R33	5%	2W
3934		4822 051 10102	1K00	2%	0,25W
3935		4822 051 10102	1K00	2%	0,25W
3936		4822 117 10837	100K	1%	0.1W
3937		4822 117 10833	10K	1%	0,1W
3938		4822 117 11449	2K2	1%	0,1W
3939		4822 117 11449	2K2	1%	0,1W
3940		4822 117 11503	220R	1%	0.1W
3941		4822 117 11503	220R	1%	0.1W
3943		4822 051 20223	22K00	5%	0,1W
3944		4822 117 11503	220R	1%	0.1W
3945		4822 117 11503	220R	1%	0.1W
3946		4822 051 20471	470R00	5%	0,1W

RESISTORS

3947		4822 051 20471	470R00	5%	0,1W
3948		4822 117 11503	220R	1%	0.1W
3949		4822 117 11503	220R	1%	0.1W
3950		4822 051 20182	1K80	5%	0,1W
3951		4822 051 20182	1K80	5%	0,1W
3952		4822 051 20101	100R00	5%	0,1W
3953		4822 051 20101	100R00	5%	0,1W
3954		4822 051 20101	100R00	5%	0,1W
3955		4822 051 20101	100R00	5%	0,1W
4251		4822 051 20008	0R00 JUMP. (0805)		
4252		4822 051 20008	0R00 JUMP. (0805)		
4253		4822 051 20008	0R00 JUMP. (0805)		
4256		4822 051 20008	0R00 JUMP. (0805)		
4258		4822 051 20008	0R00 JUMP. (0805)		
4259		4822 051 20008	0R00 JUMP. (0805)		
4260		4822 051 20008	0R00 JUMP. (0805)		
4283		4822 051 20008	0R00 JUMP. (0805)		
4284		4822 051 20008	0R00 JUMP. (0805)		
4285		4822 051 20008	0R00 JUMP. (0805)		
4287		4822 051 20008	0R00 JUMP. (0805)		
4320		4822 051 20008	0R00 JUMP. (0805)		
4506		4822 051 20008	0R00 JUMP. (0805)		
4513		4822 051 20008	0R00 JUMP. (0805)		
4514		4822 051 20008	0R00 JUMP. (0805)		
4515		4822 051 20008	0R00 JUMP. (0805)		
4516		4822 051 20008	0R00 JUMP. (0805)		
4517		4822 051 20008	0R00 JUMP. (0805)		
4518		4822 051 20008	0R00 JUMP. (0805)		
4519		4822 051 20008	0R00 JUMP. (0805)		
4520		4822 051 20008	0R00 JUMP. (0805)		
4521		4822 051 20008	0R00 JUMP. (0805)		
4522		4822 051 20008	0R00 JUMP. (0805)		
4523		4822 051 20008	0R00 JUMP. (0805)		
4524		4822 051 20008	0R00 JUMP. (0805)		
4526		4822 051 20008	0R00 JUMP. (0805)		
4528		4822 051 20008	0R00 JUMP. (0805)		
4529		4822 051 20008	0R00 JUMP. (0805)		
4530		4822 051 20008	0R00 JUMP. (0805)		
4531		4822 051 20008	0R00 JUMP. (0805)		
4532		4822 051 20008	0R00 JUMP. (0805)		
4533		4822 051 20008	0R00 JUMP. (0805)		
4537		4822 051 20008	0R00 JUMP. (0805)		
4538		4822 051 20008	0R00 JUMP. (0805)		
4539		4822 051 20008	0R00 JUMP. (0805)		
4540		4822 051 20008	0R00 JUMP. (0805)		
4541		4822 051 20008	0R00 JUMP. (0805)		
4542		4822 051 20008	0R00 JUMP. (0805)		
4543		4822 051 20008	0R00 JUMP. (0805)		
4544		4822 051 20008	0R00 JUMP. (0805)		
4545		4822 051 20008	0R00 JUMP. (0805)		
4548		4822 051 20008	0R00 JUMP. (0805)		
4550		4822 051 20008	0R00 JUMP. (0805)		
4551		4822 051 20008	0R00 JUMP. (0805)		
4552		4822 051 20008	0R00 JUMP. (0805)		
4553		4822 051 20008	0R00 JUMP. (0805)		
4555		4822 051 20008	0R00 JUMP. (0805)		
4556		4822 051 20008	0R00 JUMP. (0805)		
4557		4822 051 20008	0R00 JUMP. (0805)		
4558		4822 051 20008	0R00 JUMP. (0805)		
4559		4822 051 20008	0R00 JUMP. (0805)		
4560		4822 051 20008	0R00 JUMP. (0805)		
4564		4822 051 20008	0R00 JUMP. (0805)		
4565		4822 051 20008	0R00 JUMP. (0805)		
4566		4822 051 20008	0R00 JUMP. (0805)		
4642		4822 051 20008	0R00 JUMP. (0805)		

ELECTRICAL PARTSLIST - MONO2 BOARD

RESISTORS

4644	4822 051 20008	0R00 JUMP. (0805)
4651	4822 051 20008	0R00 JUMP. (0805)
4652	4822 051 20008	0R00 JUMP. (0805)
4653	4822 051 20008	0R00 JUMP. (0805)
4832	4822 051 20008	0R00 JUMP. (0805)
4835	4822 051 20008	0R00 JUMP. (0805)
4901	4822 051 20008	0R00 JUMP. (0805)
4902	4822 051 20008	0R00 JUMP. (0805)
4903	4822 051 20008	0R00 JUMP. (0805)
4904	4822 051 20008	0R00 JUMP. (0805)
4905	4822 051 20008	0R00 JUMP. (0805)
4913	4822 051 20008	0R00 JUMP. (0805)
4917	4822 051 20008	0R00 JUMP. (0805)
4918	4822 051 20008	0R00 JUMP. (0805)
4920	4822 051 20008	0R00 JUMP. (0805)
4921	4822 051 20008	0R00 JUMP. (0805)
4922	4822 051 20008	0R00 JUMP. (0805)
4923	4822 051 20008	0R00 JUMP. (0805)
4924	4822 051 20008	0R00 JUMP. (0805)
4925	4822 051 20008	0R00 JUMP. (0805)

FILTERS

5301	4822 157 70599	COIL
5303	4822 157 70599	COIL
5305	4822 157 70599	COIL
5901	4822 157 62255	COIL
5902	4822 157 62255	COIL

DIODES

6251	4822 130 82078	D5SBA20
6253	4822 130 82078	D5SBA20
6255	4822 130 30621	1N4148
6256	4822 130 30621	1N4148
6257	4822 130 31878	1N4003G
6258	4822 130 31878	1N4003G
6259	4822 130 31878	1N4003G
6260	4822 209 33575	L7812CP
6261	4822 130 31878	1N4003G
6262	4822 130 31878	1N4003G
6263	4822 130 31878	1N4003G
6264	4822 130 34173	BZX79-B5V6
6266	4822 130 34281	BZX79-B15
6267	4822 209 31841	L7805CP
6268	4822 130 31878	1N4003G
6270	4822 130 34278	BZX79-B6V8
6271	4822 130 30621	1N4148
6276	4822 130 34173	BZX79-B5V6
6279	4822 130 30621	1N4148
6280	4822 130 61219	BZX79-B10
6281	4822 130 34441	BZX79-B22
6289	4822 130 83757	BAS216
6290	4822 130 83757	BAS216
6301	4822 130 30862	BZX79-B9V1
6302	4822 130 30862	BZX79-B9V1
6303	4822 130 30621	1N4148
6304	4822 130 11411	BZX284-C3V3
6305	4822 130 83757	BAS216
6501	4822 130 30621	1N4148
6601	4822 130 30621	1N4148
6602	4822 130 30621	1N4148
6641	4822 130 83757	BAS216
6642	4822 130 30621	1N4148
6643	4822 130 30621	1N4148
6644	4822 130 30621	1N4148
6645	4822 130 30621	1N4148
6646	4822 130 83757	BAS216

DIODES

6647	4822 130 83757	BAS216
6648	4822 130 83757	BAS216
6649	4822 130 31878	1N4003G
6650	4822 130 61219	BZX79-B10
6801	4822 130 34278	BZX79-B6V8
6802	4822 130 34278	BZX79-B6V8
6803	4822 130 34278	BZX79-B6V8
6804	4822 130 34278	BZX79-B6V8
6805	4822 130 34278	BZX79-B6V8
6806	4822 130 34278	BZX79-B6V8
6807	4822 130 34278	BZX79-B6V8
6808	4822 130 34278	BZX79-B6V8
6809	4822 130 30621	1N4148
6810	4822 130 34233	BZX79-B5V1
6811	4822 130 34382	BZX79-B8V2
6831	4822 130 30621	1N4148
6832	4822 130 30621	1N4148
6901	4822 130 83757	BAS216
6903	4822 130 11047	BZX284-C9V1
6904	4822 130 83757	BAS216
6905	4822 130 11047	BZX284-C9V1

TRANSISTORS

7251	9322 139 22687	BD242BFP
7252	4822 130 60511	BC847B
7253	4822 130 60511	BC847B
7254	4822 130 60511	BC847B
7255	4822 130 60373	BC856B
7256	4822 130 60511	BC847B
7257	4822 130 41246	BC327-25
7258	4822 130 41246	BC327-25
7259	4822 130 60511	BC847B
7260	5322 130 60159	BC846B
7261	4822 130 60373	BC856B
7302	4822 209 17507	STK496-630
7304	5322 130 60159	BC846B
7305	5322 130 60159	BC846B
7306	5322 130 60159	BC846B
7307	5322 130 60159	BC846B
7309	4822 130 60373	BC856B
7310	4822 130 60511	BC847B
7501	4822 209 72748	LC7821
7503	4822 209 83357	NJM4560M
7504	4822 209 83357	NJM4560M
7571	4822 209 70157	NJM4560DD
7572	4822 209 72748	LC7821
7601	4822 209 31378	NJM4556MB
7621	4822 130 42615	BC817-40
7622	4822 130 42615	BC817-40
7641	4822 209 17386	TDA7437T
7642	4822 209 17386	TDA7437T
7643	4822 209 17386	TDA7437T
7644	4822 130 40855	BC337
7651	4822 130 42615	BC817-40
7652	4822 130 42615	BC817-40
7653	4822 130 42615	BC817-40
7654	4822 130 42615	BC817-40
7655	4822 130 42615	BC817-40
7656	4822 130 42615	BC817-40
7657	4822 130 60373	BC856B
7658	4822 130 60373	BC856B
7660	4822 209 83357	NJM4560M
7661	4822 130 42615	BC817-40
7662	4822 130 42615	BC817-40
7801	4822 130 60511	BC847B

ELECTRICAL PARTSLIST - MONO2 BOARD

TRANSISTORS

7802	4822 130 44568	BC557B
7803	4822 209 16886	STV6401
7902	5322 130 60159	BC846B
7903	5322 130 60159	BC846B
7904	5322 130 60159	BC846B
7905	4822 209 17384	STK411-230E
7908	4822 130 60373	BC856B
7909	4822 130 60511	BC847B
7910	9322 139 22687	BD242BFP